



Intertek



Intertek
3117735

CAN/CSA STD. C22.2 No. 195
Conforms to NSF-8
Conforms to UL-763

Continuous Feed Food Processor

177CFP5D, 177CFP7D, 177CFP12D

Please read and keep these instructions. Indoor use only.

06/2024

SAFETY

1. The food processor must be managed by skilled personnel that are familiar with the instructions for use and safety contained in this manual.
2. This machine comes with several safety systems, but users must avoid setting their hands and loose objects near the cutting discs and moving parts.
3. Before any cleaning and maintenance operations, check to make sure the machine is disconnected from the power source.
4. Never use the food processor with frozen food.
5. Never replace or repair parts on your own. Consult an authorized service agency.
6. Operate the processor on a clean, dry, and level surface.
7. If the power cord is damaged, do not use. Contact the distributor for a replacement power cord.


INSTALLATION AND OPERATION

1. Unpack your food processor and place on a clean, dry surface.
2. Inspect the unit for damage, including the power cord. Do not use if any damage is found.
3. Locate the unit near a 110-120V 1 phase outlet. If you are unsure of the electrical connection, contact a qualified electrician before using.
4. It is recommended to clean the equipment prior to first use.

USE OF EQUIPMENT

CONTROLS


1. The green button starts the machine.
2. The red button stops the machine.

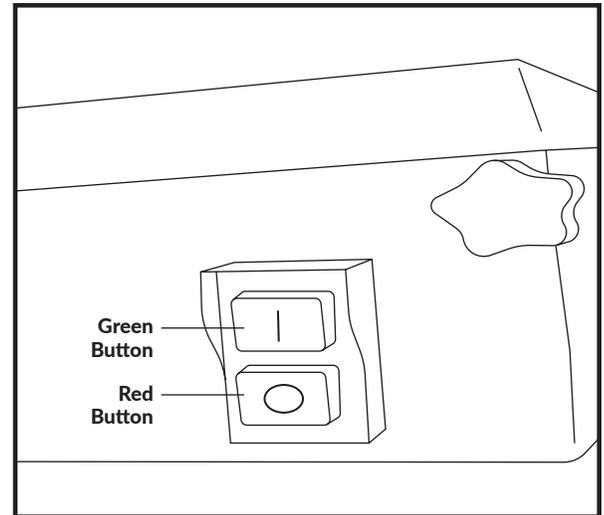


Controls

SETTING THE DISCS ON THE MACHINE

1. Rotate the knob (1) and open the cover.
2. Set the plastic ejecting disc (2), then place the selected slicing disc on top of the plastic disc.
3. Close the cover and reverse the rotation of the knob. Press the start button to automatically hook the discs in the correct position.

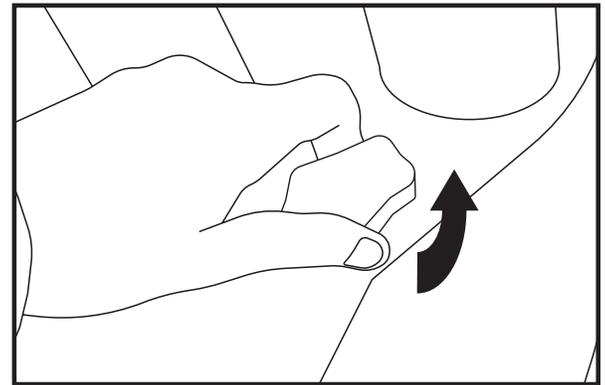

Cover Opening (1)

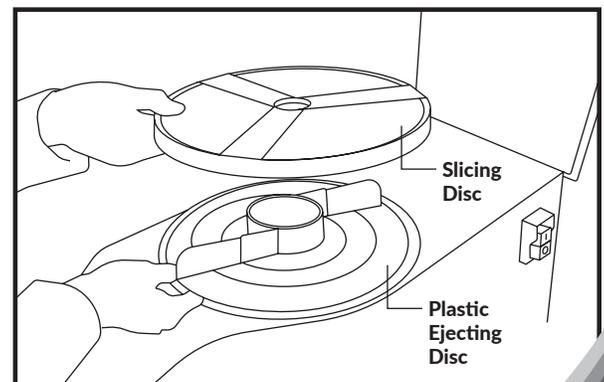


Disc Position (2)

USE OF EQUIPMENT

SETTING AND CUTTING THE FOOD

1. Lift the handle and set the food inside the opening, then close the handle.
2. Press the green start button with your right hand, and with your left hand, lightly move the handle downwards until food has passed through the hopper (3).
3. Lift the handle to add more food. The machine starts automatically when the handle is closed. Repeat these operations as needed.

WARNING: NEVER USE YOUR HAND TO FEED ANYTHING THROUGH THE HOPPER.

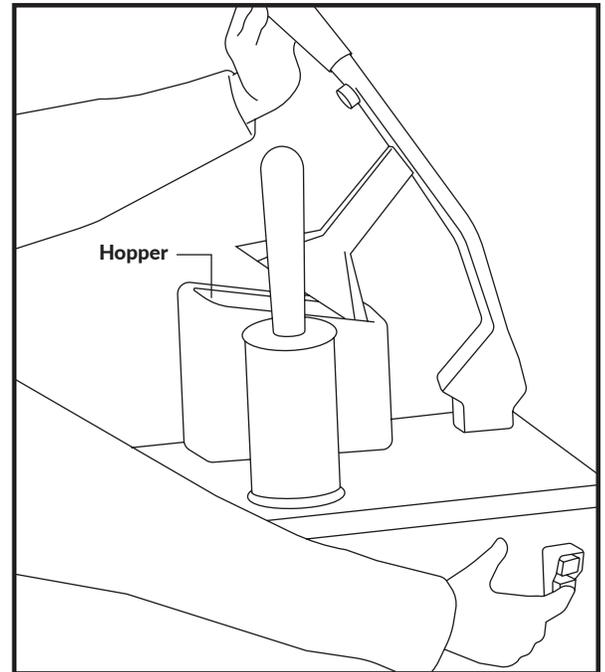

Hopper Use (3)

USE OF EQUIPMENT

RELEASE AND REPLACEMENT OF THE DISCS

1. Turn the handle and lift the cover. (Fig. 1)
2. Turn the disc counterclockwise (Fig. 2) and cover the cutting edge with appropriate material (rubber, fabric, etc).
3. Lift the disc by setting your other hand under the disc. (Fig. 3)

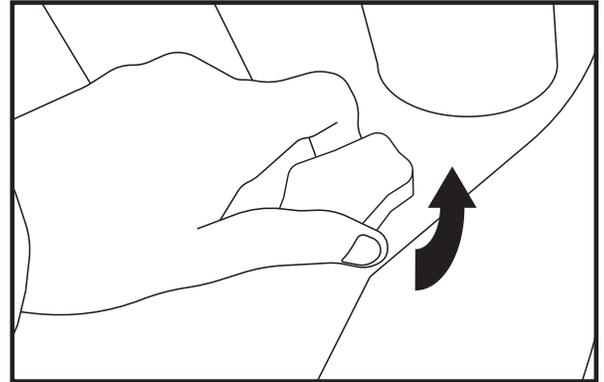


Fig. 1

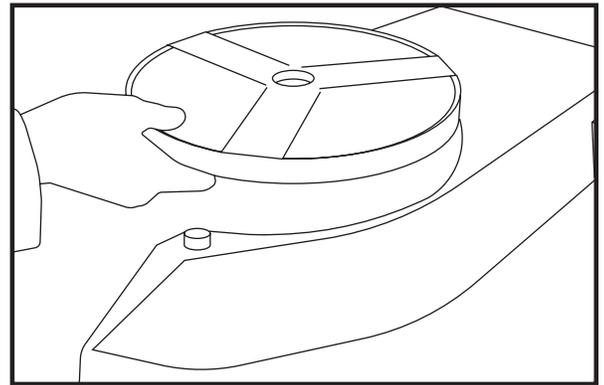


Fig. 2

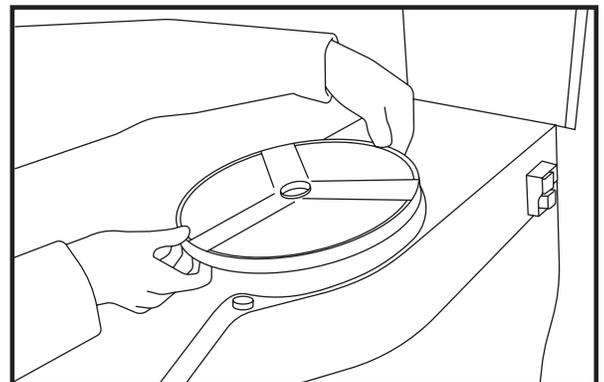


Fig. 3

USE OF EQUIPMENT

INSTALLATION FOR DICING

1. Make sure the injector disc is in place. (Fig. 4)
2. Load the dicing grid. (Fig. 5)
3. Load the slicing disc. (Fig. 5)
4. Close the cover and tighten the lid to secure. (Fig. 6)

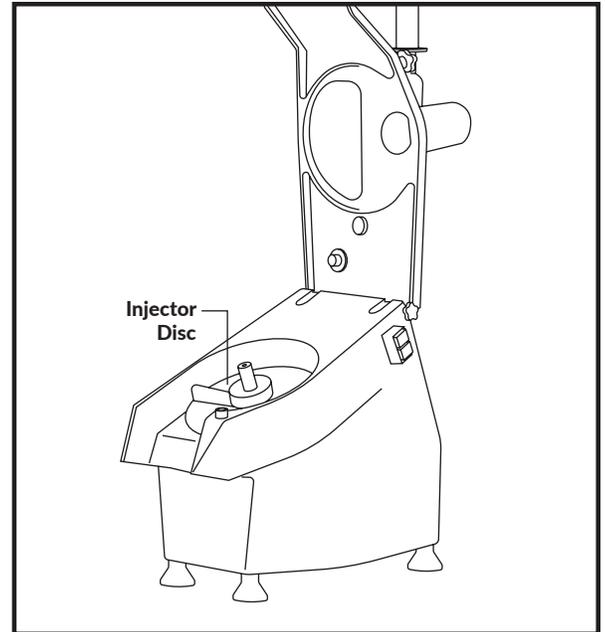


Fig. 4

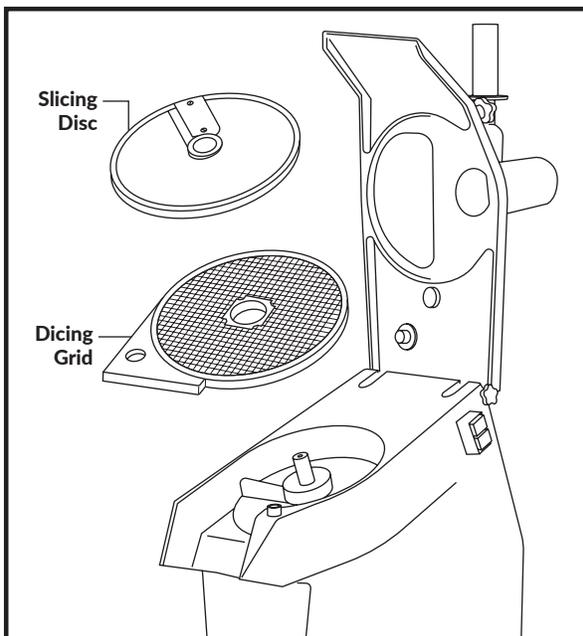


Fig. 5

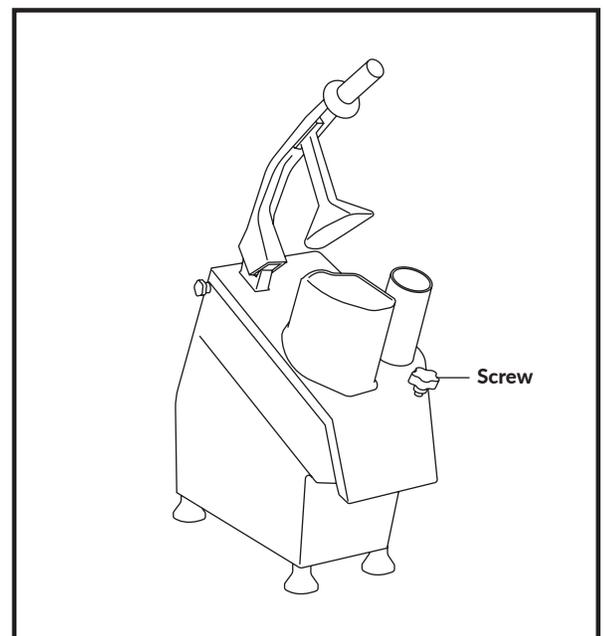


Fig. 6

CLEANING AND MAINTENANCE OPERATON

1. Before carrying out any cleaning or maintenance operations, check to make sure that the main switch is off and the plug disconnected.
2. Use a damp cloth and a non-abrasive detergent to clean the machine and discs.
3. The discs are dishwasher safe. Do not run the base unit in the dishwasher.
4. Never use steel wool or any abrasive chemicals on the discs or machine.

TECHNICAL SPECIFICATIONS

MODEL	177CFP5D	177CFP7D	177CFP12D
INCLUDED DISCS	5	7	12
DIMENSIONS	9" x 22½" x 20"	9" x 22½" x 20"	9" x 22½" x 20"
SHIPPING WEIGHT	57.96 lb.	55.4 lb.	55.4 lb.
POWER	550 Watts	550 Watts	550 Watts
ELECTRICAL CONNECTION	120 V Phase 60 Hz	120 V Phase 60 Hz	120 V Phase 60 Hz
RPM	270	270	270
HP	¾	¾	¾