



USER MANUAL



#181BRGPR14, #181BRGPR13, #181BRGPR12,
#181BRGSL2, #181BRGSL3, #181BRGPBASE

BURGER PRESSES



Please read and comply with the instructions listed on this document. To get the best service life and performance from your machine, clean it thoroughly before and after each use by following the instructions listed below.

INDEX

Safety Instructions	2
Operating Instructions	2
Cleaning & Maintenance	2
Assembly Chart	3
Replacement Parts	4

SAFETY INSTRUCTIONS

The burger press should only be operated by trained individuals. Be sure to read the operation, assembly, and cleaning guides before using.

Caution: This product should only be used to form raw ground meats.

OPERATING INSTRUCTIONS



1. Mix meat well before filling the hopper.
2. Lift handle and fill hopper with ground meat.
3. Align push plate into hopper.
4. Push tray completely into press.
5. Use handle to press down and slowly pull tray out as you press down.
6. Remove patties from tray and repeat.
7. Operators should finish shaping the patties after initial press to enhance presentation.

CLEANING AND MAINTENANCE

1. Disassemble the unit by removing the ring pin with stopper to release the burger tray.
2. Remove the handle assembly and undo the ring pins.
3. Unthread the burger hopper.
4. Unfasten the knobs and remove the top plate assembly.
5. Wash each component in mild detergent or dish soap.
6. Dry all components and reassemble by following the steps provided in the assembly chart.


Caution: This product is NOT dishwasher safe.

ASSEMBLY CHART

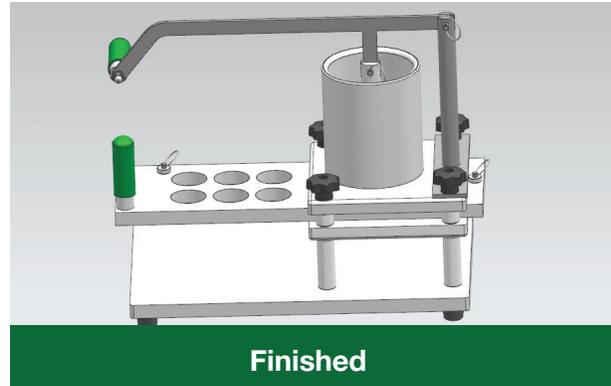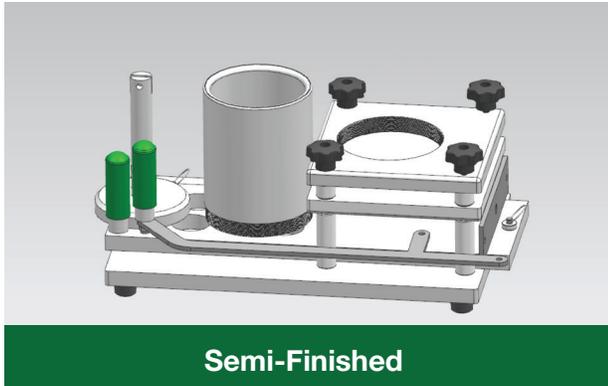


STEP 1:

Unfasten knobs and lift top plate assembly. Ensure bumpers are on each of the 4 threads. Slide burger press tray in between bumpers and then place top plate assembly through threads. Place the ring pin with plastic stopper through the center of the burger press tray. Thread hopper onto top plate assembly. Insert handle stand through threads, then refasten knobs.

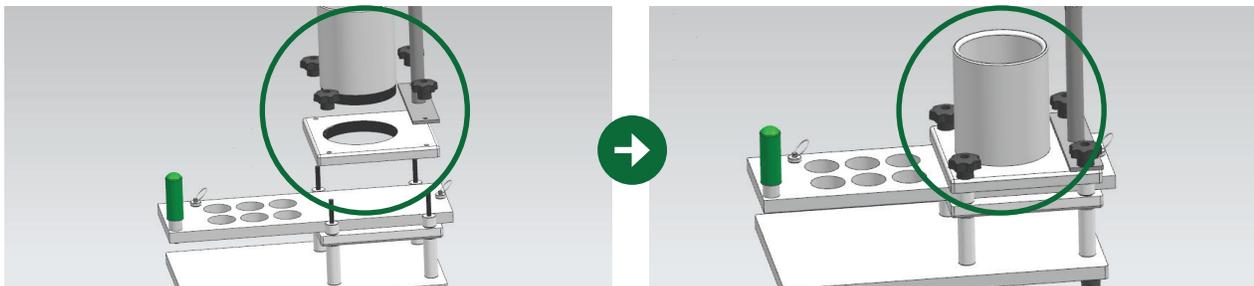


STEP 2:

Fasten green handle to arm using the acorn nut provided. Secure handle assembly to push plate assembly using the ringpins.

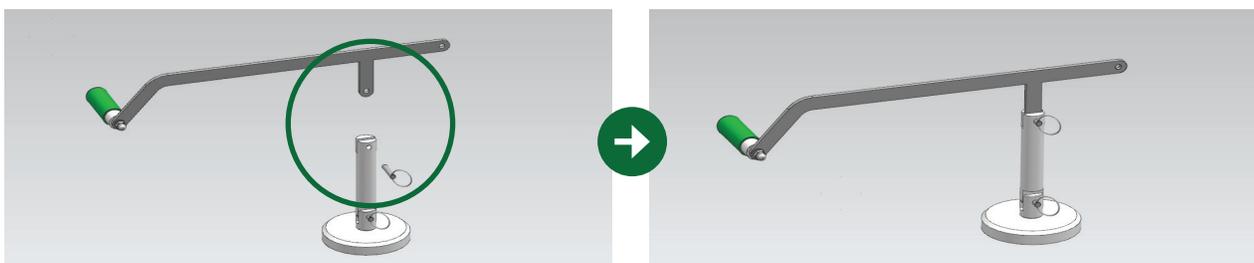

STEP 3:

Insert the push plate into the burger meat reservoir and secure the back arm to the handle stand using a ringpin.

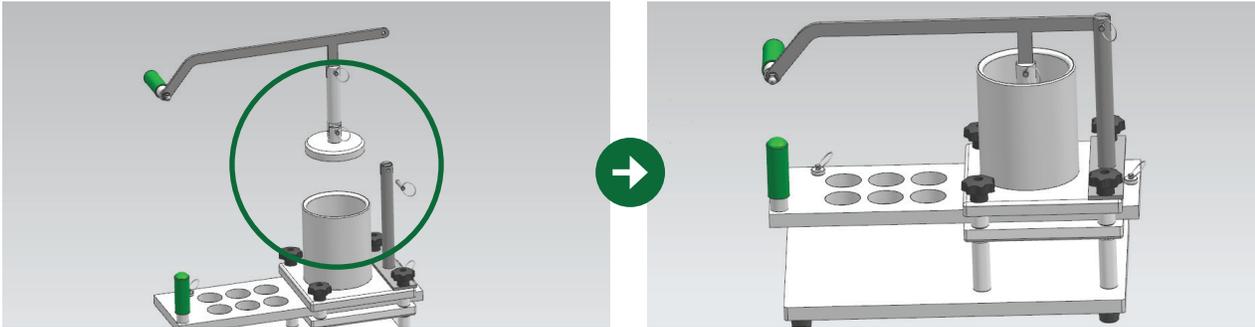

REPLACEMENT PARTS



#181BPTR212
Slider Tray



#181PRTR234
Slider Tray



#181BPTR41
Burger Tray



#181BPTR412
Burger Tray



#181PRTR512
Burger Tray



#181BPBMPER12
1/2" Bumper, 4 pc Set



#181BPBMPER34
3/4" Bumper, 4 pc Set



#181BPBMPER1
1" Bumper, 4 pc Set



#181BPACORN
Acorn Nut



#181BPRINGPIK
**Ring Pin with
Plastic Spacer**



#181BPHDL
Handle



#181BPKNOB
Knob