

Infra-red Lamps IFW 63 Series	FL-2219
Rev. 2 (05/06)	Page 2 of 2

 
INSTALLATION INSTRUCTIONS

for PULL-DOWN INFRA RED MODELS IFW-63 SERIES

HOW TO INSTALL HOOD:


You will need a Phillips head (preferably magnetic) screwdriver with a long neck.

1. Slide the hole in the top of the hood over the socket.
2. Look inside of the hood and line up two (2) hood mounting holes with the holes in the arm assembly.
3. Put the screw provided on the screwdriver tip and screw loosely into one hole and then into the other; then tighten both screws.
4. Screw lamp into the socket.

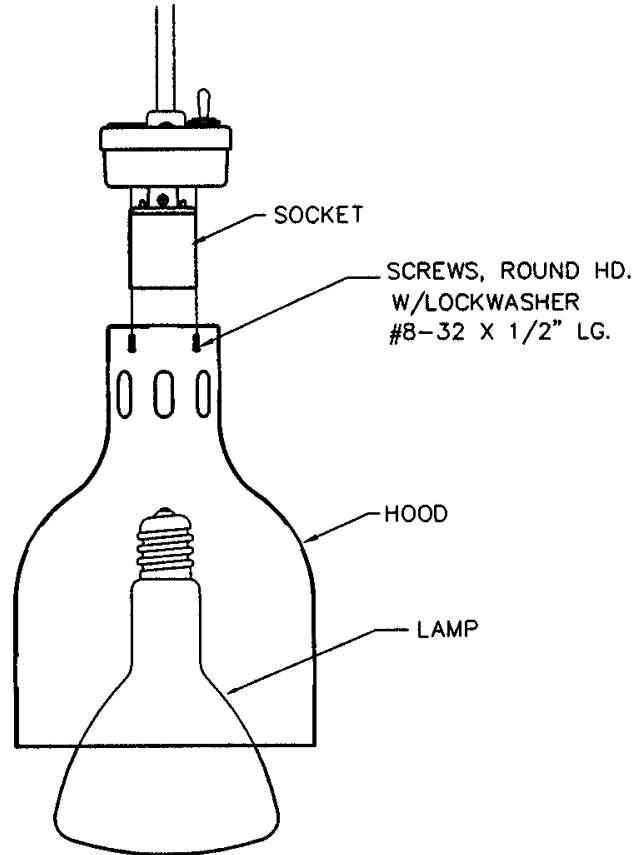


REPLACEMENT PARTS:

DESCRIPTION	CMP No.
Lamp, Red (120V)	0820-001
Lamp, White (120V)	0820-033
Lamp, Red (240V)	0820-014
Socket	0822-037
Switch (120V)	0808-002
Switch (240V)	0808-122
Reel/Pulley Assembly	1287-084
Coil Cord (IFW 63)	0834-006
Coil Cord (IFW 63L)	0834-007

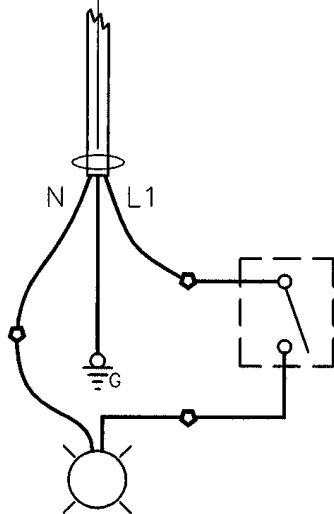 

WIRE FOR 120V

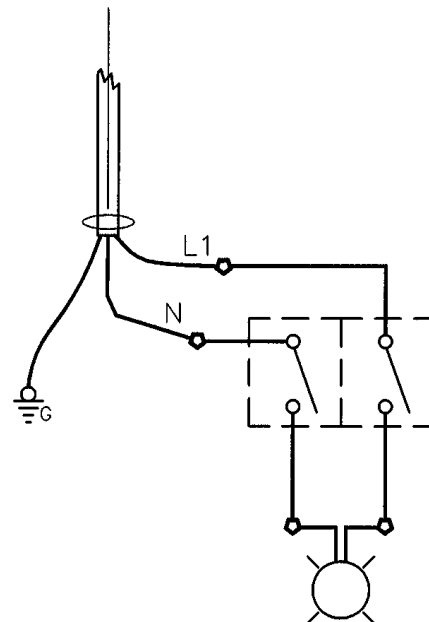 

WIRE FOR 240V