



[www.CarnivalKingSupplies.com](http://www.CarnivalKingSupplies.com)

# USER MANUAL



## COTTON CANDY MACHINE WITH CART

Item # 382CCM21CT

04/2016

# COTTON CANDY MACHINE WITH CART MANUAL



## General Safety Precautions

1. This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Factors such as caution and common sense cannot be built into this product and it is trusted the operator will follow these measures.
2. This machine must never be modified and should only be used for its intended purpose.
3. Always check that the cotton candy machine is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If it is not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
4. Before disconnecting from the power source, be sure that all switches have been turned OFF. To unplug the machine, firmly grasp the plug and remove from the outlet – never pull on the cord itself.
5. Ensure that the power outlet, plug and cord being used are in good, working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even with a properly functioning power cord, keep water away from the cord and avoid letting your power cord run over carpets or heating devices.
6. If missing or broken components are found, leave the machine TURNED OFF. Do not attempt to use it. Contact a qualified service technician to make all repairs.
7. No one under 18 should operate this machine unsupervised.
8. Keep hands, foreign objects, and loose clothing away from the spinning head while in use.
9. Always use the machine in a clean and dry area.

## Assembly & Operating Instructions

1. Unpack box and remove all components from protective wrap.
2. Connect each of the side shelves to the square base of the unit. If looking directly at the side with the Carnival King design (front), the shelf with 3 holes for cones attaches to the left and the solid shelf attaches to the right.
3. Connect the 2 longest leg pieces to the bottom of the base directly under the solid shelf. The legs with wheels will be underneath the shelf with the 3 holes.
4. Connect the other 2 legs to the opposite side and attach each of the cross axles between the legs.
5. Connect the wheels to the shorter legs. Once connected, roll the cart a few times. You may loosen/tighten the wheels to ensure it rolls smoothly and stable.
6. Install the bowl on top of the base. Make sure the bowl is not in contact with the heating head. Place floss bubble shield (optional) on top of the bowl.
7. Connect the power cord to the base and plug it into a grounded outlet.
8. Switch both the “power” and “heat” switches to the ON position. Both switches will light up when turned on.
9. Allow the machine 2-3 minutes to heat up.
10. Add floss sugar directly into the well in the heating head. Do not overfill.
11. Cotton candy will begin to spin around the bowl as the heater head continues to operate. As the cotton candy accumulates, it will build up and come out through the top of the spinner head. You will need to collect the cotton candy as it comes out of the top of the unit.
12. Allow the machine to cool down for 15-20 minutes after an hour of continuous use.



# COTTON CANDY MACHINE WITH CART MANUAL

## Cotton Candy Machine Specs

Item#	382CCM21CT
Overall Dimensions	35" x 20.5" x 35.75"
Bowl Dimensions	21" Diameter
Voltage	110V
Wattage	1050W
Yield	2 Cones/Minute

## Cleaning and Maintenance

1. Turn off all switches and unplug the unit.
2. Allow the heating head to cool before cleaning.
3. The cart and exterior of the bowl can be cleaned with a damp cloth and a sanitizing solution such as Noble Chemical's 'QuikSan' Sanitizer/Disinfectant (147QUIKSAN).
4. Clean the bowl using a damp cloth. To keep the bowl looking new, it is a good idea to use a stainless steel cleaner.
5. Keeping the heating head clean is important for food safety and the life of your machine. It is a good idea to use a tough cleaner like Noble Chemical's 'FormulaD' Decarbonizer/Degreaser (147FORMULAD).



## Parts and Accessories

Part Name	Replacement Part Item #
Wheel Axel	382PCCMAXLE
13" Wheel	382PCCMWHEEL
Carbon Brush	382PCCMBRSH
Floss Heating Head	382PCCMHHEAD
Hi-Limit Thermostat	382PCCMTEMPL
Fuse- 15A, 250V	382PCCMFUSE
Floss Bowl Stabilizer Net and Clips	382CCMNET
Floss Bubble	382FB21

## Also available...

### Floss Bubble Shield (sold separately)

#382FB21

Floss bubbles help protect against airborne debris. Simply set on top of your 21" Carnival King Cotton Candy Machine and begin serving up delicious cones of cotton candy to your customers!

## 90 Day Replacement Warranty (Effective from date of purchase)

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set-up, supervision when required, or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. Work performed by unauthorized personnel or unauthorized service agencies voids this Warranty. This warranty does not apply to any warranty claims made on products sold or used outside of the United States. Residential use voids this warranty.

