

**CARNIVAL  
KING**

**ROYALTY  
SERIES**

# USER MANUAL



**POPCORN POPPER**  
WITH WARMING/HOLDING MERCHANDISER

Item # 382PMW17R

12/2017

CE

[www.CarnivalKingSupplies.com](http://www.CarnivalKingSupplies.com)



# 8 OZ. POPCORN POPPER MANUAL

## General Safety Precautions

1. This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Factors such as caution and common sense cannot be built into this product and it is trusted the operator will follow these measures.
2. This popper must never be modified and should only be used for its intended purpose.
3. Always check that this popper is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If it is not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
4. Before disconnecting from the power source, be sure that all switches have been turned OFF. To unplug the product, firmly grasp the plug and remove from the outlet – never pull on the cord itself.
5. Ensure that the power outlet, plug and cord being used are in good, working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even with a properly functioning power cord, keep water away from the cord and avoid letting your power cord run over carpets or heating devices.
6. If missing or broken components are found, leave the popper TURNED OFF. Do not attempt to use the popper. Contact a qualified service technician to make all repairs.
7. Use in the presence of flammable liquids, gases, dust or other explosive situations should be avoided.
8. ALWAYS use oil when popping kernels; NEVER operate with a dry pot.
9. Never directly touch the pot when in use. Wear oven mitts or other protective gear when dumping popcorn, and be sure that all hot oil and water is contained; contact with skin can cause burns. Surfaces will be extremely hot during and after use, and should be allowed to cool before transporting or putting the unit in storage.
10. It is not recommended the machine be used outdoors.
11. Manual cleaning required – unit and parts are not dishwasher safe. Do not use abrasive cleaning products.



## 8 oz. Popcorn Popper Specs

Item #	382PMW17R
Unit Dimensions	35.5"L x 14.5"W x 30"H
Capacity	8 oz.
Voltage	120V
Wattage	1700W





## 8 OZ. POPCORN POPPER MANUAL

### Operating Instructions - Popper Side

1. Before use, securely station the popper on a dry, level surface that is away from a pool or any water.
  - a. \*\*Before first use, be sure to clean the popper's glass surfaces and wipe down the interior with a clean, damp sponge.
2. Hang the pot on the popper so that its roller bar is on the door side of the machine.
3. Plug the power cord into a properly grounded electrical outlet.
4. Turn the light and heater to the ON setting before adding butter or oil to the pot. It is recommended that the amount not be more than .5 oz. Only use butter or oil with this popper. Liquid sugar or honey can cause damage to the pot, smoking, and even injury.
5. Allow the kettle to preheat for 3-4 minutes, or until you see steam exiting the pot.
6. Open the lid and add kernels into the pre-heated pot. Use provided measuring cup (1 scoop per batch) when dealing with bulk kernels. Close lid. At this point, the lid WILL BE HOT. Use caution.
7. Turn on the stirrer via its switch. Once that step is completed, safely close the main unit's doors. Popcorn will begin popping after 2 to 3 minutes.
8. When popping has finished, turn the stirrer and pot heater to OFF.
9. Gently turn the roller bar to completely empty the contents of the pot.
10. At this point, only the spot light warmer should be switched to ON. This will keep your popcorn warm and dry until it is served.
11. Remove and serve popcorn with the scoops provided. If more butter or seasoning is desired, complete this step outside of the main unit in a separate bowl or container.
12. When finished, be sure to unplug the machine from its power supply.

### Cleaning and Maintenance

\*\* Once you are finished popping, unplug the power supply and allow ample time for the unit to cool. When removing the pot, use caution near the heat lamp bulb. It may still be hot.

\*\* Clean the pot after every 3 or 4 uses, or before it is going to be stored for an extended period of time.

#### FOR THE KETTLE

1. Turn off all switches.
2. Add a kettle cleaner, such as Carnival King Kettle Kleen (382KETTLEKLN) directly into the kettle. Add the desired amount of water as noted on the back of the kettle cleaning solution.
3. Turn on the heater and stirrer and allow the water to boil for 2 minutes.
4. Turn off the heater and stirrer. Dump the water into a pan and discard.
5. Wipe the kettle with a damp cloth.
6. Repeat as necessary.

#### FOR THE CABINET AND WARMING DISPLAY

With all switches off and the unit cooled, use a degreaser such as Noble Chemical's Formula D Decarbonizer and Degreaser (147FORMULAD) and a damp cloth to wipe the interior and exterior. Make sure your popper's glass stays clean and clear by wiping with a window cleaner, such as Noble Chemical's Reflect Glass Cleaner (147REFLECT).

 
### 6 Month Replacement Warranty

(Effective from date of purchase)

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set-up, supervision when required, or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. Work performed by unauthorized personnel or unauthorized service agencies voids this Warranty. This warranty does not apply to any warranty claims made on products sold or used outside of the United States. Residential use voids this warranty.



# 8 OZ. POPCORN POPPER MANUAL

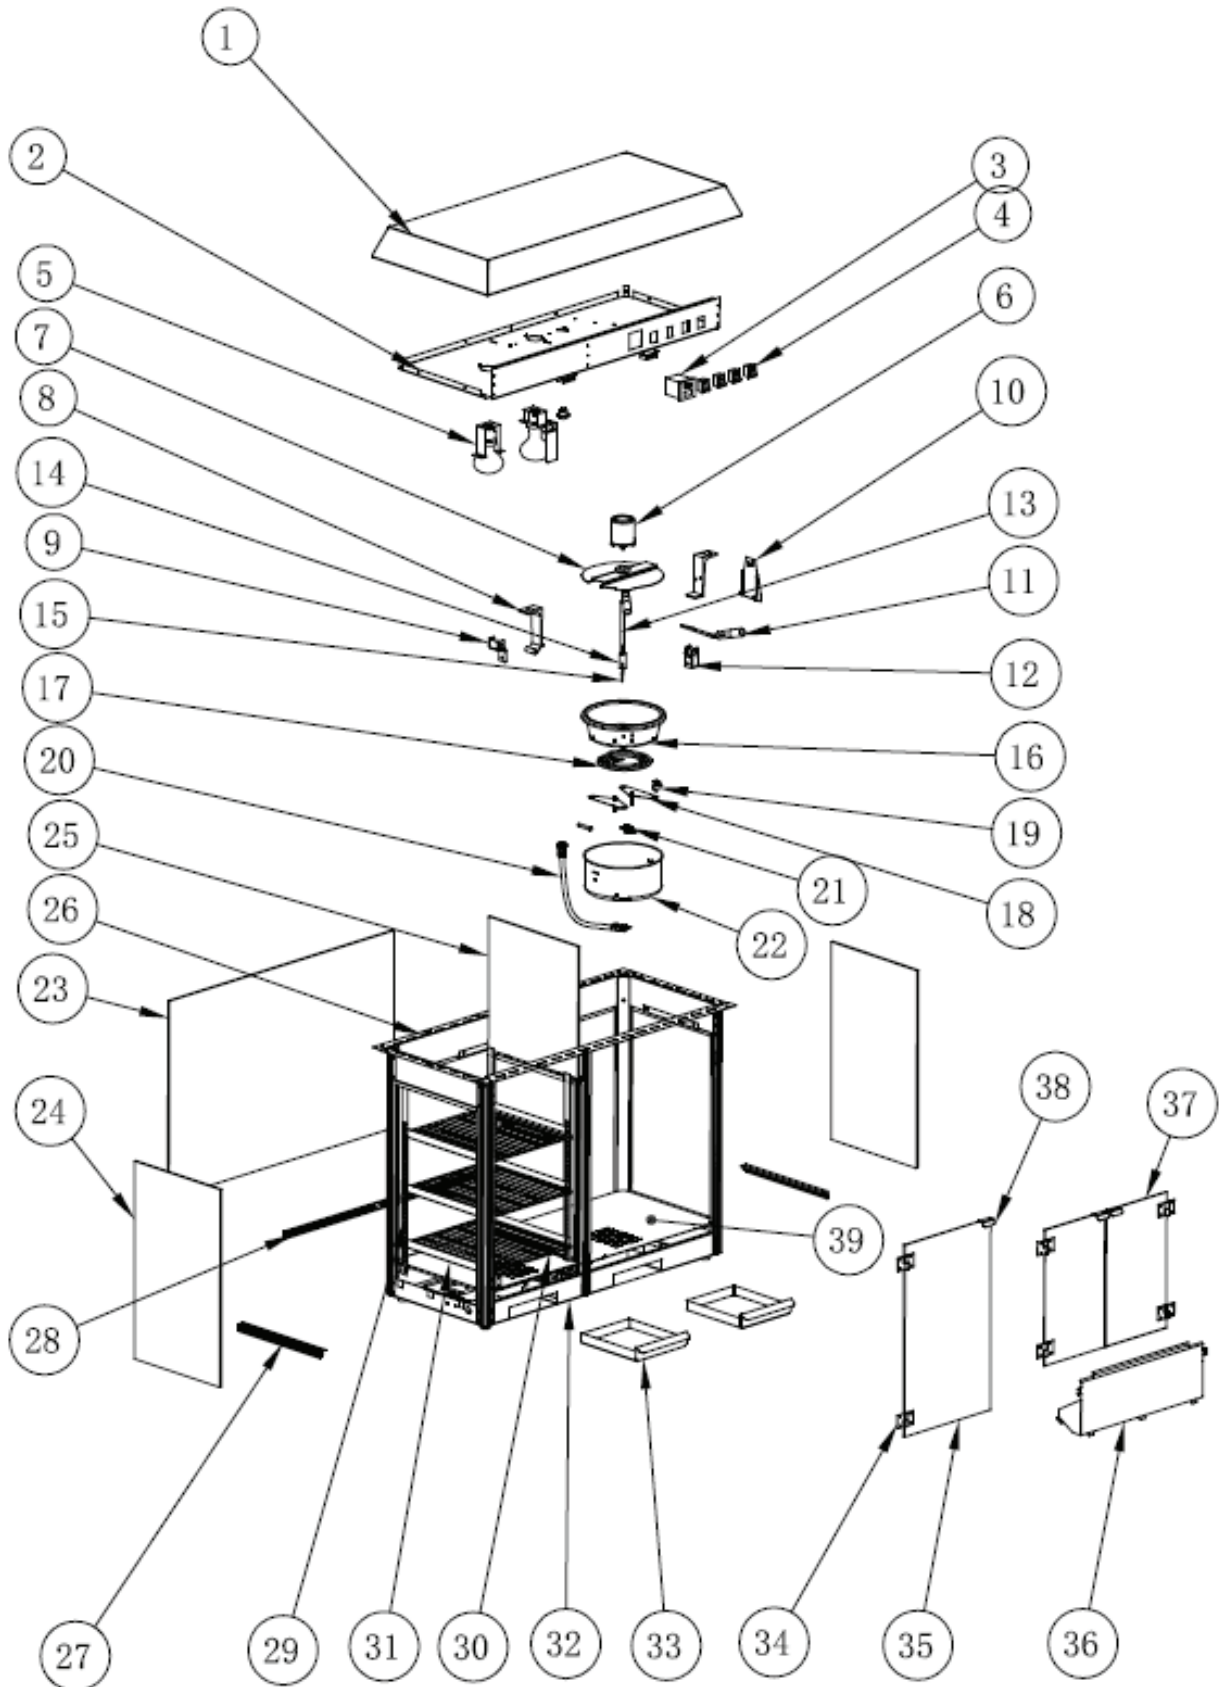



# 8 OZ. POPCORN POPPER MANUAL

## Parts List

No.	Part Name
1	Top Panel
2	Inside Top Panel
3	Hi Limit Thermostat; Warming Deck
4	On/Off Switch
5	Light Bulb
6	Motor; 14W, 110V
7	Kettle Lid
8	Kettle Hanging Bracket
9	Small Bracket
10	Outer Bracket
11	Kettle Handle
12	Hasp
13	Stir Rod Upper Bar
14	Stir Rod Hardware
15	Stir Rod
16	Kettle Interior Assembly
17	Heating Element, Kettle; 1700W, 120V
18	Kettle Heating Element Cover
19	Hi-Limit Thermostat; Kettle
20	Kettle Wiring Harness
21	Hi-Limit Thermostat Screw
22	Outer Kettle Assembly
23	Back Glass Panel
24	Left/Right Glass Panel
25	Middle Heat Barrier Glass Panel
26	Top Panel Frame
27	Left/Right Glass Panel Bottom Frame

No.	Part Name
28	Back Glass Panel Bottom Frame
29	Foot
30	Wire Rack
31	Merchandising Section Warming Deck
32	Warming Deck Front Panel
33	Kernel Drawer
34	Door Hinge
35	Merchandising Section Door
36	Front Swing-Out Panel
37	Popping Section Door
38	Magnetic Door Catch
39	Popping Section Warming Deck

## Replacement Parts

No.	Part Item Number	Name
37	382PM30DOOR	Door Set
6	382PM30MOTOR	Motor; 14W, 110V
15	382PM30STIR	Stir Rod
4	382PM30SWTCH	On/Off Switch
19	382PM30TL	Hi-Limit Thermostat; Kettle
N/A	382PM30WELEM	Heating Element, Warming Tray 250W, 120V
17	382PMW17KELM	Heating Element, Kettle 1700W, 120V
10,11, 16-22	382PMWKETTLE	8 oz. Kettle Assembly
3	382PM30THRM	Hi Limit Thermostat; Warming Deck