



[www.CarnivalKingSupplies.com](http://www.CarnivalKingSupplies.com)

# USER MANUAL



## DOUBLE BELGIAN WAFFLE MAKER

Item # 382WBM26



Intertek



2/2018



# DOUBLE BELGIAN WAFFLE MAKER MANUAL

## General Safety Precautions

1. This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Factors such as caution and common sense cannot be built into this product and it is trusted the operator will follow these measures.
2. This Waffle Maker must never be modified and should only be used for its intended purpose.
3. Always check that this Waffle Maker is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If it is not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
4. Before disconnecting from the power source, be sure that all switches have been turned OFF. To unplug the product, firmly grasp the plug and remove from the outlet – never pull on the cord itself.
5. Ensure that the power outlet, plug and cord being used are in good, working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even with a properly functioning power cord, keep water away from the cord and avoid letting your power cord run over carpets or heating devices.
6. If missing or broken components are found, leave the Waffle Maker TURNED OFF. Do not attempt to use it. Contact a qualified service technician to make all repairs.
7. Use in the presence of flammable liquids, gases, dust or other explosive situations should be avoided.
8. Never directly touch the plates or any part of the unit when in use. Use the cool touch handle to operate the Waffle Maker.
9. It is not recommended the machine be used outdoors.
10. Manual cleaning required - unit and parts are not dishwasher safe. Do not use abrasive cleaning products.

## Belgian Waffle Maker Specs



<b>Item#</b>	382WBM26
<b>Unit Dimensions</b>	19.75"W x 17.25"D x 11.75"H
<b>Temperature</b>	Up to 570°F
<b>Voltage</b>	120V
<b>Wattage</b>	2200W (1100W per side)
<b>Plug Type</b>	(2) NEMA 5-15P

## Features:

1. Belgian Waffle Grids
2. 5 minute timer with audible “ding” when done
3. Power indicator light - shows the unit is on
4. Heating indicator light - shows the unit is getting to select temperature. Light turns off once the Waffle Maker is to temperature.
5. Thermostatic temperature control up to 570°F
6. Rotates 180 degrees for the perfect waffle
7. Ergonomic cool touch handle
8. Removable drip tray



# DOUBLE BELGIAN WAFFLE MAKER MANUAL

## Operating Instructions

Each side can be operated independently. Instructions are per side. If using both simultaneously, separate outlets are needed.

1. Set the Waffle Make on a clean, dry, level surface near a 120V outlet.
2. Plug the cord into the wall.
3. Select desired temperature using the temperature dial control. 400°F is recommended temp.
4. Allow the unit to reach desired temperature. Orange heating light will turn off when temp is reached.
5. The waffle iron grids are non-stick.
6. Add  $\frac{3}{4}$  to 1 cup of waffle mix to the bottom plate of the waffle maker. Pour the batter evenly into the center of the grid, covering the bottom grid with the mix. Carnival King Belgian waffle mix is the perfect choice for light, fluffy and tasty waffles.
7. Grab the handle, close the lid and rotate the unit 180 degrees.
8. Set the timer. If at 400°F, 2.5 minutes is the suggested time.
9. Once the timer “dings” turn the waffle maker back over. Remove the waffle using a pair of tongs, not your hands.
10. Repeat the steps to make multiple waffles.

## Cleaning and Maintenance

1. When you are done making waffles, turn the temperature and timer knobs to 0.
2. Leave the top lid open and allow grids to cool before cleaning.
3. Never take your waffle maker apart for cleaning.
4. Use a damp cloth and non-abrasive chemical to clean the base, grids and drip tray.
5. Grids must be cooled completely before cleaning.
6. If batter is difficult to remove from the grids, pour a small amount of cooking oil onto the batter and wait a few minutes. This will loosen the batter and make it easier to remove.
7. NEVER IMMERSE THE UNIT IN WATER OR OTHER LIQUIDS.

## 6 Month Replacement Warranty

(Effective from date of purchase)

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set-up, supervision when required, or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. Work performed by unauthorized personnel or unauthorized service agencies voids this Warranty. This warranty does not apply to any warranty claims made on products sold or used outside of the United States. Residential use voids this warranty.

Also available...

### Belgian Waffle Mix (sold separately)

#382BELGWAF

Whether serving a hearty breakfast or a sweet meal all throughout the day, treat your patrons to delicious home-style pancakes or waffles with this Carnival King premium pancake and waffle mix.

