

# ZAP<sub>N</sub>TRAP™

## Outdoor Insect Trap/Zapper

605BZ40WOUT

**Input Wattage:** 32W **Total Lamp Watts:** 40W

**Input:** 120V

**Dimensions:** 12¼" D x 18½" H

**Usage:** Indoor/Outdoor

**Replacement Bulb:** #60540WATTOUT

CE

UL  
LISTED



### BEFORE OPERATING ANY EQUIPMENT, READ & FAMILIARIZE YOURSELF WITH THE USE & SAFETY INSTRUCTIONS

ZAP N TRAP would like to thank you for purchasing this equipment. It's important to save these instructions for future reference.

## SAFETY PRECAUTIONS

**CAUTION:** This equipment gets HOT. Make sure all flammable/combustible materials are set away from this equipment.

- Do not operate any appliance with a damaged cord or plug, nor after the unit malfunctions, is dropped, or is damaged in any manner.
- To reduce the risk of injury, close supervision is necessary when the unit is used near children.
- Only use attachments recommended or sold by the manufacturer.
- Do not insert fingers or foreign objects into the unit.
- Do not put this product in water or other liquids. Do not place the insect zapper where it can fall into water.
- Do not abuse the power supply cord or carry product by the cord. Keep cable away from heat, oil, and sharp edges. Never allow the cable to hang in front of the cover.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Always disconnect the product from the power source when not in use, before maintenance, and when cleaning.
- Always unplug before replacing the lamp. Replace bulb with same type and rated wattages.
- Store the unit indoors and out of the reach of children when not in use.

## INSTALLATION GUIDELINES

These precautions should be followed at all times. Failure to follow these precautions could result in injury to yourself and others.

**TO REDUCE THE RISK OF ELECTRIC SHOCK, THE PLUG MUST BE PLUGGED INTO AN APPROPRIATE OUTLET THAT IS PROPERLY INSTALLED AND GROUNDED. CONSULT A QUALIFIED ELECTRICIAN IF IN DOUBT WHETHER PROPER GROUNDING EXISTS.**

1. Remove all packaging and protective film from the insect zapper. Do not rest the unit on a surface without continuing to support it. It will not stand on its own.
2. Select a proper location to hang the unit. The unit must NOT be installed where dangerous concentrations of flammable or explosive substances are likely to be present in the air.
3. Connect the appliance to main power.
4. The unit will be ON once it is connected to an electrical source. There is no separate ON/OFF switch. The bulb will take a few minutes to light up completely. The insect zapper is designed for commercial usage such that the unit could remain ON 24 hours a day.

### PROPER GROUNDING

This item is provided with a three-pronged grounding plug. The outlet to which this plug is connected must be properly grounded. If the receptacle is not the proper grounding type, contact an electrician. DO NOT, under any circumstances, cut or remove the third ground prong from the power cord or use any adapter plug.

# MAINTENANCE

**CAUTION:** Before performing maintenance, unplug the insect zapper.

## REGULAR MAINTENANCE

1. Always disconnect the appliance from the power supply before cleaning.
2. Never use water to clean the unit. Water may damage the electrical components.  
Wipe the safety guard and external casing with a damp cloth.
3. Using a small brush or stick, gently remove any insect remains from the bottom and enclosure.
4. Once the unit is clean, return unit to hanging position and reconnect the power source.

## WARNING

### ELECTRICAL SHOCK HAZARD

Keep water and other liquids from entering the inside of the unit. Liquid inside the unit could cause an electrical shock.

Do not spray with water or cleaning products. Liquid could contact the electrical components and cause a short circuit or an electrical shock. Do not use unit if power cord is damaged or has been modified.

## REPLACING THE BULB

1. Unplug and remove entire unit from hanging position.
2. Turn the unit upside down. Do not rest the unit on a surface without continuing to support it.  
It will not stand on it's own.
3. Take off cover.
4. Carefully remove the old bulb, using caution as it may still be hot.
5. Install the replacement bulb (#60540WATTOUT) and make sure it is properly seated in the socket.
6. Make sure the cover is closed securely.
7. Place the unit back into the hanging position.



**All Zap N Trap Insect Trap/Zappers are backed by a two (2) year replacement warranty.**

## TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE(S)	CORRECTIVE ACTION(S)
The unit is not working	Power Supply	Check power supply. Make sure the unit is plugged into working outlet.
	Bulb has expired, is faulty, or has not been fitted correctly	Check bulb to make sure it is seated properly. Replace bulb if necessary.
	Plug and/or cable are damaged	Replace the product
	Bottom cover not screwed on	Secure bottom enclosure

# ZAP<sub>N</sub>TRAP™

## Outdoor Insect Trap/Zapper

605BZ150WOUT

**Input Wattage:** 120W **Total Lamp Watts:** 150W

**Input:** 120V

**Dimensions:** 12¼" D x 28¼" H

**Usage:** Indoor/Outdoor

**Replacement Bulbs:** #60550WATTOUT



### BEFORE OPERATING ANY EQUIPMENT, READ & FAMILIARIZE YOURSELF WITH THE USE & SAFETY INSTRUCTIONS

ZAP N TRAP would like to thank you for purchasing this equipment. It's important to save these instructions for future reference.

## SAFETY PRECAUTIONS

**CAUTION:** This equipment gets HOT. Make sure all flammable/combustible materials are set away from this equipment.

- Do not operate any appliance with a damaged cord or plug, nor after the unit malfunctions, is dropped, or is damaged in any manner.
- To reduce the risk of injury, close supervision is necessary when the unit is used near children.
- Only use attachments recommended or sold by the manufacturer.
- Do not insert fingers or foreign objects into the unit.
- Do not put this product in water or other liquids. Do not place the insect zapper where it can fall into water.
- Do not abuse the power supply cord or carry product by the cord. Keep cable away from heat, oil, and sharp edges. Never allow the cable to hang in front of the cover.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Always disconnect the product from the power source when not in use, before maintenance, and when cleaning.
- Always unplug before replacing the lamp. Replace bulb with same type and rated wattages.
- Store the unit indoors and out of the reach of children when not in use.

## INSTALLATION GUIDELINES

These precautions should be followed at all times. Failure to follow these precautions could result in injury to yourself and others.

**TO REDUCE THE RISK OF ELECTRIC SHOCK, THE PLUG MUST BE PLUGGED INTO AN APPROPRIATE OUTLET THAT IS PROPERLY INSTALLED AND GROUNDED. CONSULT A QUALIFIED ELECTRICIAN IF IN DOUBT WHETHER PROPER GROUNDING EXISTS.**

1. Remove all packaging and protective film from the insect zapper. Do not rest the unit on a surface without continuing to support it. It will not stand on its own.
2. Select a proper location to hang the unit. The unit must NOT be installed where dangerous concentrations of flammable or explosive substances are likely to be present in the air.
3. Connect the appliance to main power.
4. The unit will be ON once it is connected to an electrical source. There is no separate ON/OFF switch. The bulb will take a few minutes to light up completely. The insect zapper is designed for commercial usage such that the unit could remain ON 24 hours a day.

### PROPER GROUNDING

This item is provided with a three-pronged grounding plug. The outlet to which this plug is connected must be properly grounded. If the receptacle is not the proper grounding type, contact an electrician. DO NOT, under any circumstances, cut or remove the third ground prong from the power cord or use any adapter plug.

# MAINTENANCE

**CAUTION:** Before performing maintenance, unplug the insect zapper.

## REGULAR MAINTENANCE

1. Always disconnect the appliance from the power supply before cleaning.
2. Never use water to clean the unit. Water may damage the electrical components.  
Wipe the safety guard and external casing with a damp cloth.
3. Using a small brush or stick, gently remove any insect remains from the bottom and enclosure.
4. Once the unit is clean, return unit to hanging position and reconnect the power source.

## WARNING

### ELECTRICAL SHOCK HAZARD

Keep water and other liquids from entering the inside of the unit. Liquid inside the unit could cause an electrical shock.

Do not spray with water or cleaning products. Liquid could contact the electrical components and cause a short circuit or an electrical shock. Do not use unit if power cord is damaged or has been modified.

## REPLACING THE BULBS

1. Unplug and remove entire unit from hanging position.
2. Turn the unit upside down. Do not rest the unit on a surface without continuing to support it.  
It will not stand on it's own.
3. Take off cover.
4. Carefully remove the old bulbs, using caution as they may still be hot.
5. Install the replacement bulb (#60550WATTOUT) and make sure it is properly seated in the socket.
6. Make sure the cover is closed securely.
7. Place the unit back into the hanging position.



**All Zap N Trap Insect Trap/Zappers are backed by a two (2) year replacement warranty.**

## TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE(S)	CORRECTIVE ACTION(S)
The unit is not working	Power Supply	Check power supply. Make sure the unit is plugged into working outlet.
	Bulb has expired, is faulty, or has not been fitted correctly	Check bulb to make sure it is seated properly. Replace bulb if necessary.
	Plug and/or cable are damaged	Replace the product
	Bottom cover not screwed on	Secure bottom enclosure