
 
 
 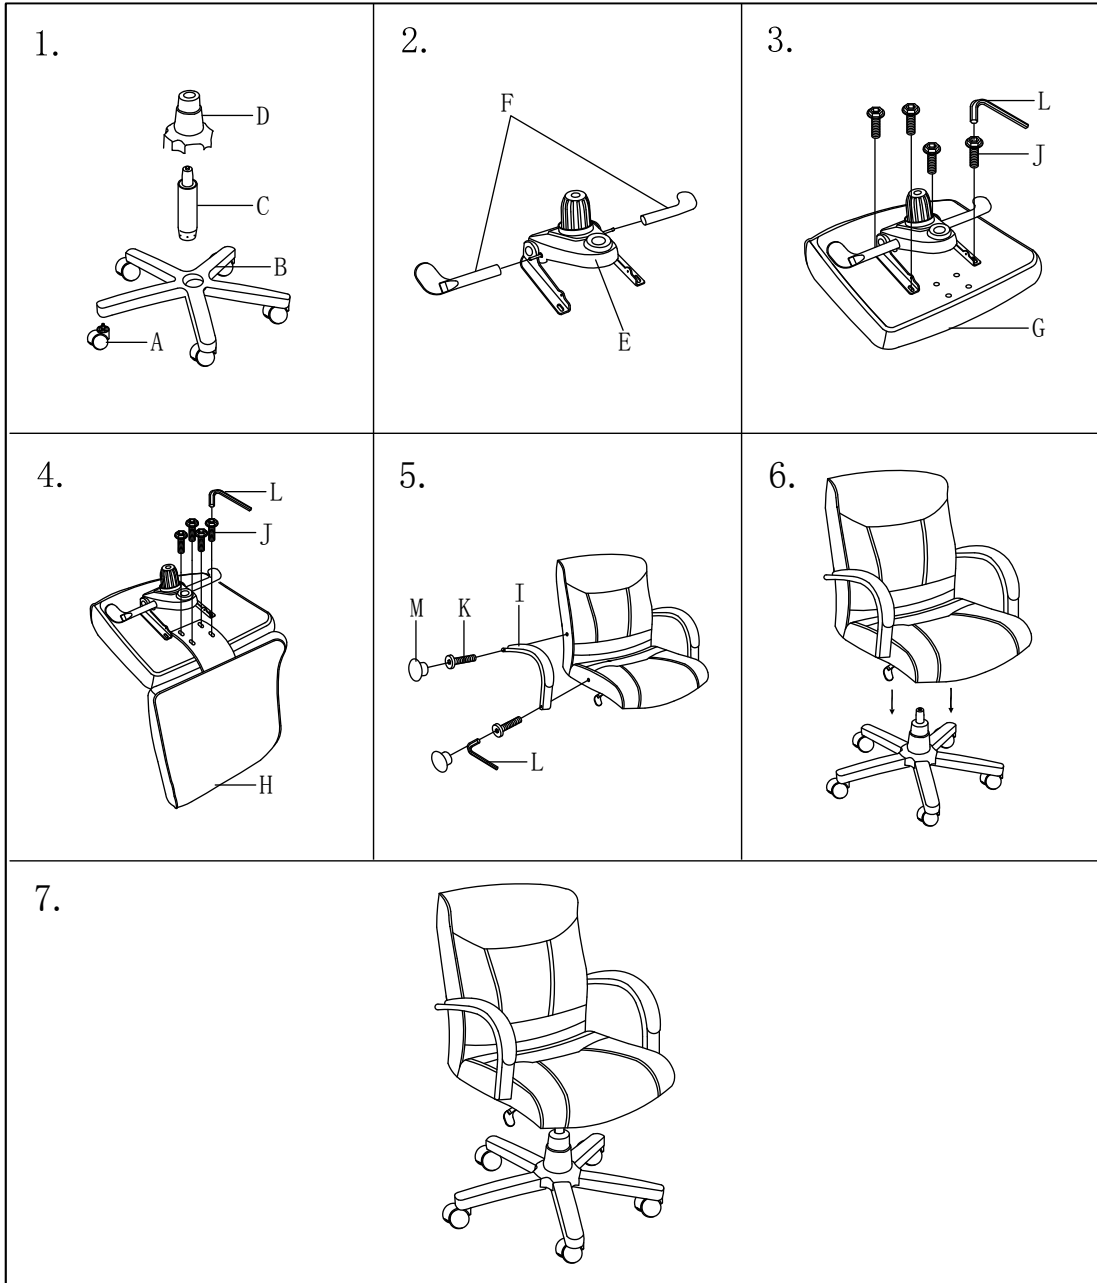






 

 





# ASSEMBLY INSTRUCTIONS



<p>A.</p>  <p>5 PCS</p>	<p>F.</p>  <p>1 PAIR</p>	<p>K.</p>  <p>4 PCS</p>
<p>B.</p>  <p>1 PC</p>	<p>G.</p>  <p>1 PC</p>	<p>L.</p>  <p>1 PC</p>
<p>C.</p>  <p>1 PC</p>	<p>H.</p>  <p>1 PC</p>	<p>M.</p>  <p>4 PCS</p>
<p>D.</p>  <p>1 PC</p>	<p>I.</p>  <p>1 PAIR</p>	
<p>E.</p>  <p>1 PC</p>	<p>J.</p>  <p>8 PCS</p>	

Model: ALEMA41LS10M/ALEMA42LS10M  
 Manufactured for/ Hecho para/ Fabriqué pour Alera®/ USSCo,  
 1 Parkway North, Suite 100, Deerfield, IL 60015 ©2009 USSCo  
 Made in/ Hecho en/ Fabriqué en China  
 Product support and parts: 1-800-733-4000  
 Ayuda del producto y partes / Support technique et pieces




# OPERATING INSTRUCTIONS

Model: ALE-MA41LS10M and ALE-MA42LS10M


## Seat Height

To raise the seat height, stand up from the chair while lifting the lever, "A," under the right side of the seat. To lower the seat height, lift the lever, "A," while sitting in the chair.

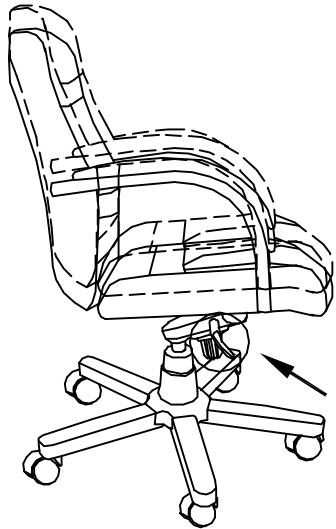

## Tilt Lock

Lever "A," under the left side of the seat. Pull lever up and lean back to recline to desired position. Push lever down to lock the tilt angle.

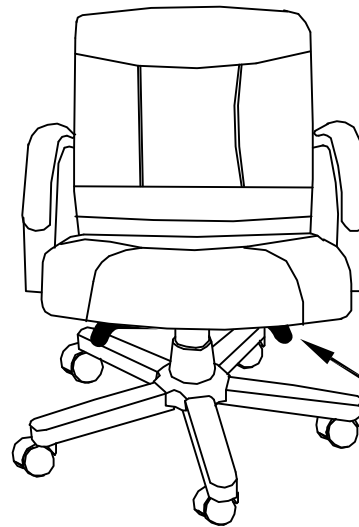

## Tilt Tension

Knob underneath seat adjusts ease with which chair reclines to the different weights and strengths of different users. To increase tension turn knob to the right. To release tension (loosen), turn knob to the left.

