



ASSEMBLY INSTRUCTIONS

| | | | |
|--|---|-----------------------|------------------------|
| <p>1.</p> <p>Attach left and right wood frames (A & B) to seat cushion (D) by inserting 4 screws (E). Only tighten screws enough to make them stay in position.</p> | <p>2.</p> <p>Attach back cushion (C) to the frames (A & B) by inserting 4 screws (E). Adjust chair until stable, then tighten all screws.</p> | <p>A.</p> <p>1 PC</p> | <p>E.</p> <p>8 PCS</p> |
| <p>3.</p> <p>Adjust leg glides by turning to level.</p> | <p>4.</p> <p>Check the chair to make sure that the chair is steady and stable. If chair is not stable, loosen all screws, reposition chair until stable and tighten all screws. Make sure that screws are tight and firmly in place.</p> | <p>B.</p> <p>1 PC</p> | <p>F.</p> <p>8 PCS</p> |
| | | <p>C.</p> <p>1 PC</p> | <p>G.</p> <p>1 PC</p> |
| | | <p>D.</p> <p>1 PC</p> | |

WARNINGS

1. This product should be used by only one person at a time
2. Do not use chair as a stepladder
3. Use this chair for its intended purpose only.

Model: ALE-RL4319C/ALE-RL4319M/ALE-RL4351M/ALE-RL4319E
 Manufactured for/ Hecho para/ Fabriqué pour Alera®/ Essendant Co.,
 One Parkway North, Deerfield, IL 60015 © 2015 Essendant Co.
 Made in/ Hecho en/ Fabriqué en China
 Product support and parts: 1-800-733-4000
 Ayuda del producto y partes / Support technique et pieces