



178UDD2HC

Beer Dispensers

Base Models:

#178UDD1HC	#178UDD3HCS	#178UDD60HC	#178UDD2CTS	#178UDD2CTS
#178UDD1HCS	#178UDD4HC	#178UDD60HCS	#178UDD3CT	#178UDD72HC
#178UDD2HC	#178UDD4HCS	#178UDD36HC	#178UDD3CTS	#178UDD72HCS
#178UDD2HCS	#178UDD48HC	#178UDD36HCS	#178UDD4CT	#178UDD378
#178UDD3HC	#178UDD48HCS	#178UDD2CT	#178UDD4CTS	#178UDD378S

(Variations listed on page 3)

Note:

Please read the manual thoroughly prior to equipment setup, operation, and maintenance.

Table of Contents

Model Variations.....	3
Warnings.....	4
Installation and Operation	5
Cabinet Location Guidelines.....	6
Electrical.....	7
Startup.....	8
Adjusting the Temperature.....	9
Temperature, Pressure, and Tapping.....	10
Storage and Handling.....	11
Knockout CO ₂ Installation.....	11
Cleaning Bar System.....	12
Changing CO ₂ Cylinder.....	13
Pressure Adjustment on CO ₂ Regulator	13
Installing Gas Distributor.....	14
Safety / Warning	15
Operation / Maintenance	15
Stainless Steel Care & Instructions.....	17
Troubleshooting	18
Draft Beer Troubleshooting.....	19

Please Read Manual Before Using Equipment and Keep for Future Use.


NOTICE – USE THIS APPLIANCE FOR ITS INTENDED PURPOSES AS DESCRIBED IN THIS USER MANUAL. A PROPERLY MAINTAINED UNIT WILL GIVE YOU MANY YEARS OF TROUBLE-FREE SERVICE.



Intertek
3029079



Intertek
3029079

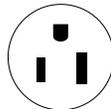

NEMA
5-15P

CONFORMS TO NSF/ANSI STD. 7 & STD. 18
 CONFORMS TO CAN/CSA-C22.2 NO. 120
 CONFORMS TO UL STD. 471

Model Variations

Base Model	Optional Models
178UDD1HC	178UDD12, 178UDD13, 178UDD14
178UDD2HC	178UDD23, 178UDD24
178UDD3HC	178UDD36, 178UDD38
178UDD4HC	178UDD46, 178UDD48
178UDD36HC	178UDD363, 178UDD364
178UDD48HC	178UDD483, 178UDD484
178UDD60HC	178UDD606, 178UDD608
178UDD72HC	178UDD726, 178UDD728
178UDD378	178UDD3786, 178UDD3788
178UDD2CT	178UDD2CT3, 178UDD2CT4
178UDD3CT	178UDD3CT6, 178UDD3CT8
178UDD4CT	178UDD4CT6, 178UDD4CT8

Base Model	Optional Models
178UDD1HCS	178UDD1S2, 178UDD1S3, 178UDD1S4
178UDD2HCS	178UDD2S3, 178UDD2S4
178UDD3HCS	178UDD3S6, 178UDD3S8
178UDD4HCS	178UDD4S6, 178UDD4S8
178UDD36HCS	178UDD36S3, 178UDD36S4
178UDD48HCS	178UDD48S3, 178UDD48S4
178UDD60HCS	178UDD60S6, 178UDD60S8
178UDD72HCS	178UDD72S6, 178UDD72S8
178UDD378S	178UDD378S6, 178UDD378S8
178UDD2CTS	178UDD2CTS3, 178UDD2CTS4
178UDD3CTS	178UDD3CTS6, 178UDD3CTS8
178UDD4CTS	178UDD4CTS6, 178UDD4CTS8

Warnings

DANGER – RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. TO BE REPAIRED ONLY BY TRAINED SERVICE PERSONNEL. DO NOT PUNCTURE REFRIGERANT TUBING.

PELIGRO – RIESGO DE INCENDIO O EXPLOSION. REFRIGERANTE INFLAMABLE UTILIZADO. PARA SER REPARADO SOLAMENTE POR PERSONAL DE SERVICIO CALIFICADO. NO PINCHAR LA TUBERÍA REFRIGERANTE.

DANGER – RISQUE DE FEU OU D'EXPLOSION. LE FRIGORIGÈNE EST INFLAMMABLE. CONFIER LES RÉPARATIONS À UN TECHNICIEN SPÉCIALISÉ. NE PAS PERFORER LA TUBULURE CONTENANT LE FRIGORIGÈNE.

CAUTION – RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. CONSULT REPAIR MANUAL/ OWNER'S GUIDE BEFORE ATTEMPTING TO SERVICE THIS PRODUCT. ALL SAFETY PRECAUTIONS MUST BE FOLLOWED.

ATENCIÓN – RIESGO DE INCENDIO O EXPLOSIÓN. REFRIGERANTE INFLAMABLE UTILIZADO. CONSULTE EL MANUAL DE REPARACIÓN / GUÍA DEL PROPIETARIO ANTES DE INTENTAR DAR SERVICIO A ESTE PRODUCTO. DEBEN CUMPLIR CON TODAS LAS PRECAUCIONES DE SEGURIDAD.

ATTENTION – RISQUE DE FEU OU D'EXPLOSION. LE FRIGORIGÈNE EST INFLAMMABLE. CONSULTER LE MANUEL DU PROPRIÉTAIRE/GUIDE DE RÉPARATION AVANT DE TENTER UNE RÉPARATION. TOUTES LES MESURES DE SÉCURITÉ DOIVENT ÊTRE RESPECTÉES.

CAUTION – RISK OF FIRE OR EXPLOSION DUE TO PUNCTURE OF REFRIGERANT TUBING; FOLLOW HANDLING INSTRUCTIONS CAREFULLY. FLAMMABLE REFRIGERANT USED.

ATENCIÓN – RIESGO DE INCENDIO O EXPLOSIÓN DEBIDO A LA PERFORACION DE LA TUBERÍA REFRIGERANTE; SIGA LAS INSTRUCCIONES DE MANIPULACIÓN CON CUIDADO. REFRIGERANTE INFLAMABLE UTILIZADO.

ATTENTION – RISQUE DE FEU OU D'EXPLOSION SI LA TUBULURE CONTENANT LE FRIGORIGÈNE EST PERFORÉE; SUIVRE LES INSTRUCTIONS DE MANUTENTION AVEC SOIN. LE FRIGORIGÈNE EST INFLAMMABLE.

CAUTION – RISK OF FIRE OR EXPLOSION DUE TO FLAMMABLE REFRIGERANT USED. FOLLOW HANDLING INSTRUCTIONS CAREFULLY IN COMPLIANCE WITH LOCAL GOVERNMENT REGULATIONS.

ATENCIÓN – RIESGO DE INCENDIO O EXPLOSIÓN DEBIDO A REFRIGERANTE INFLAMABLE UTILIZADO. SIGA LAS INSTRUCCIONES DE MANIPULACIÓN CON CUIDADO CONFORME A LAS REGLAS DE LA MUNICIPALIDAD.

ATTENTION – RISQUE DE FEU OU D'EXPLOSION SI LE FRIGORIGÈNE EST INFLAMMABLE. SUIVRE LES INSTRUCTIONS DE MANUTENTION AVEC SOIN CONFORMÉMENT AUX RÈGLEMENTATION GOUVERNEMENTALE LOCAUX.

Installation and Operation

This unit is intended for use in a temperature-controlled environment less than 75 degrees Fahrenheit and 60% relative humidity.

Uncrating

If the unit has recently been transported on its side, please let the unit stand upright for a minimum of 24 hours before plugging it in.

1. Remove the outer packaging. All of the packaging (including cardboard, bubbles, and plastic wrap) should be removed from the unit.
2. Move the unit as close to the final location as possible before removing the wooden pallet.
3. Use a screwdriver to remove the screws from the L-bracket connecting the unit to the wooden pallet.
4. Remove pallet by unscrewing all base rail anchor brackets. Place pallet to the side.
5. Carefully place the cabinet upright.



CAUTION – When lifting unit, do not use the countertop as a lifting point.

IMPORTANT – Please read below before installation:

- Make sure that the unit has reached the desired temperature before loading the unit with products. This unit is meant for keeping cold products cold, not chilling warm products.
- Make sure that there is proper ventilation around the unit in the area where it will operate.
- Make sure all accessories are installed (i.e., shelves, shelf clips, casters) before plugging the unit in.
- Do not attempt to remove or repair any component of the unit. Consult an authorized service technician for servicing/repair.
- Do not sit/stand inside the unit.
- Please read through the manual in its entirety.
- This unit is designed to perform in a temperature-controlled environment at 60% relative humidity. The unit should be located away from doors, air ducts, and fans that could disrupt airflow and negatively impact performance.
- This unit is designed to dispense beers only. Using this unit for other beverages such as cider, wine, and coffee may damage internal parts and have adverse effects on the product being dispensed. Malfunction due to using this unit for beverages other than beer is not covered under warranty.


Cabinet Location Guidelines

- Install the unit on strong and leveled surfaces.
 - If the surface is uneven, the unit may be noisy.
 - The unit may malfunction if the surface is uneven.
 - Keep the cooler stable to avoid vibration and noise.
- Install the unit in an indoor, well-ventilated area.
 - For best performance, please maintain clearance of 3" on the back of the unit.
 - Do not use outdoors. For indoor use only.
 - Avoid direct sunlight.
 - Unit should be placed far from any heating source to avoid decrease of refrigeration efficiency.
- Avoid installation in a high humidity and/or dusty area.
 - Humidity above 60% can cause the unit to rust, to collect condensation, and may decrease efficiency.
 - Dust collected on condenser coil will cause unit to malfunction.
- Select a location away from heat- and moisture-generating equipment.
 - Ambient temperatures above 75 degrees Fahrenheit may cause the compressor to malfunction.
 - For optimal performance, this unit should not be used in environments with ambient temperatures exceeding 75 degrees Fahrenheit.
 - The unit should not be placed in areas with an ambient temperature over 90 degrees Fahrenheit.
 - Equipment malfunctions due to ambient temperatures above 90 degrees could void the warranty.
 - Do not install this unit inside a closet or alcove.
- For optimal performance, 3" of clearance is required around all louvered or vented panels, to allow for proper air flow.
 - Component failure due to improper installation is not covered under the warranty.

Shelf Installation

Shelves are included with the beer dispensers to provide the option for storage.

1. Hook shelf clips onto hanger.
2. Place shelves on shelf clips, making sure all corners are seated properly.

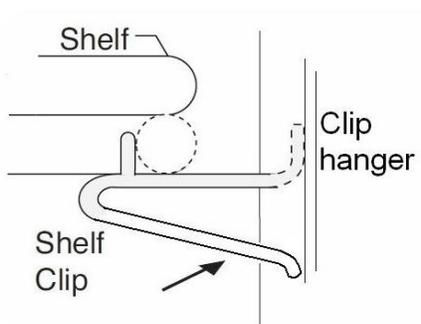

Electrical

- Please ensure that the required voltage is being supplied at all times.
- The unit should be plugged into a grounded and properly-sized electrical outlet with appropriate over-current protection. NEVER USE AN ADAPTER PLUG! Please refer to the electrical requirements on the unit's nameplate.
- This unit should have its own dedicated outlet.
- Do not use extension cords.
- Do not unplug your cooler by pulling on the power cord. Grip the plug firmly and pull straight out from the outlet.
- Ensure the unit is not resting on or against the electrical cord.
- If the unit is not in use for a long period of time, please unplug the unit from the outlet.
- To avoid shock and fire hazards, do not plug in or unplug the unit with wet hands.
- After unplugging the unit, wait at least 10 minutes before plugging it back in. Failure to do so could cause damage to the compressor.

Installing Draft Tower



1. Connect beer line connector to keg coupler.
2. Place rubber washer over draft arm mounting holes in cabinet.
3. Put beer line connector down through hole.
4. Secure draft arm with four screws.
5. Insert air hose in draft arm, being careful not to disturb insulation.
6. Remove top cover of draft arm and attach air hose clip to the insulating sleeve at the top of the draft arm. This will assure that the hose remains in the proper place at all times, which will keep the beer faucet cold.
7. Replace top cover.
8. Screw the handle onto the beer faucet.



Drain Instructions:

On direct draws, the drain is located at the front of the cabinet (UDD1 & UDD1S drain into a bottle located inside the unit). To plumb in the drain, connect ½” PVC pipe to the barbed fitting supplied with the unit. If you would prefer to drain the beer inside the unit (for mobility or where a drain can't be found):

- Use a screwdriver to remove the drain bracket.
- Pull the drain hose so that it is inside the unit.
- Attach a bottle to the drain hose inside the unit.
- Plug the created hole at the bottom of the unit.

Startup

- Good air flow in your unit is critical. Be careful to load product so that it neither presses against the back wall, nor comes within four inches of the evaporator housing. Refrigerated air off the coil must circulate down the back wall.

RECOMMENDATION:


Before loading product, we recommend you run your Avantco unit empty for 2-3 days. This allows you to be sure the electrical wiring and installation are correct and no shipping damage has occurred. Remember, the Ready Kitchen Warranty **does not** cover product loss!

Adjusting the Temperature

Your new refrigerator is already factory set to run at optimum temperatures for food safety and should require no adjustments.

Refrigerators are set to cycle between a minimum temperature of 33 degrees Fahrenheit and a maximum temperature of 40 degrees Fahrenheit.

Adjusting the temperature changes the minimum temperature your unit will run at. Your unit will not run constantly at this setting. To change it, follow these instructions:

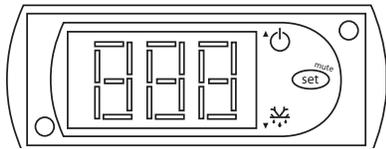

Digital Control Units

- Hold "SET" for 1 sec. The display will flash the current minimum temperature.
- Use the arrow buttons to adjust the minimum temperature you want it to run at.
- Press "SET" again to save your settings.

Always remember to calculate the differential if you change the minimum temperature setting. The cabinet temperature will fluctuate up to +7 degrees over your set minimum temperature as the compressor runs and shuts off. Setting the temperature too high will result in unsafe maximum temperatures and possible health code violations.

Running a Manual Defrost Cycle

This unit is pre-programmed to run automatic defrost cycles at preset intervals. However, if you would like to run a manual defrost cycle at any time, please follow the steps below:

1. Press the defrost button (snowflake symbol and down arrow) for approximately 3 seconds.
2. Repeat to stop the defrost cycle.

Defrost System:

Refrigerator coils are kept below the freezing point (32 degrees Fahrenheit). During compressor downtime, the evaporator fan continues to circulate air through the evaporator coil. This air circulation raises the coil temperature above the freezing point, melting any accumulated frost. Run-off water is drained into the evaporator pan and evaporated. Automatic defrost timers automatically initiate at pre-set intervals and for a pre-determined duration.

Temperature

Correct temperature is a key factor to consider when storing and dispensing draft beer. Too cool or too warm may cause flavor loss and dispensing problems.

Tips on Controlling Temperature

- Keep a thermometer handy.
- Monitor temperature of draft both inside your cooler and at the tap.
- Keep the cooler door(s) closed as much as possible to avoid temperature fluctuation.
- Regular maintenance will help identify potential problems before they become definite problems.

Pressure

Dispensing pressures differ according to:

- The type of draft dispensing system.
- The length of draft dispensing line.
- The actual draft product.
- The temperature of the draft product.
- The pressurizing agent: compressed air, CO₂, or specially blended gasses.

Tips on Maintaining Correct Temperature

- Research which pressurizing agent works best with your product and why.
- Monitor your regulators to ensure applied pressure remains constant.
- Keep equipment in good repair.

Tapping

- Do not agitate the kegs unnecessarily.
- If excessive agitation occurs, allow kegs to settle for 1-2 hours before tapping.
- Prior to tapping the keg, ensure that all beer faucets in the serving location are in the off position.
- Completely remove the dust cover (identification cap) from the keg.

Storage & Handling

Draft beer should be treated as a food product. In most instances, draft beer is not pasteurized. It is very important that you store and handle it properly. Follow these steps to ensure the highest quality, safety, and consumer satisfaction.

- Draft beer should be immediately stored in a refrigerated cabinet.
- Draft beer products have a recommended shelf life. If you have questions regarding the shelf life of any of your draft products, please consult with your supplying depot or respective brewery representative.
- Kegs should be stored separately from food products. If your cooler is used to refrigerate draft and food products, it is very important that the food not be stored near or on the kegs.
- Keg storage and dispensing areas should be kept clean to prevent any possibility of contaminating your products.


Knockout CO₂ Installation

These are the recommended procedures for installing a remote CO₂ container in your Avantco unit.

Tools: Pliers | Power Drill | Silicone Sealer | ½" Drillbit

1. Remove black knockout plug with pliers. (See images below for plug locations).
2. Use drill with 1/2" bit to bore a hole straight back through wall into compressor compartment.
3. Snake CO₂ line through hole, down and around, exiting behind rear caster underneath grill.
4. Seal hole around CO₂ line with silicone sealer to prevent cold air leakage.

***Depending on setup and amount of kegs, a CO₂ manifold may be needed.**

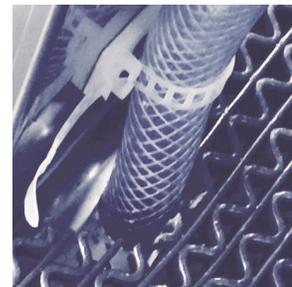

NOTE: In models UDD1 & UDD1S, the CO₂ tank (up to 5 lbs. in size) can be placed inside the cooler to maintain complete mobility.

CAUTION: CO₂ tanks are potentially dangerous because of the pressure they contain. If you are unfamiliar with their use or the use of a CO₂ regulator, seek information from your local distributor before proceeding.

Cleaning Bar System

Draft dispensers, regardless of design, must be cleaned at least every two weeks. Flushing the lines with water only is not enough.

Tools: Pliers | Power Drill | Silicone Sealer | ½" Drillbit

Cleaning:

1. Prepare cleaning solution as stated on container.
2. Disconnect tap from keg.
3. Remove beer faucet, unscrew handle, and remove valve assembly.
4. Put tap and faucet parts in bucket with cleaning solution to soak.
5. Use brush to clean faucet parts.
6. Rinse all parts thoroughly.
7. Fill pump bottle with line cleaning solution.
8. Attach hose from pump bottle to beer column tap outlet (be sure rubber gasket is in place to prevent leakage). Allow tap to drain into bucket.
9. Pump solution (2-3 times) from bottle through the line until it starts to flow out of the other end.
Wait 10 minutes while cleaning solution works on the lines.
10. Pump excess solution through lines.
11. Rinse bucket, pump bottle, and hose thoroughly with clean, cool water.
12. Fill pump bottle with clean, cool water and pump through lines until water runs clear.
13. When crystal-clear water comes through, you're ready to assemble and reattach the faucet and re-tap the keg.
14. Draw the water from the beer line.

NOTE: Keeping your dispenser and all its parts clean and odor-free in conjunction with regular maintenance will get maximum life out of your dispenser.



Changing CO₂ Cylinder

Follow these instructions at ALL times when you replace a CO₂ gas cylinder.

1. Close cylinder at **A**.
2. Remove tap **D** from keg. Pull pressure release ring on body of tap to release pressure remaining in line (do not close **C**).
3. Remove or loosen regulator key **B** by turning counterclockwise.
4. Remove regulator from used cylinder at **E**.
5. Remove dust cap from new gas cylinder at **E** and clear dust from outlet by opening and closing valve **A** quickly using appropriate wrench.
6. Attach regulator to new cylinder at **E** (use new fiber/plastic washer, if required).
7. Open valve **A** all the way.
8. Close valve **C**.
9. Adjust regulator key **B** by turning clockwise to set pressure (check setting by opening **C** and pulling and releasing the ring **F** on the pressure release valve on the body of the tap).
10. Tap keg at **D** with valve **C** open.

NOTE: DO NOT drop cylinders. DO NOT lay cylinders flat. It requires 1/2 lb. of CO₂ to dispense 1/2 barrel of beer at 38°F with 15 lbs. of pressure on barrel.


Pressure Adjustment on CO₂ Regulator

Increasing Pressure:

1. Close regulator shut-off **C**.
2. Turn regulator key **B** clockwise and make setting.
3. Tap gauge for accurate reading.
4. Open regulator shut-off **C** and draw beer.

Decreasing Pressure:

1. Close regulator shut-off **C**.
2. Untap keg at **D** and activate tap handle to bleed line. Leave in open position.
3. Slowly open regulator shut-off **C** and simultaneously turn regulator key counterclockwise to zero reading.
4. Close regulator shut-off **C** and set pressure by turning regulator key clockwise. Check setting by opening and closing valve **C**.
5. Close tap head **D** (put in OFF position).
6. Tap keg at **D** and open regulator shut-off **C**.

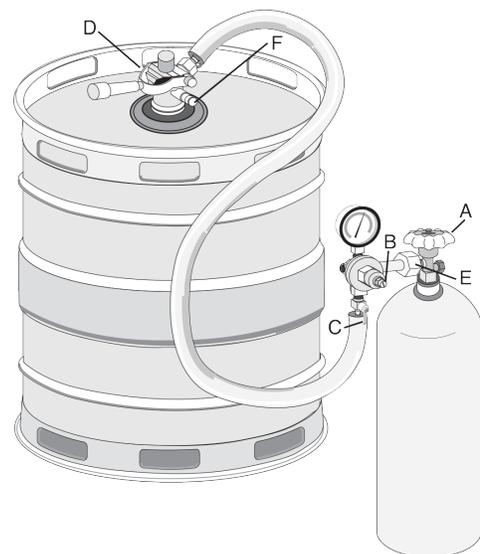

Installing Gas Distributor (Manifold/Regulator Panel)

Materials:

- Manifold (sold separately)
- ¾" long self-drilling metal to metal screw
- Drill / screwdriver
- Regular maintenance will help identify potential problems before they become definite problems.

There are no pre-drilled holes or markings on the inside of the unit because mounting locations can vary. The manifold / regulator panel can be installed anywhere on the back- or right-side walls inside of the unit.



CAUTION

If the manifold is not installed in the **red** areas above, there is a risk of damaging electrical wires or refrigeration lines.

Safety / Warning

Please pay close attention to the safety notices in this section. Disregarding these notices may lead to serious injury and/or damage to the unit.

ATTENTION

- To minimize shock and fire hazards, be sure not to overload outlet. Please designate one outlet for your unit.
- Do not use extension cords.
- Do not put your hands under the unit while it is being moved.
- When the unit is not in use for a long period of time, please unplug the unit from the outlet.
- After unplugging the unit, wait at least 10 minutes before plugging it back in. Failure to do so could cause damage to the compressor.

UNPLUG CORD

- To minimize shock and fire hazards, please do not plug or unplug the cord with wet hands.
- During maintenance and cleaning, please unplug the unit.

PROPER GROUNDING REQUIRED

- To minimize shock and fire hazards, make sure that the unit is properly grounded.

WARNING

- Do not attempt to remove or repair any component unless instructed by factory.
- Make sure that the unit is not resting on or against the electrical cord and plug.
- To minimize personal injury, do not hang on the doors.
- Do not store any flammable or explosive gas or liquids inside the unit.
- Do not attempt to alter or tamper with the electrical cord.

Operation / Maintenance

WARNING: DISCONNECT POWER CORD BEFORE CLEANING ANY PARTS OF THE UNIT.

NOTE: We strongly recommend that any servicing be performed by an authorized service technician.

Loading Product

- Do not block the air duct / fan at the top of the unit. Maintain a minimum of 4" of clearance between products and the fan at all times.
- Ensure all shelves are sitting level and properly secured before loading products.
- Do not store flammable or explosive gas or liquids inside the unit.

Cleaning the Condenser Coil

- For efficient operation, keep the condenser surface free of dust, dirt, and lint.
- We recommend cleaning the condenser coil at least once per month.

Cleaning the Fan Blades and Motor

- If necessary, clean the fan blades and motor with a soft cloth.
- If it is necessary to wash the fan blades, cover the fan motor to prevent moisture damage.

Cleaning the Interior of the Unit

- When cleaning the cabinet interior, use a solvent of warm water and mild soap.
- Do not use steel wool, caustic soap, abrasive cleaners, or bleach that may damage the interior finish.
- Wash door gaskets on a regular basis, preferably weekly. Simply remove the door gasket from the frame of the door, soak in warm water and soap for thirty (30) minutes, dry it with a soft cloth, and replace it.
- Check door gaskets for proper seal after they are replaced.
- Periodically remove the shelves and pilasters from the unit and clean them with mild soap and warm water. To remove the pilasters, first, remove the shelves and shelf brackets. Then, simply lift the pilaster up and out.

Condenser Coil Cleaning Instructions:

A dusty condenser may lead to high energy consumption, less cooling effectiveness, and compressor damage.

The condenser coil is located at the bottom behind the panel.

1. Disconnect the electrical power from the unit.
2. Remove the front cover and base cover with a screwdriver.
3. Using a soft brush and/or vacuum, remove the dirt, lint, etc. from the finned condenser coil in a vertical direction.
4. Clean the condenser with a commercial condenser coil cleaner, available from any kitchen equipment retailer. Ex. Noble Chemical Tech Line.
5. After cleaning, straighten any bent condenser fins with a fin comb.
6. When finished, be sure to reinstall the front cover and base cover.
7. Reconnect the electrical power to the unit.

Stainless Steel Equipment Care & Instructions

CAUTION: Do not use any steel wool, abrasive, or chlorine based products to clean stainless steel surfaces.

Stainless Steel Destroyers

There are three basic things which can break down your stainless steel's outer defenses and allow corrosion to develop.

1. **Scratches** - Wire brushes, scrapers, and steel pads are just a few examples of items that can be abrasive to stainless steel's surface.
2. **Deposits** - You may have hard or soft water depending on what part of the country you live in. Hard water can leave spots. Hard water that is heated can leave deposits if left to sit too long. These deposits can cause the outer layer to break down and rust your stainless steel. All deposits left from food prep or service should be removed as soon as possible.
3. **Chlorides** - Present in table salt, food, and water, chlorides eat away at the protective layer surrounding stainless steel. Household and industrial cleaners are the worst types of chlorides.

Preventing Rust on Stainless Steel:

1. **Use the Correct Cleaning Tools**
Use non-abrasive tools when cleaning. The stainless steel's outer layer will not be harmed by soft cloths and plastic scouring pads.
2. **Clean Along the Grain**
Polishing lines or grain are visible on some stainless steels. Always scrub parallel to these visible lines on stainless steel using a plastic scouring pad or soft cloth. If no lines are visible, use a soft touch with a soft cloth or plastic scouring pad.
3. **Use Alkaline, Alkaline Chlorinated, or Non-Chloride Containing Cleaners**
While many traditional cleaners are loaded with chlorides, commercial suppliers are providing an ever-increasing choice of non-chloride cleaners. One of the best is Noble Chemical Excel Stainless Steel Cleaner. If you are not sure of your cleaner's chloride content, contact your cleaner supplier. If they tell you that your present cleaner contains chlorides, ask if they have an alternative. Avoid cleaners containing quaternary salts, as they can attack stainless steel, causing pitting and rusting.
4. **Water Treatment**
To reduce deposits, soften the hard water when possible. Installation of certain filters can remove corrosive and distasteful elements. Salts in a properly maintained water softener can be to your advantage. Contact a treatment specialist if you are not sure of the proper water treatment.
5. **Maintaining the Cleanliness of Your Food Equipment**
Use cleaners at recommended strength (alkaline, alkaline chlorinated, or non-chloride). Avoid buildup of hard stains by cleaning frequently. When boiling water with your stainless steel equipment, the single most likely cause of damage is chlorides in the water. Heating any cleaners containing chlorides will have the same damaging effects.
6. **Rinse & Dry**
When using chlorinated cleaners, you must rinse and wipe dry immediately. It is better to wipe standing cleaning agents and water as soon as possible. Allow the stainless steel equipment to air dry. Oxygen helps maintain the passivity film on the stainless steel.
7. **NEVER USE HYDROCHLORIC ACID ON STAINLESS STEEL**
8. **Regularly Restore / Passivate Stainless Steel**

Troubleshooting

Problem	Possible Cause	Possible Solution
Compressor is not running.	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Power cord unplugged.	Plug in power cord.
	Thermostat set too high.	Set thermostat to lower temperature.
	Cabinet in defrost cycle.	Wait for defrost cycle to finish.
Condensing units run for long periods of time.	Excessive amount of water product in cabinet.	Allow adequate time for product to cool down.
	Prolonged door opening or door ajar.	Ensure doors are closed when not in use. Avoid opening the doors for long periods of time.
	Door gasket(s) not sealing properly.	Ensure gasket(s) are snapped in completely. Remove gasket and wash with soap and water. Check condition of gasket and replace if necessary.
	Dirty condenser coil.	Clean the condenser coil.
	Evaporator coil iced over.	Unplug unit and allow coil to defrost. Make sure thermostat is not set too cold. Ensure that door gasket(s) are sealing properly.
Cabinet temperature is too warm.	Thermostat set too warm.	Set thermostat to lower temperature.
	Airflow blocked.	Re-arrange product to allow for proper air flow. Make sure there is at least 4" of clearance from evaporator.
	Excessive amount of warm product placed in cabinet.	Allow adequate time for product to cool down.
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Low refrigerant levels.	Contact a service technician to check refrigerant levels.
	Prolonged door opening or door ajar.	Ensure doors are closed when not in use. Avoid opening doors for long periods of time.
Interior light is not working.	Poor switch connection.	Turn off light switch and turn it back on.
	Bulb is not connected.	Make sure the bulb is correctly inserted in the socket.
	Bulb has burned out.	Replace the bulb.
Condensation is collecting on the cabinet and/or floor.	Gasket is not sealing properly.	Clean, repair, or replace the gasket as necessary.
	Relative humidity is above 60%.	Move unit to area below relative humidity or lower humidity level.
Other common problems.	Low refrigerant levels.	Contact a service technician to check refrigerant levels.
	Door is slightly ajar.	Make sure door is completely closed.
Cabinet is noisy.	Loose parts.	Locate and tighten loose part(s).
	Tubing vibration.	Ensure tubing is free from contact with other tubing or components.

Draft Beer Troubleshooting

Problem	Possible Cause	Possible Solution
Flat Beer Foamy head disappears quickly. Beer lacks usual zestful, fresh flavor.	CO ₂ turned off when not in use.	Keep lines properly charged at all times.
	Contaminated air source (usually compressed air).	Drain air source & refill with clean air.
	Greasy glasses.	Clean with a grease-cutting cleaner.
	Not enough pressure.	Check for leaks, replace air source if necessary.
	Pressure shut off during night.	Keep lines properly charged at all times.
	Loose tap or vent connection.	Check lines, do regular maintenance to prevent.
	Sluggish pressure regulator.	Check connections, replace is necessary.
False Head Large soap-like bubbles, head dissolves very quickly.	Obstruction in lines.	Check lines, clean via instructions on page 12.
	Dry glasses.	Flush glasses with clean water and drain.
	Improper pour.	1. Hold clean glass at 45 degrees. 2. Pour beer at the midpoint slope of the glass. 3. Once glass fills to half, tilt upright to 90 degrees. 4. Fill until there is 1" to 1½" head.
	Pressure required does not match beer temperature.	Research or consult your supplier for proper temps/ pressures for each draft product.
Wild Beer Beer is all foam and not enough liquid beer when drawn.	Coils in beer lines warmer than beer in keg.	Check that the air hose clip is still in place. Check insulation for damage - repair as necessary.
	Beer tapped improperly.	Avoid agitation in keg prior to tapping. Tap quickly and at correct temperature.
	Faucet worn down.	Contact a properly trained maintenance worker to repair or replace.
	Kinks, dents, twists, or obstructions in line.	Check that all lines are clear and properly secured. Clean lines via instructions on page 12.
	Beer too warm in kegs or lines.	Check that the unit is set to proper temperature. Check that the air hose clip is still in place. Check for damage in insulation. Check that all lines are clear and properly secured.
Too much pressure.	Make sure unit is operating at ideal temperature to match your product. Check to see if pressure gauge is malfunctioning. Check air source.	

Draft Beer Troubleshooting

Problem	Possible Cause	Possible Solution
Cloudy Beer Beer in glass appears hazy, not clear.	Dirty glass or faucet.	Clean glasses and faucet thoroughly before use.
	Beer over chilled or frozen.	Check temperature setting in unit and storage area.
	Beer temperature variance in keg.	Check around keg for hot spots. Try to keep unit door closed as much as possible.
	Hot spots in beer lines.	Check that all lines are properly secured, clean, and free of debris.
	Beer lines damaged or dirty.	Check that all lines are properly secured, clean, and free of debris. Clean via instructions on page 12.
Bad Taste	Dirty glass or faucet.	Clean glasses and faucet thoroughly before use.
	Keg too warm.	Check temperature setting in unit and storage area.
	Beer lines too warm.	Check around keg for hot spots. Try to keep unit door closed as much as possible.
	Beer lines dirty.	Check that all lines are properly secured, clean, and free of debris. Clean via instructions on page 12.
	Dry glasses.	Flush glasses with clean water and drain.
	Lines not being flushed properly between kegs.	Flush lines thoroughly with clean water between each keg.