



#176ICBN125BK

MOBILE ICE BIN

CARE & CLEANING INSTRUCTIONS

How to Remove Lid to Clean Ice Bin

1. Unscrew four knobs, two on either side of back lid.
2. Lift back lid off unit first. Then remove front lid by lifting off unit.
3. Both the front and back removable lids are dishwasher safe and can be run through a commercial dishwasher. They can also be steam cleaned or washed with warm soapy water and a plastic bristle brush. Use soapy water and brush to scrub, then rinse with clean water.
4. Inside and outside of ice bin unit can also be cleaned with soapy water and a plastic bristle brush. A small pipe brush can be used to clean the inside of faucet from inside the unit. Be sure to rinse down unit with clean water.
5. If staining on the unit occurs, use any standard destainer and follow instructions on the product.

Reattach lid:

1. Once unit is cleaned and dry, place on front lid first, and then place on back lid.
2. Screw in all four knobs on back lid.

HOW TO CLEAN BRASS FAUCET:

1. Unscrew front brass faucet piece from mobile ice bin.
2. Remove rubber gasket from inside of faucet.
3. Clean all parts of faucet with a damp cloth. If extra cleaning is required use warm, soapy water and wipe brass faucet. Make sure to wipe dry after every cleaning. If necessary, use a small plastic bristle pipe brush to clean inside of faucet.



Replacement Parts

HOW TO REPLACE AXLE:

1. Use an adjustable wrench to unscrew nuts on the outside of the back 8" wheels and set aside.
2. Unscrew all four bolts from the two plate brackets under the unit. Set aside plate brackets, bolts and washers.
3. Remove damaged axle.
4. Thread the new axle through, place plate brackets back on unit, add washers and bolts and tighten until secure. Place back 8" wheels onto new axle and secure with nuts.

HOW TO REPLACE FRONT CASTER(S):

1. Use an adjustable wrench to unscrew the four bolts on 5" wheel caster. Set aside bolts and washers.
2. Place new caster on unit, add washers and bolts and tighten until secure.

HOW TO REPLACE BACK WHEEL(S):

1. Use an adjustable wrench to unscrew nuts from outside of 8" wheels.
2. Slide wheel off of axle
3. Slide replacement wheel on axle and screw nut back on until tight.

