

 
 
3 Tray- #176BDC3

Tools needed: Phillips Head Screwdriver; Adjustable Wrench

Parts:

I. Hardware

- A. (4) Screws
- B. (2) Handles
- C. (16) Bolts
- D. (16) Spring Washers
- E. (16) Locking Nuts

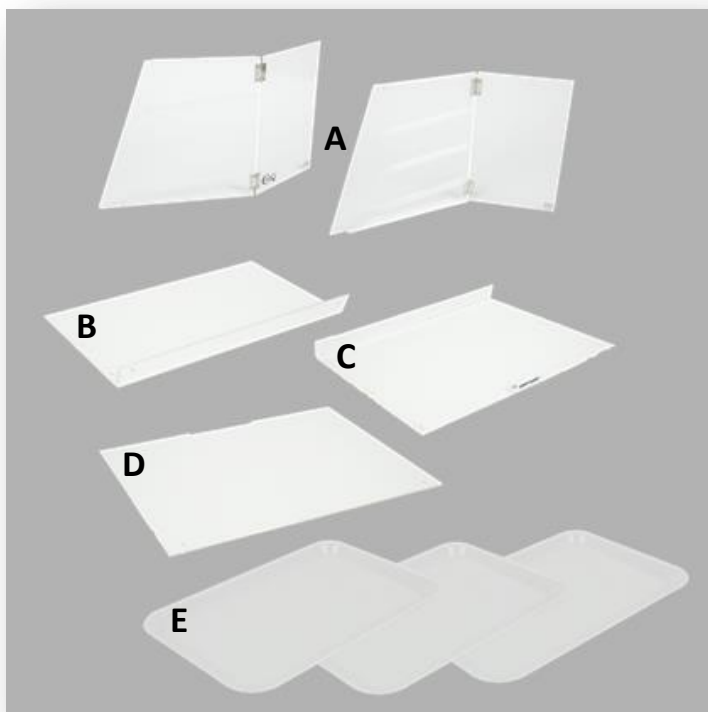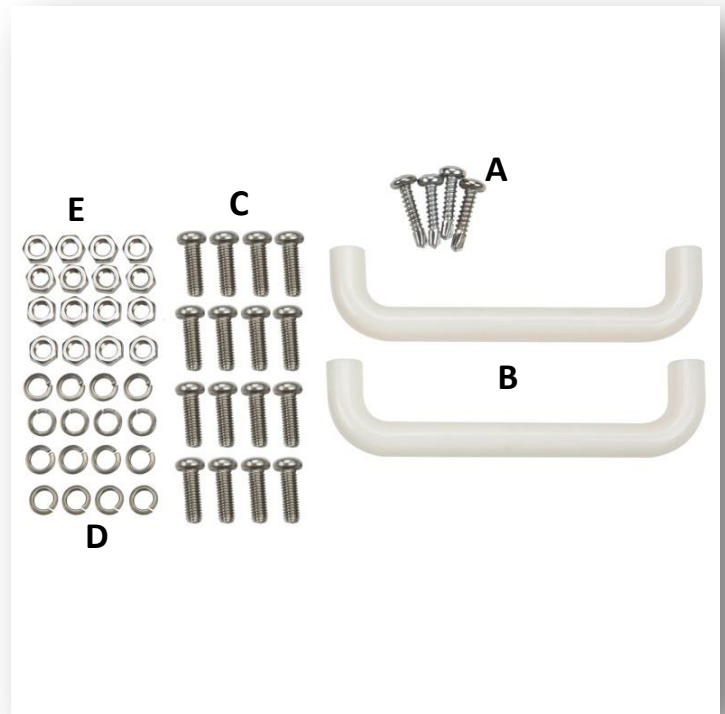

II. Sections

- A. (2) Side Sections with Hinges and an Angled Front Edge
- B. (1) Short Bent Section (Top of Case)
- C. (1) Long Bent Section (Bottom of Case) with Magnet Attached and Non-Skid Grips
- D. (1) Flat Section with Pre-Drilled Holes
- E. (3) Trays

Assembly:

1. Find the pre-drilled holes on each of the hinged side sections (A) and line up the plastic handles with the holes. Screw each of the plastic handles onto the outside of each section.
2. Place the two hinged side sections (A) upside down so the interior grooves face each other and the case's shorter side is on the bottom. Place the bottom section (B) on top of the two side pieces. The bent side will be at the front of the case and the magnet will be at the back of the case. Align the pre-drilled holes and insert a bolt into the pre-drilled hole and then slide a spring washer onto the bolt and secure with a locking nut. Gently tighten with an adjustable wrench until the nut is snug. Do not over tighten. Continue until all six bolts are secure. At this time, the magnet on the bottom section (B) will align with the metal door catches on each of the doors.
3. Flip the display case over and align top section (C) with the pre-drilled holes. The bent side of this piece will be at the front of the case. Insert each bolt into the pre-drilled hole and then slide a spring washer onto the bolt and secure with a locking nut. Gently tighten with an adjustable wrench until the nut is snug. Do not over tighten. Continue until all six bolts are secure.
4. Place flat front section (D) on the angled front edge of the display case and insert bolts into the pre-drilled holes, place spring washers onto the bolt, and secure with a locking nut.
5. After the case is assembled, check that all parts are correctly aligned and that the locking nuts are secure. Slide each of the Choice trays into the grooves inside the display case.