



# User Manual

## Tomato Slicer

Item # 40725TS

Item # 4071875TS

1/4"

3/16"





# User Manual

## Tomato Slicer

### Cleaning and Maintenance

- 1) Remove the thumb screws and the slide stop from the pusher assembly. Pull the pusher off the end of the slide board.
- 2) Remove the mounting screws from the slide board and blade shield.
- 3) To totally disassemble the pusher assembly, remove the acorn and hex nuts on the top of the stack and carefully remove the pusher plates and spacers. Remove the additional screws if you wish to disassemble the guide plate.
- 4) To re-assemble, reverse the procedure.

**NOTE:** Always rinse the tomato slicer in cold or lukewarm water after it has been washed in hot water. Hot water makes the slide board expand which may make it difficult to use the pusher assembly until the slide board returns to room temperature.

**NOTE:** The guides for the pusher assembly located along the sides of the cutting boards need to be lubed regularly to keep your slicer operating smoothly. Using a food grade sanitary lube (such as 401PETROGEL) will ensure you get a clean slice every time.

**NOTE:** After re-assembly, you must re-tension the blades.

### 90 Day free of defects Replacement Warranty

This product is covered by a 90 day free of defects warranty from the date of purchase. Circumstances of misuse or abuse will not qualify for replacement. Choice has the final decision if misuse or abuse appears evident. Warranty does not apply outside of the United States.

Blades are not covered under warranty. Blades are expected to wear down and be replaced by the customer on a consistent bases dependent upon frequency of usage.

### Replacement Parts

**1/4" Blade**  
**#407PT25BLD**



**Feet**  
**#407PFPFEET**



**3/16" Blade**  
**#407PT1875BLD**



**SS Thumb Screw**  
**#181TSCREW**

