



User Manual

Fruit & Vegetable Wedgers

Item # 4074WDG

4 Section

Item # 4076WDG

6 Section

Item # 4078WDG

8 Section

Item # 40710WDG

10 Section





User Manual

Fruit & Vegetable Wedgers

Cleaning and Maintenance

- 1) Lift the pusher block from the guide rods.
- 2) Remove the screws from the bottom of the frame to release the blade assembly.
- 3) Wash the push block, blade assembly, and frame thoroughly.
- 4) Reverse the procedure to reassemble.
- 5) When needed, lubricate the guide rods with mineral oil, food grade grease or paraffin.
Do not use cooking oil.

90 Day free of defects Replacement Warranty

Choice will replace a defective piece for a period of up to 90 days from purchase provided the product has been subject to normal use. Circumstances of misuse or abuse will not qualify for replacement. Choice has the final decision if misuse or abuse appears evident. Residential use voids the warranty. Warranty does not apply outside of the United States.

Blades are not covered under warranty. Blades are expected to wear down and be replaced by the customer on a consistent bases dependent upon frequency of usage.

This unit is not meant for use with potatoes.

Fruit & Vegetable Wedgers

Replacement Parts



**4 Section Blade Assembly
#407P4WDGBA**



**6 Section Blade Assembly
#407P6WDGBA**



**8 Section Blade Assembly
#407P8WDGBA**



**10 Section Blade Assembly
#407P10WDGBA**



**4/8 Section Push Block
#407P48WDGPB**



**6 Section Push Block
#407P6WDGPB**



**10 Section Push Block
#407P10WDGPB**

**Feet
#407PFPFEET**



**Knob
#407PWDGKNB**

