


Unit Information


120V – 60Hz – 1700W
.9 Cubic Foot Capacity
Will Accommodate a Quarter Sheet Pan.

WARING COMMERCIAL®


WCO250X Quarter Size Convection Oven

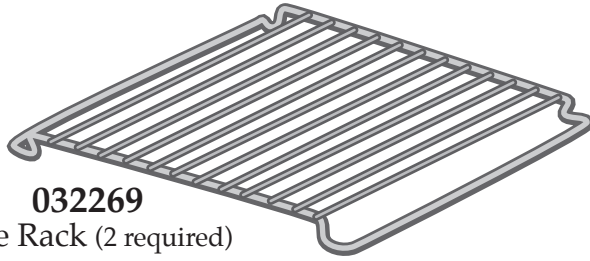


032269
Wire Rack (2 required)

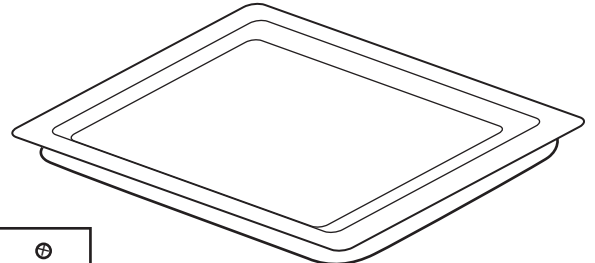

034757
Baking Tray

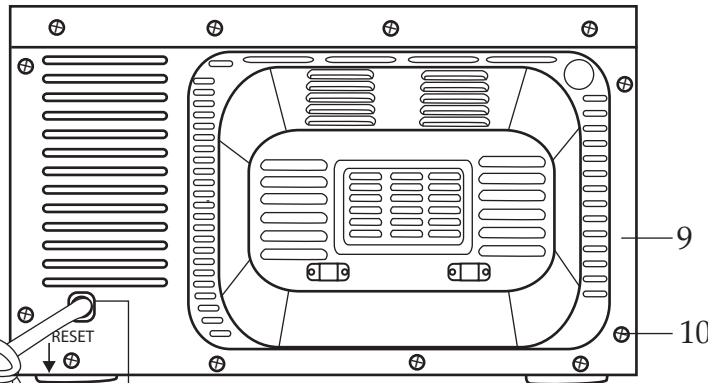

Back View

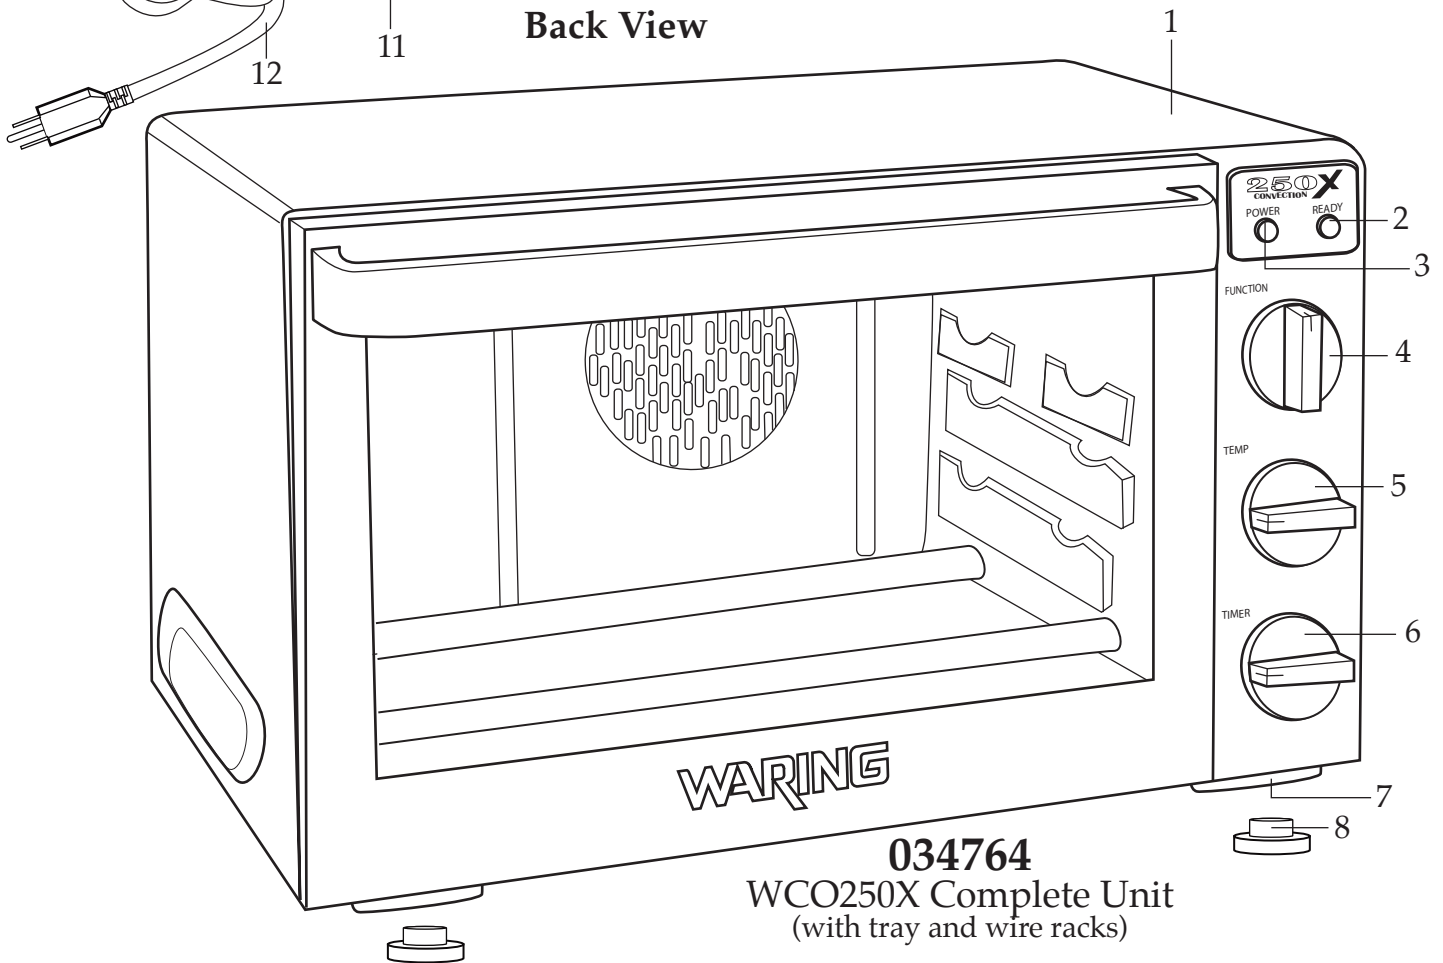

034764
WCO250X Complete Unit
(with tray and wire racks)

WCO250X

Quarter Size Convection Oven

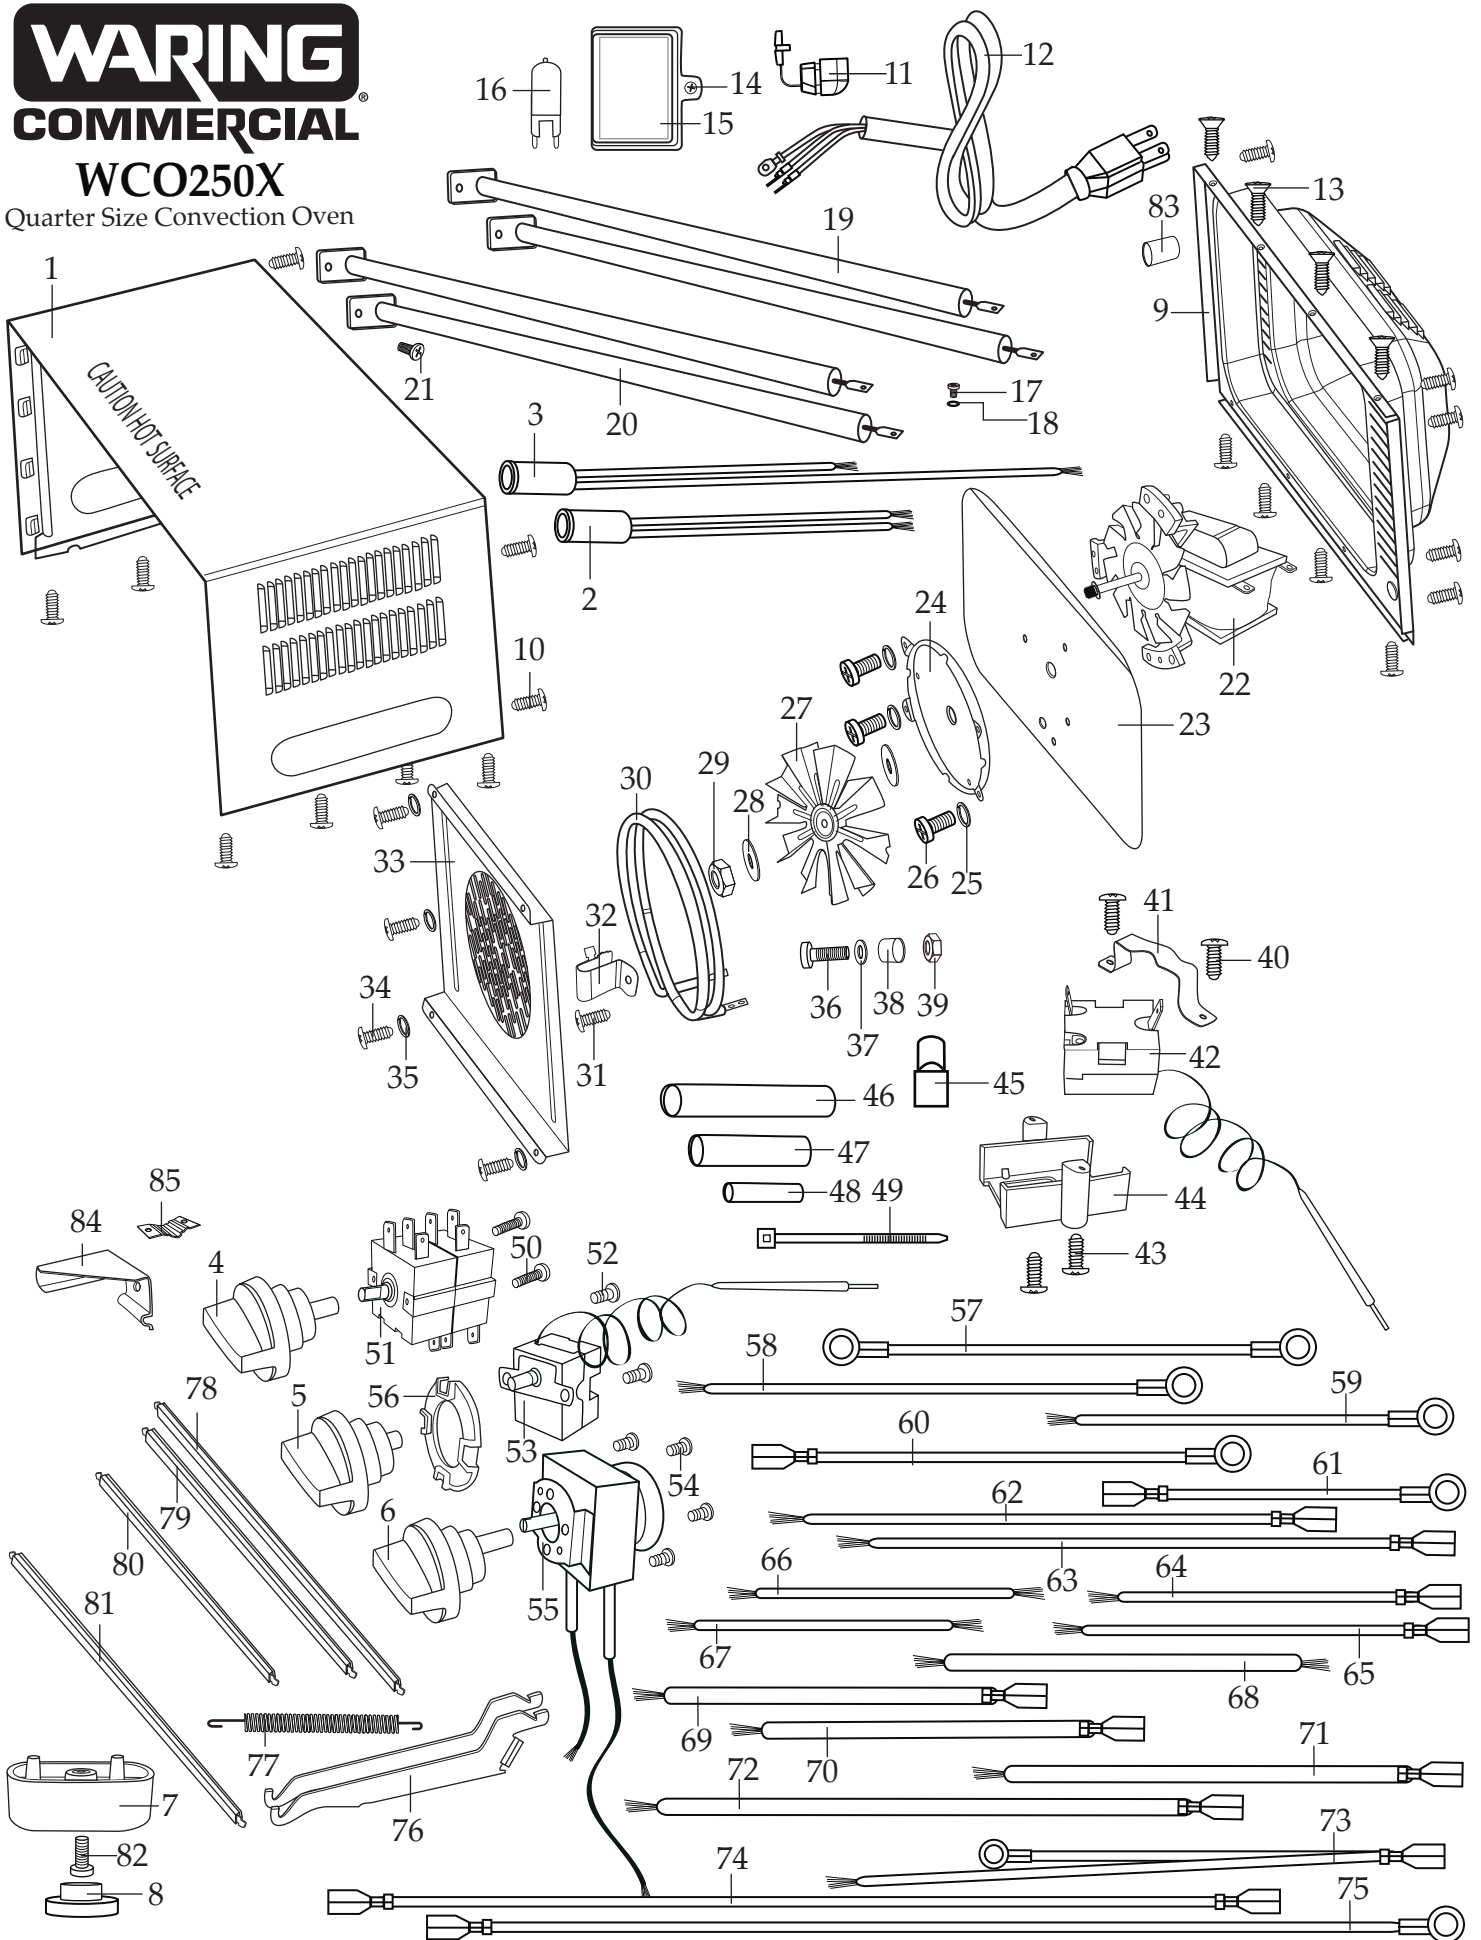


Illustration #	Part #	Description
1	034684	Shell
2	034766	Ready Light (green)
3	034765	Power Light (red)
4	034687	Function Knob
5	034688	Temp Knob
6	034689	Timer Knob
7	034690	Foot Base (4 required)
8	034691	Foot (4 required)
9	034692	Back Cover
10	034693	Screw (16 required)
11	034694	Strain Relief
12	034695	Cord
13	034704	Flat Head Screw (4 required)
14	034696	Light Cover Screw
15	034697	Light Cover
16	034698	Halogen Bulb
17	034699	Screw (leads to elements)
18	034700	Spring Washer (leads to elements)
19	034701	Top Element (2 required <i>have pink ends</i>)
20	034702	Bottom Element (2 required <i>have white ends</i>)
21	034703	Screw (element plate)
22	034706	Motor Assembly
23	034707	Insulated Heat Plate
24	034708	Motor Fan Base
25	034717	Spring Washer (3 required)
26	034705	Screw (3 required)
27	034709	Fan
28	034710	Washer (2 required)
29	034711	Hex Nut
30	034712	Rear Heating Element

Illustration #	Part #	Description
31	034693	Screw
32	034763	Rear Heating Element Bracket (2 required)
33	034713	Motor Fan Screen
34	034714	Screw (4 required)
35	034715	Spring Washer (4 required)
36	034716	Screw
37	024717	Spring Washer
38	034718	Collar
39	034719	Hex Nut
40	034721	ScREW (2 required)
41	034720	Reset Switch Bracket
42	034722	Reset Switch
43	034724	Screw
44	034723	Reset Switch Holder
45	019123	Crimp Connectors (6 required)
46	034725	Large Rubber Sleeve (.375" diameter x 2" length)
47	034726	Medium Rubber Sleeve (.375" diameter x 1.5" length)
48	034727	Small Rubber Sleeve (.25" diameter x 1.25" length)
49	013731	Wire Tie (5 required)
50	034728	Function Switch Screw (2 required)
51	034729	Function Switch
52	034730	Thermostat Screw (2 required)
53	034731	Thermostat
54	034733	Timer Screw (4 required)
55	032941	Timer with Leads
56	034732	Thermostat Gasket
57	034734	9.25" White Lead (2 required)
58	034735	11.75" White Lead (2 required)
59	034736	5.25" White Lead
60	034737	11" Brown Lead

Illustration #	Part #	Description
61	034738	4" Black Lead
62	034739	5.75" White Lead
63	034739	5.75" White Lead
64	034740	6.25" Brown Lead
65	034741	8.75" White Lead
66	034742	4.5" White Lead
67	034743	4.5" Black Lead
68	034744	4.5" Thick White Lead
69	034745	5" Thick White Lead
70	034746	5" Thick Black Lead
71	034747	6.25" Thick Black Lead
72	034748	8.5" Thick White Lead
73	034749	Double White Lead
74	034750	24.5" Black Lead
75	034751	31" Red Lead
76	034752	Hinges (set)
77	034753	Hinge Spring (2 required)
78	034754	17" Door Gasket (oven compartment)
79	034755	11" Door Gasket (oven compartment)
80	034756	7.75" Door Gasket (oven compartment)
81	034758	15.5" Door Gasket (oven door)
82	034759	Foot Screw (4 required)
83	034760	Ventilation Pipe
84	034761	Large Thermostat Bulb Bracket
85	034762	Small Thermostat Bulb Bracket (2 required)

Oven Settings	Interior Light	Bottom Elements	Top Elements	Rear Element	Blower
OFF	OFF	OFF	OFF	OFF	OFF
Convection Bake	ON	OFF	OFF	ON	ON
Bake	ON	ON	ON	OFF	OFF
Roast	ON	ON	ON	OFF	ON
Broil	ON	OFF	ON	OFF	OFF