

How to Reset the Temperature Differential:

For select Avantco GDC, GDS, UDD, and UBB models

1. Press and hold the **SET** button until 'P5' appears on the screen. Then press the **SET** button again. A zero will appear and start blinking.



2. Press and hold the **UP** arrow to find and select the number 22.



3. Press the **SET** button so that 'P5' reappears on the screen.

4. Use the **UP** arrow to find and select the parameter marked 'rd'.
5. Press the **SET** button. The number 14.4 should appear; this is your differential.
6. Use the **DOWN** arrow to reset the differential to 5.0. Hold the **SET** button until you see the temperature reappear on the display.



The temperature differential is now reset and saved. Your unit will cycle off at 33.0 and back on at approximately 37.0. Resetting the temperature differential helps ensure that product is always held within the safe zone.