



## **INSTRUCTIONS FOR RE-ALIGNING THE DOOR ON THE PRO CART ULTRA™**

**If for any reason the door should become misaligned, simply follow the steps below:**

1. Begin by locking the brakes on the unit and unlatching the door.
2. Remove the stainless steel hinge plates from the door.
3. Determine which direction the door needs to be rotated—clockwise or counter clockwise.
4. Starting with the top hinge, turn the hex nut accordingly until the door is level.
5. Adjust the bottom hinge accordingly, if needed.
6. Open and close the door to check for proper operation.
7. Repeat adjustment of hex nuts until satisfied. When all of the adjustments have been completed, turn the nut so that a flat side is facing you.
8. Re-install the hinge plate. It should sit flush against the flat of the hex nut. The dimples will hold the hex nuts in place and prevent them from spinning.