## **Care & Use Instructions**



## Non-Stick Accelerated Oven Baskets & Screens

- Wash oven basket before first use.
- Maximum operating temperature is 550°F.
- Hand wash with mild detergents only.
  Avoid using chemical cleaners or solvents.
- DO NOT scrape the basket surface with a hard-edged implement or use abrasive cleaning materials.
- DO NOT use grease on basket surface.
- Oven basket WILL BE VERY HOT upon removal from oven. Use a spatula or oven paddle underneath the basket to transport. DO NOT pick up basket from the side walls or rim.
- For use in indirect heat applications only.
  DO NOT expose to direct flame or heating coils.
- **DO NOT** fold.
- Replace basket when non-stick finish shows wear.

