

Electrical Guide: All Models

Each machine is shipped with an 8-foot cord and plug. It is necessary to have a licensed electrician install the correct receptacle, line, and breaker to power your machine. Improper power will lead to various machine failures not be covered under warranty and may cause irreversible damage to electrical components.

<u>Model</u>	<u>Phase</u>	<u>Volts</u>	<u>Plug</u>	<u>MFS</u>	<u>MCA</u>	<u>Power(kW)</u>
6210	1	115	L5-20	20	16	1.6
6228	1	208-230	L6-20	20	13	2.5
6236	1	208-230	L6-20	20	15	2.7
6235/6250	1	208-230	L6-20	20	18	3.5
6378-1	1	208-230	L6-30	30	24	4.9
6378-3	3	208-230	L15-30	30	23	4.8
6650	1	115	L5-20	20	15	1.3
6690	1	208-230	L6-20	20	15	2.2
6455	1	115	L5-20	20	16	1.6
6695	1	208-230	L6-20	20	17	2.7
6795	1	208-230	L6-30	30	24	4.0

MFS = maximum fuse size

MCA = minimum circuit ampacity

