

# Daily Cleaning for the Double Batch Oven

## Daily Cleaning

Follow the steps below when cleaning your Double Batch oven. Use only TurboChef®-approved cleaning chemicals. The use of any other cleaning products may damage critical oven components, resulting in a non-warranty service call.



Step 1

### Step 1: Prepare the Ovens

 
- ⚠ **WARNING:** The ovens operate at temperatures up to 550°F (285°C) and may cause injury if not allowed to cool properly.
- Turn both ovens off by touching the Off icons on the top oven and bottom oven screen.
- Open the oven doors.
- ⊘ **DO NOT** attempt to clean the ovens until both oven displays no longer read COOLING DOWN.



Step 2

### Step 2: Remove and Clean the Wire Racks


- ⚠ **WARNING:** Be sure the oven interior is cool before you remove the racks.
- Remove the wire racks from the top and bottom oven.
- Wash, rinse, and sanitize the wire racks.

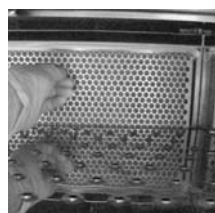

Step 3

### Step 3: Remove and Clean the Grease Filters

 - Remove the grease filters from the top and bottom oven. To remove, lift the grease filter by the handle and pull forward.
- Wash and gently rinse the grease filters with hot water.
- ⚠ **WARNING:** **DO NOT** scrub the grease filters or use a water jet when cleaning.

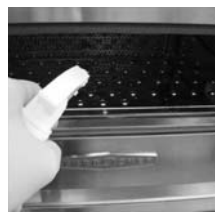

Step 4

### Step 4: Clean the Cook Chambers

- Use a food vacuum or damp towel to remove food particles from the top and bottom oven cook chambers.
- Spray Oven Cleaner onto the top, bottom, and sides of the top and bottom oven cook chambers.
- ⚠ **CAUTION:** **DO NOT** spray Oven Cleaner into the holes on the back oven walls or directly into the cook chamber lamps. Doing so can damage critical oven components, resulting in a non-warranty service call.
- For stubborn stains, spray Oven Cleaner and allow it to penetrate for 5 minutes.
- Clean the top and bottom oven cook chambers with a nylon scrub pad.
- Wipe the top and bottom cook chambers with a clean, damp towel and then a dry towel.



 
Step 5 (Fig A)

### Step 5: Clean the Oven Doors

- Clean the metal portion of the top and bottom oven doors with Oven Cleaner and a nylon scrub pad.
- Gently clean the glass windows with Oven Cleaner and a cleaning towel.
- ⚠ **CAUTION:** **DO NOT** use abrasive cleaning supplies (e.g. steel wool) when cleaning the glass windows. Doing so may scratch the windows.
- ⚠ **CAUTION:** **DO NOT** apply excessive force when cleaning the glass windows. Breakage may result in a non-warranty service call.

## Supplies and Equipment

TurboChef® Oven Cleaner (Product Number: 103180), TurboChef® Oven Guard (Product Number: 103181), nylon scrub pad, cleaning towel, disposable gloves, protective eyewear, dust mask (optional)

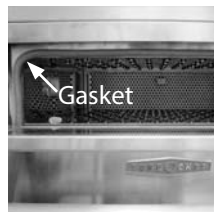

Step 5 (Fig B)

### Step 5: Clean the Oven Doors, Continued

- Wipe the top and bottom oven doors and windows with a clean, damp towel and then a dry towel.
- ⚠ **CAUTION:** **DO NOT** scrub or attempt to clean the oven door gasket (Fig B).



Step 6

### Step 6: Apply Oven Guard

- Spray Oven Guard onto a clean towel.
- Wipe the interior walls and the inside of the oven doors on both the top and bottom oven.
- ⚠ **CAUTION:** **DO NOT** spray Oven Guard into the holes on the back oven walls or directly into the cook chamber lamps. Doing so can damage critical oven components, resulting in a non-warranty service call.



Step 7

### Step 7: Reinstall the Grease Filters and Wire Racks

- Reinstall the grease filters in both the top and bottom oven.
- Reinstall the wire racks in both the top and bottom oven. There are notches on the right and left sides of the wire rack which fit over the pins on the sides of the cook chamber. The wire rack must be installed correctly to ensure proper oven operation.



Step 8

### Step 8: Clean the Air Filter

- ⚠ **CAUTION:** TurboChef does not recognize blocked air vents as a warrantable claim. The filter must be cleaned regularly or replaced if damaged. During oven operation, the filter must remain in place at all times.
- Remove the air filter from the back of the oven.
- Rinse the air filter with hot water. **DO NOT** scrub the filter.
- Allow the air filter to dry completely.
- Reinstall the air filter.
- ⚠ **CAUTION:** **DO NOT** Operate the oven without the filter in place.



Step 9

### Step 9: Clean the Oven Exterior

- Wipe the oven exterior with a clean, damp towel.
- ⚠ **CAUTION:** **DO NOT** spray chemicals into any openings, such as the louvers on the side or rear panels. Doing so can damage critical oven components, resulting in a non-warranty service call.
- Wipe the oven exterior with a clean, dry towel.

# Weekly Cleaning for the Double Batch Oven

## Weekly Cleaning

Once a week (or more frequently depending on use), perform the following steps to help maintain your oven. Use only TurboChef®-approved cleaning chemicals. The use of any other cleaning products may damage critical oven components, resulting in a non-warranty service call.



Step 1

### Step 1: Prepare the Ovens

 
- ⚠ **WARNING:** The ovens operate at temperatures up to 550°F (285°C) and may cause injury if not allowed to cool properly.
- Turn both ovens off by touching the Off icons on the top oven and bottom oven screen.
- Open the oven doors.
- ⊘ **DO NOT** attempt to clean the ovens until both oven displays no longer read COOLING DOWN.



Step 2

### Step 2: Remove and Clean the Wire Racks


- ⚠ **WARNING:** Be sure the oven interior is cool before you remove the racks.
- Remove the wire racks from the top and bottom oven.
- Wash, rinse, and sanitize the wire racks.

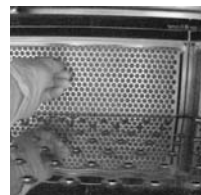

Step 3

### Step 3: Remove and Clean the Grease Filters

 - Remove the grease filters from the top and bottom oven. To remove, lift the grease filter by the handle and pull forward.
- Wash and gently rinse the grease filters with hot water.
- ⚠ **WARNING:** **DO NOT** scrub the grease filters or use a water jet when cleaning.

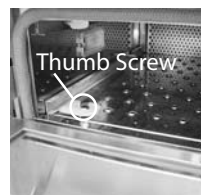

Step 4 (Fig A)

### Step 4: Remove and Clean the Bottom Jetplates

- Remove the left and right support rails by unscrewing the thumb screws (Fig A) and then gently pulling the rails out and away from the oven (Fig B).
- Remove the bottom jetplates from the top and bottom oven (Fig C).
- Wash, rinse and sanitize the bottom jetplates.



Step 4 (Fig B)

### Step 5: Clean the Cook Chambers

- Use a food vacuum or damp towel to remove food particles from the top and bottom oven cook chambers.
- Spray Oven Cleaner onto the top, bottom, and sides of the top and bottom oven cook chambers.
- ⚠ **CAUTION:** **DO NOT** spray Oven Cleaner into the holes on the back oven walls or directly into the cook chamber lamps. Doing so can damage critical oven components, resulting in a non-warranty service call.
- For stubborn stains, spray Oven Cleaner and allow it to penetrate for 5 minutes.
- Clean the top and bottom oven cook chambers with a nylon scrub pad.
- Wipe the top and bottom cook chambers with a clean, damp towel and then a dry towel.



Step 4 (Fig C)



Step 5

## Supplies and Equipment

 
TurboChef® Oven Cleaner (Product Number: 103180), TurboChef® Oven Guard (Product Number: 103181), nylon scrub pad, cleaning towel, disposable gloves, protective eyewear, dust mask (optional)



Step 6 (Fig A)

### Step 6: Clean the Oven Doors

- Clean the metal portion of the top and bottom oven doors with Oven Cleaner and a nylon scrub pad.
- Gently clean the glass windows with Oven Cleaner and a cleaning towel.
- ⚠ **CAUTION:** **DO NOT** use abrasive cleaning supplies (e.g. steel wool) when cleaning the glass windows. Doing so may scratch the windows.
- ⚠ **CAUTION:** **DO NOT** apply excessive force when cleaning the glass windows. Breakage may result in a non-warranty service call.
- Wipe the top and bottom oven doors and windows with a clean, damp towel and then a dry towel.
- ⚠ **CAUTION:** **DO NOT** scrub or attempt to clean the oven door gasket (Fig B).

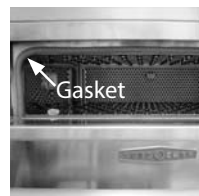

Step 6 (Fig B)



Step 7

### Step 7: Apply Oven Guard

- Spray Oven Guard onto a clean towel.
- Wipe the interior walls and the inside of the oven doors on both the top and bottom oven.
- ⚠ **CAUTION:** **DO NOT** spray Oven Guard into the holes on the back oven walls or directly into the cook chamber lamps. Doing so can damage critical oven components, resulting in a non-warranty service call.



Step 8

### Step 8: Reinstall Components

- Reinstall the bottom jetplates, left and right support rails, grease filters, and wire racks in both the top and bottom oven.
- NOTE:** There are notches on the right and left sides of the wire rack which fit over the pins on the sides of the cook chamber. The wire rack must be installed correctly to ensure proper oven operation.



Step 9

### Step 9: Clean the Air Filter

- ⚠ **CAUTION:** TurboChef does not recognize blocked air vents as a warrantable claim. The filter must be cleaned regularly or replaced if damaged. During oven operation, the filter must remain in place at all times.
- Remove the air filter from the back of the oven.
- Rinse the air filter with hot water. **DO NOT** scrub the filter.
- Allow the air filter to dry completely.
- Reinstall the air filter.
- ⚠ **CAUTION:** **DO NOT** Operate the oven without the filter in place.



Step 10

### Step 10: Clean the Oven Exterior

- Wipe the oven exterior with a clean, damp towel.
- ⚠ **CAUTION:** **DO NOT** spray chemicals into any openings, such as the louvers on the side or rear panels. Doing so can damage critical oven components, resulting in a non-warranty service call.
- Wipe the oven exterior with a clean, dry towel.