

## Catalog#

### Model

BB185 BB185

BB185 MT (Type 25) BB185T (3rd generation)

BB185

314 Ella T. Grasso Ave. Torrington, CT 06790 Tele. 1-800-269-6640

Waring Factory Service Center

(current & 4th generation) BB185S MT (Type 25) (3rd geneation) BB185S BB185S

Fax 860-496-9017 www.waringproducts.com

NDG185 same as BB185 BB185 MT (Type 25) (current & 4th generation) (3rd geneation)

(current & 4th generation)

current & 4th generation)	(Sta geneauou)	
<b>Illustration</b> #	Part #	Description
1	026282	Cover Lid
2	026281	Jar Lid
3	026280	Jar /44 oz 5 <sup>1/2</sup> cups
4	026284	Jar Seal
5	503360	Blending Assy.
6	026285	Jar Bottom
7	503354	Blade & Shaft Assy.
8	027716	V Seal
9	030427	Bearing Holder
10	030426	Washer / stainless steel
11	027097	Clutch
12	026852	Jar Cover
13	026851	Jar /32 oz. stainless steel
14	027097	Clutch
15	003507	Washer
16	028212	Top Housing
17	026266	Control Module Panel
18	026267	Screw 4 Req.'d
19	026269	Upper Motor Mount
20	026841	Rubber Bushing 4 Req.'d
21	026690	Eyelet 4 Req.'d
22	026716	Screw 4 Req.'d
23	029794 027380	ECM Motor (3rd, 2nd generation & older units)
24	013731	Cable Tie 2 Req.'d (current production, 4th & 3rd generation)
25	502835 502923	Cord Set / with flag terminal (older units)
26	013680	Strain Relief
27	027278 002436	Screw/ground Screw/ground (older units)
28	002943	Lock Washer

#### Catalog#

#### Model

BB185

BB185 (current & 4th generation)

BB185 MT (Type 25) BB185T (3rd generation)

**BB185** 

BB185S

BB185S

BB185S MT (Type 25)

(current & 4th generation)

(3rd geneation)

NDG185 same as BB185 (current & 4th generation)


BB185 MT (Type 25)

(3rd geneation)



Illustration #	Part #	Description
29	028580-x 026464 027063 502919	Bottom Housing Bottom Housing (2nd generation) Bottom Housing / with hole for reset switch (older units) Bottom Housing with Reset Switch Assy. (older units)
30	026276	Screw 4 Req.'d
31	026278	Suction Cup Foot 4 Rea.'d
 
# Parts No Longer Used (limited availablity)



Used with 027380 motor

