



Self-Serve Faucet Installation Kit #13136-1

INTRODUCTION:

This kit permits easy installation of a slower-flow faucet for self-service locations, thereby making the dispenser safer for use in cafeteria lines, convenience stores, or other applications where user training cannot be assured.

NOTE - U.L. requires that this kit be used only with appliances for which the kit is marked to indicate such use.

KIT CONTENTS:

- A) ☐ 2596-6 Faucet Assembly (1ea)
- B) ☐ 12589 Faucet Adaptor Fitting (1ea)
- C) ☐ 12593 Decal, Very Hot Water (1ea)

NOTE - Faucet removal or installation requires the use of a small amount of pipe sealant compound with teflon. Bunn-O-Matic recommends the use of Loctite Corporation's PST compound or equivalent. It may be purchased directly from Bunn-O-Matic (BOM # 2390-5).

WARNING - DISCONNECT THE DISPENSER FROM THE POWER SOURCE BEFORE THE REMOVAL OF ANY PANEL OR THE REPLACEMENT OF ANY COMPONENT!

- 1) ☐ Open the faucet to be replaced and drain the dispenser until the flow of water stops. Since the dispenser is disconnected from the power source, its refill system is inoperative.
- 2) ☐ Loosen the faucet shank by turning the chromed decorative nut in a counterclockwise direction with a wrench. Be careful not to scratch the dispenser's finish.
- 3) ☐ Remove the faucet assembly by turning the faucet shank in a counterclockwise direction. A small amount of hot water may drip-out at this time.
- 4) ☐ Spread some pipe sealant with teflon on the external threads of the faucet adaptor fitting. Securely screw it into the dispenser in a clockwise direction with a wrench. Be careful not to scratch the dispenser's finish.
- 5) ☐ Spread some pipe sealant with teflon on the external threads of the enclosed faucet assembly. Screw it into the faucet adaptor fitting. Twist the faucet until its spigot is vertical and securely tighten the jam nut in a clockwise direction with a wrench.
- 6) ☐ Select a location within a few inches of the new faucet for the enclosed decal. Prepare this area by cleaning thoroughly. Remove the backing from the decal and press it in place.
- 7) ☐ Reconnect the dispenser to the power source and allow the refill system to fill the dispenser. The heater should turn-on as cooler liquid is introduced into the hot tank.

The dispenser will be ready for use when the heater turns-off.

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

TELEPHONE: (217) 529-6601 FAX: (217) 529-6644

CABLE: BUNNOMATIC