
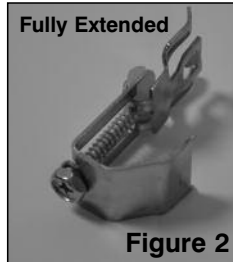


## STEP 6

Remove Clips from carton and rotate to full open position as shown in **Figure 1 & 2**.

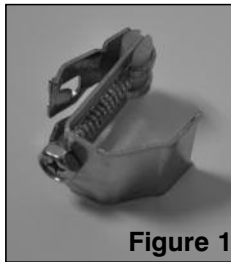

## STEP 7

Align Clip with hole in Bracket (Underside of Sink) as shown in **Figures 3 & 4**. NOTE: Position Clip so adjusting screw faces the sink bowl. Push down on Clip until it "snaps" into place. Repeat for all clips.



## STEP 8

While pulling on retaining clamp pivot towards inside of Sink Bowl (**Figure 5 & 6**).



## STEP 9

Apply 1/4" bead sealant along edge of cut out (**Figure 7**) and install sink into counter top.



Pivot retaining clamp to align with under side of countertop and secure by tightening screws.

## DO NOT OVERTIGHTEN!

Wipe excess Silicone from counter surface.

## STEP 10

Connect Drain and Faucet supply lines. Test all connections for leaks.



Edgewood, New York 11717-8380

AUGUST 2011



## INSTALLATION INSTRUCTIONS for DI-1-1515 DROP-IN SINK



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH FREIGHT CARRIER**

Drop-ins manufactured by **ADVANCE TABCO** are designed and constructed for countertop installations. Only one compartment units intended for HAND SINK USE are NSF listed and approved. Suggested end use for drop-in sinks include dump sinks, bar sinks, wash sinks and hand sinks.

## CONTENTS INCLUDE:

- 1 ea. Sink Bowl
- Basket Type Drain
- Faucet
- Mounting Clips

## TOOLS REQUIRED:

- Drill Motor
- 1/4" - 1/2" Drill Bits
- Long Shank Screw Driver
- Ruler or Tape Measure
- Pencil
- Adjustable Wrenches (2)
- Pipe Wrench
- Saber Saw or Jig Saw

### MATERIAL REQUIRED:

- Silicone Sealant
- Plumbers Putty
- Masking Tape

### RECOMMENDED

### SAFETY MATERIALS:

- Safety Glasses
- Work Gloves

### NOTE:

The corners of ALL Cutouts are to have a **1-1/4"** Radius.

### STEP 1

Remove all contents from carton.

(NOTE: Check for concealed damage - Notify Carrier of any damages immediately)

### STEP 2

- Position sink (upside down) onto counter top surface at desired location. Trace outer edge of Self-Rim with pencil.


(NOTE: Ensure sink is parallel to counter edges.)



← **CORRECT MARKING PROCEDURE**

Pencil MUST be held straight as possible.

**INCORRECT >> MARKING PROCEDURE**

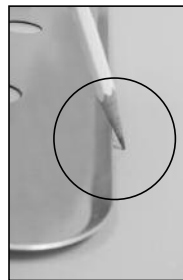


- Remove sink and draw a second line 3/8" parallel to the **inside** of the marked line - that will be the **CUT** line (As shown). Cut out opening is 14 1/4" x 14 1/4"

- **NOTE: Double check ALL dimensions prior to cutting opening.**

**REMEMBER:**

**MEASURE TWICE, CUT ONCE!**

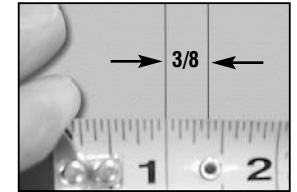


- Drill 1/4" hole 1 to the inside of cut line then use 1/2" drill bit to enlarge hole.
- Apply masking tape along outer (sink edge) line. This will prevent damaging countertop while cutting.
- Position jig saw blade into 1/2" hole and follow **(INNER)** LINE.

### STEP 3

- Install Drain - Apply a bead of Plumber's Putty as shown.




1/4" continuous bead of Plumber's Putty.



### STEP 4

- Install Faucet (as shown).

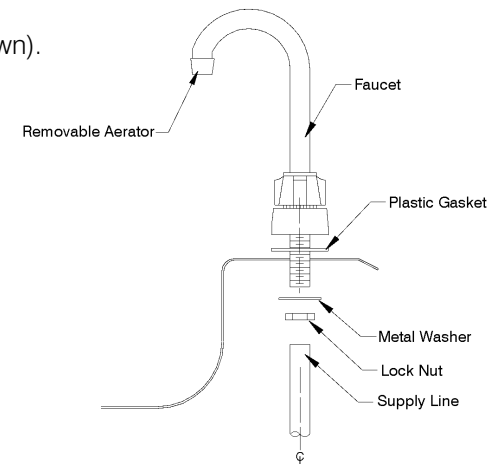

### STEP 5

- Remove masking tape from counter surface and position sink into opening to ensure proper fit.