



Installation Instructions For TCB Series Poly Cutting Board to a Food Table



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Contents:

- (4) 1/4-20 x 1/2" Screws
- (2) 10-32 x 3/8" Screws
- (2) #10 Star Washers
- (2) 10-32 Acorn Nuts

Tools Required:

- Philip's Head Screw Driver
- Adjustable Wrench

Step 1:

Bolt on Cutting Board Brackets using 1/4-20 x 1/2" Screws (**Figure 1**). Do not tighten completely.

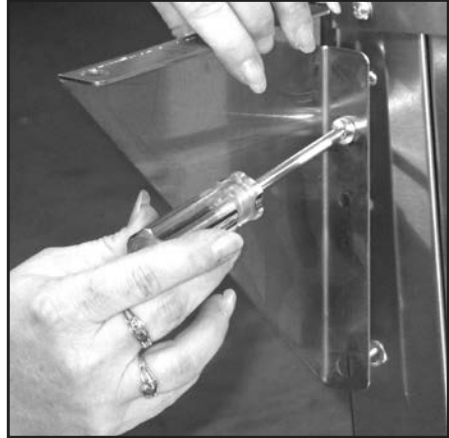


Figure 1

Step 2:

Place Stainless Steel Shelf on top of brackets (**Figure 2**).



Figure 2

Step 3:

Connect Shelf to Brackets using two 10-32 x 3/8" Stainless Steel Screws, Washers & Acorn Nuts. Tighten with Wrench.

NOTE:

Acorn Nut to be positioned on surface of stainless Steel Shelf (**Figure 3**).

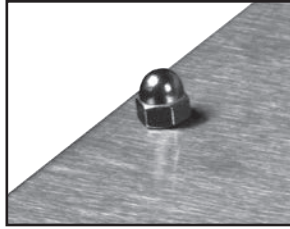
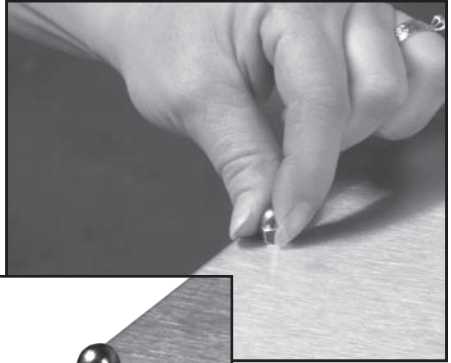


Figure 3

Step 4:

Place Poly Cutting Board on Shelf by aligning the holes with the Acorn Nuts (**Figure 4**). Tighten all bolts on the two brackets.

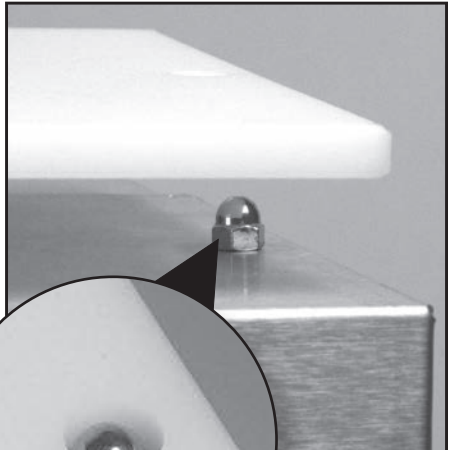


Figure 4

**For Further Assistance
Contact Customer Service at:
800-645-3166
or
customer@advancetabco.com**

