

Rubbermaid

Commercial Products

TOOLS



18" Quick Connect Frame



18" MF Wet Pad • Q410



Safety Sign

Quick Connect Handle of Choice



Pedal Wring Bucket • Q920
and Cleaning Solution of Choice

TIPS

- Follow all established safety procedures.
- Wear all appropriate personal protective equipment (glasses, gloves, etc.).















HOW TO: WET MOP USING PEDAL WRING BUCKET

PROCEDURE

- 1 Place safety floor sign(s) in all pedestrian walkways.
- 2 Affix Quick Connect Handle to 18" frame.
- 3 Place a clean, dry Q410 Wet Pad on floor with white backing side up.
- 4 Hold Quick Connect Frame over pad, then slide it down to attach pad with hook and loop system.
- 5 Fill bucket to desired level with water and recommended volume of cleaning solution.
- 6 Place microfiber flat mop into bucket and maneuver bucket to desired location by steering with mop handle.
- 7 Lift mop from bucket onto the sieve and align handle in center of wringer plate. Step on pedal of dolly to depress wringer plate. A built-in brake prevents bucket from moving during wringing process.
- 8 Rotate pad 180° and wring, from other side, to desired wetness.
- 9 Place mop on floor. Use overlapping "Figure 8" strokes to clean.
Tip: Start mopping at far corner of room or end of hall.
- 10 Progressively work backwards until pad becomes too dry.
- 11 Dip mop into bucket and repeat steps 7 through 10 as required to complete the job.
Note: Change pad when too soiled to clean.
- 12 When job is complete, empty bucket into floor drain using twist valve at base of backside.
If a floor drain is not available, remove bucket from dolly by tilting slightly to unlatch.
Carry to sink, lift and pour contents using one of the front corners as a pouring spout.
- 13 Rinse pad with clean water and dry or remove pad from frame for laundering using one of two methods:
 - A. Using fabric loop on pad, peel pad away from hook and loop fastening on frame.
 - B. Step on edge of pad frame with left foot and edge of pad with right foot. Pull frame up and pad will peel away from hook and loop backing.
- 14 Lift pad by fabric loop for laundry or drying...
- 15 ...or pick up soiled pad by turning pad 90° and touching end of frame on center of pad to lift up.
- 16 Since the pad now folds downward in half, it can easily be removed from the frame and dropped into a laundry bag.

OVER

HOW TO: Wet Mop Using Pedal Wring Bucket

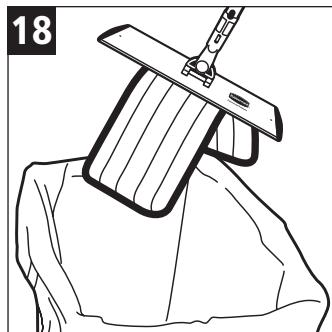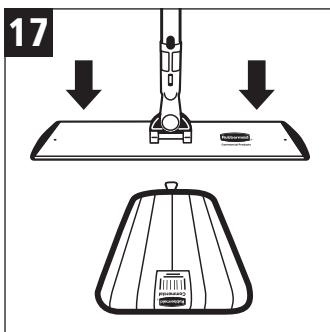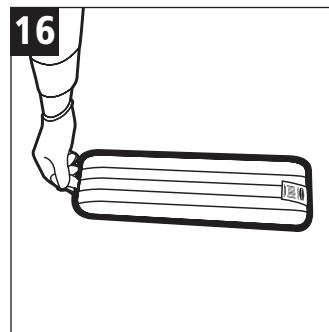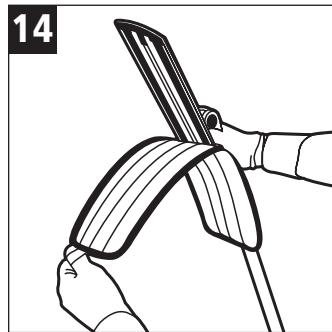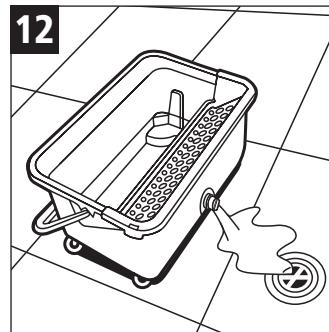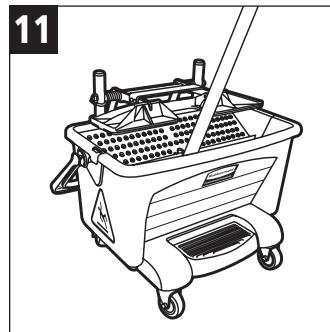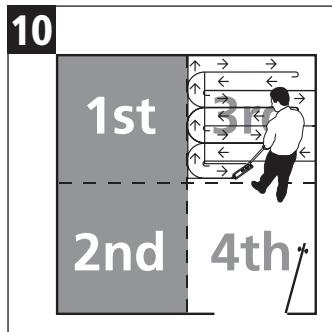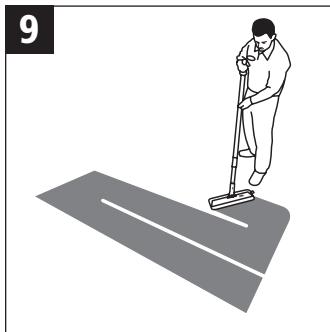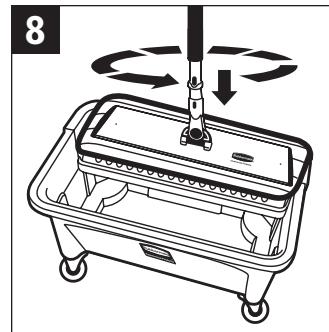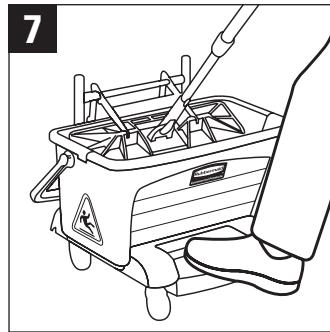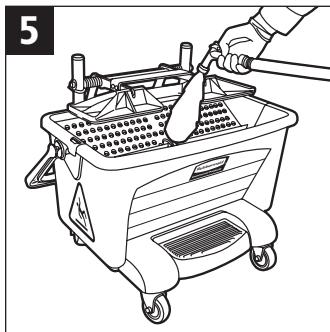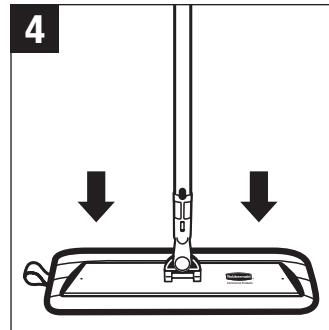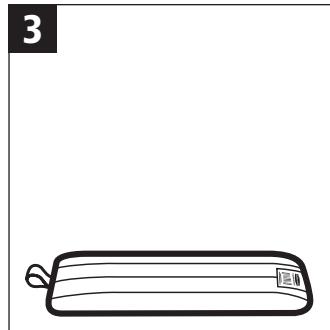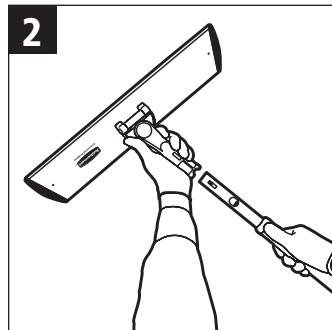

Customer Service: 1-800-347-9800
www.rubbermaidcommercial.com

03/06 MP 20M SM664-G
©2006 by Rubbermaid Commercial Products LLC
3124 Valley Avenue, Winchester, VA 22601

Work Smarter.

Rubbermaid
Commercial Products