

Instructions For Use And Care Of Your Insulated Products

Cateraide™ Series IC, IT, LD, PC, TC, XB & XT



Care and Cleaning of the Insulated Container

1. Clean after every use. De-staining compounds approved for food or beverage contact may be used. Ask your detergent supplier for proper compound.
2. When running through a dishwasher, **make sure gasket* is removed**. Also, prevent latches from getting caught in the conveyor.


Proper Use of Your Cateraide™ Insulated Product

1. Wash and rinse the unit prior to its use.
2. Pre-heating interior with hot water will improve heat retention.
3. Pre-chilling entire unit will improve cold retention.
4. Load container to its maximum capacity. Make sure the gasket* is in place. Replace lid and lock in position.

Care and Cleaning of the Faucet

Clean Faucet periodically with a Carlisle faucet brush #40154:

1. Loosen Union Nut in a clockwise direction to remove faucet from unit.
2. Remove entire upper assembly by unscrewing Bonnet.
3. Pull Seat Cup to remove. Clean all parts in a solution of hot water and urn cleaner. Wipe inside body with clean damp cloth and then rinse with hot water.
4. Use the Carlisle faucet brush (#40154) to clean the insides of the faucet and shank.
5. Depress handle in "lock open" position. Clean top of Bonnet thoroughly. Snap on Seat Cup over Stem End by applying direct pressure against bottom.
6. Screw upper assembly back on body.
7. Attach faucet to shank and tighten Union Nut until seal is achieved.

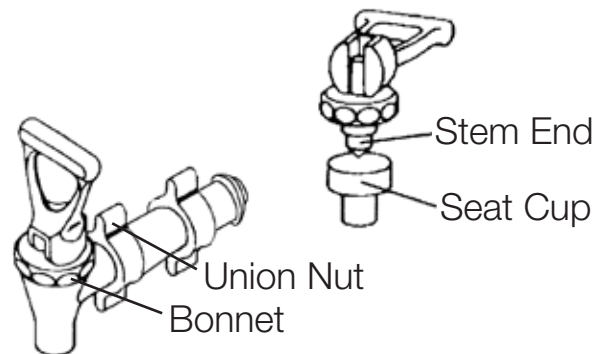

Replacement parts for all Cateraides™ are available through your local dealer/distributor or contact Carlisle FoodService products at 1-800-654-8210.