


OPERATING and MAINTENANCE INSTRUCTIONS

H135UA11 Hot Cabinet (Aluminum)

H135SUA11 Hot Cabinet (Stainless Steel)

Model No.	Volts	Watts	Amps	Hertz	Phase	NEMA
H135UA11 H135SUA11	120	1500	12.3	60	1	5-15P
H135UA11240 H135SUA11240	240	1500	6.1	60	1	6-15P

All are designed for AC service. The above model numbers may be followed by “*M*”, “*L*”, “*D*”, “*R*” and ending with “*S*” or “*Z*”.

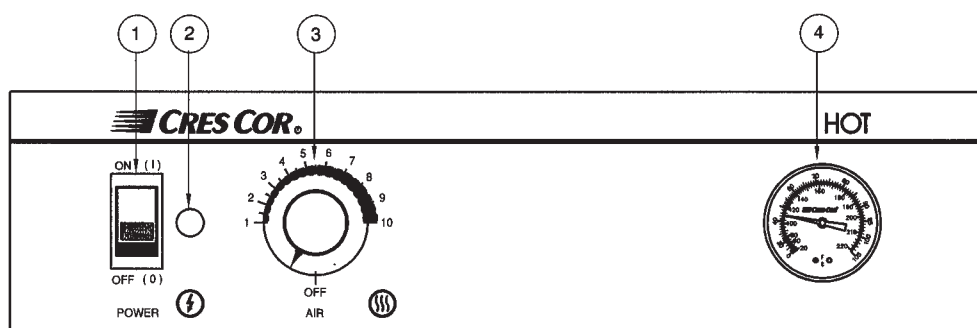

CONTROL PANEL PARTS IDENTIFICATION

1. Power Switch
2. Yellow Light-Power
3. Thermostat
4. Thermometer

HOW TO INSTALL UNIT:

1. Place cabinet near warm ovens. Do *NOT* put in drafty areas or near ventilating systems.
2. Plug cord end into proper wall outlet.

NOTE: No. 8 setting = approx. 190°F (88°C)

No. 6 setting = approx. 165°F (74°C)

Proper food holding temperature is 140°F (60°C) or higher. The thermometer shows the temperature inside.

HOW TO START UNIT:

1. Turn the POWER switch on. The *yellow* light will turn on.
2. Turn thermostat to #10.
3. Preheat cabinet for 30 minutes.
4. Put food into cabinet.
5. Turn thermostat to #8 and close door.

TO TURN OFF UNIT:

1. Turn thermostat off.
2. Turn the POWER switch off.
3. The *yellow* light will go out.

OPERATING and MAINTENANCE INSTRUCTIONS


H135UA11 Hot Cabinet (Aluminum)

H135SUA11 Hot Cabinet (Stainless Steel)

MAINTENANCE

HOT UNIT REMOVAL INSTRUCTIONS:

1. Unplug power cord from wall outlet.
2. Pull entire unit out the front of the cabinet.

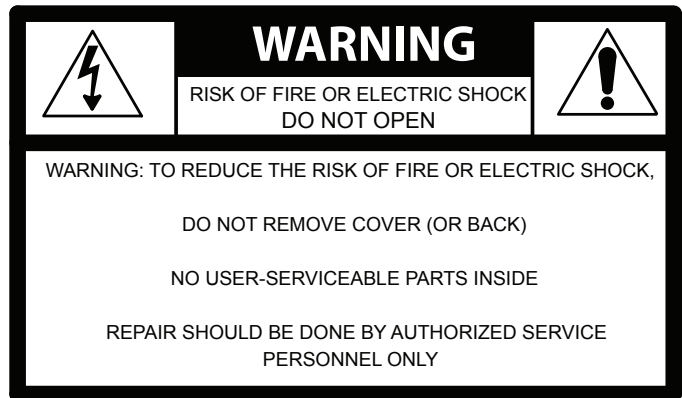

HOW TO CLEAN THE CABINET:



BEFORE cleaning the cabinet:

1. Allow cabinet to cool.
2. Remove Hot unit from cabinet.
3. Do NOT use abrasives or harsh chemicals.

Cleaning Notes:

1. Wipe up spills as soon as possible.
2. Clean cabinet regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow manufacturer's directions on cleaner.
5. Do not mix cleaners.
6. Avoid drips and splashes.

HOW TO CLEAN UNIT:

	Soil	Cleaner	Method
DOORS Vinyl (Out) Aluminum (In)	Dirt, Grease and Oil	Mild Detergent* and water.	1. Wipe with soft, damp cloth. 2. Rinse well.
CABINETS (H137UA11 is Aluminum) (H137SUA11 is Stainless Steel)	Dirt	Mild detergent* and hot water, or mild abrasive cleaner.	1. Use soft, damp cloth. 2. Rinse with hot water. 3. Wipe dry.
		Steam (No strong alkaline additive)	1. Rinse after steam cleaning. 2. Wipe dry.
	Fingerprints, Grease and Oil	Chemical oven cleaner for cabinet material	Follow oven manufacturer's directions
		Mild abrasive cleaner; oily or waxy cleaner	Apply with clean, soft cloth. Wipe with damp cloth.
	Water Spots	Mild abrasive cleaner. Oily of waxy cleaner.	Apply with soft, clean cloth. Wipe with damp cloth.

OPERATING and MAINTENANCE INSTRUCTIONS

H135UA11 Hot Cabinet (Aluminum)

H135SUA11 Hot Cabinet (Stainless Steel)

TROUBLE-SHOOTING CHART:

FAILURE	POSSIBLE CAUSE
1. Yellow light at switch does NOT light.	1a. Circuit breaker/fuse to wall outlet is blown. 1b. Cord is unplugged from wall outlet. 1c. Switch is “OFF”.
2. Unit does not heat.	2a. Thermostat set too low or is “OFF”. 2b. Switch is “OFF”.
3. Unit gets too hot or won’t shut off.	3a. Defective electrical parts. UNPLUG UNIT FROM WALL OUTLET.
4. Blower does not work or makes noise.	4a. Defective blower.

NOTE: Optional digital thermometer will flash if cabinet temperature is below 140° F or above 250° F.
Call the factory if you need different settings.
If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.

REPLACEMENT PARTS:

DESCRIPTION

120 VOLT

240 VOLT

Hot Unit (H35UA11)
Hot Unit (H135SUA11)
Blower Kit
Heater Kit
Thermostat Kit
Thermometer Kit (Analog)
Power Cord
Power Switch
Power Light
Terminal Block

HU-1254-058
HU-1254-062
0769-180-K
0811-019-K
0848-062-K
5238-030-K
0810-029
0808-116-K
0766-094
0852-091

HU-1254-059
HU-1254-063
0769-182-K
0811-020-K
0848-062-K
5238-030-K
0810-039
0808-116-K
0766-095
0852-091

CABINET

W/BLACK FRAME

W/O BLACK FRAME

Door Assembly, Aluminum
Door Assembly, Red
Door Assembly, Stainless Steel
Door Gasket
Door Latch
Door Hinge
Pan Slides

1200-495-BL-K
1200-499-BL-K
-
0861-259-K
1006-154-01-K
0519-104-K
0621-281-K

1221-571-K
1221-571-RK
1221-571-SS
0861-271-K
1006-154-01-K
0519-104-K
0621-281-K

Hot Cabinets	FL-2328
Rev. 4 (3/13)	Page 4 of 4

CRES COR®
5925 Heisley Road • Mentor, OH 44060-1833

OPERATING and MAINTENANCE INSTRUCTIONS

H135UA11 Hot Cabinet (Aluminum)

H135SUA11 Hot Cabinet (Stainless Steel)

WIRING DIAGRAM:

