


3000 Version 3: Quick Reference

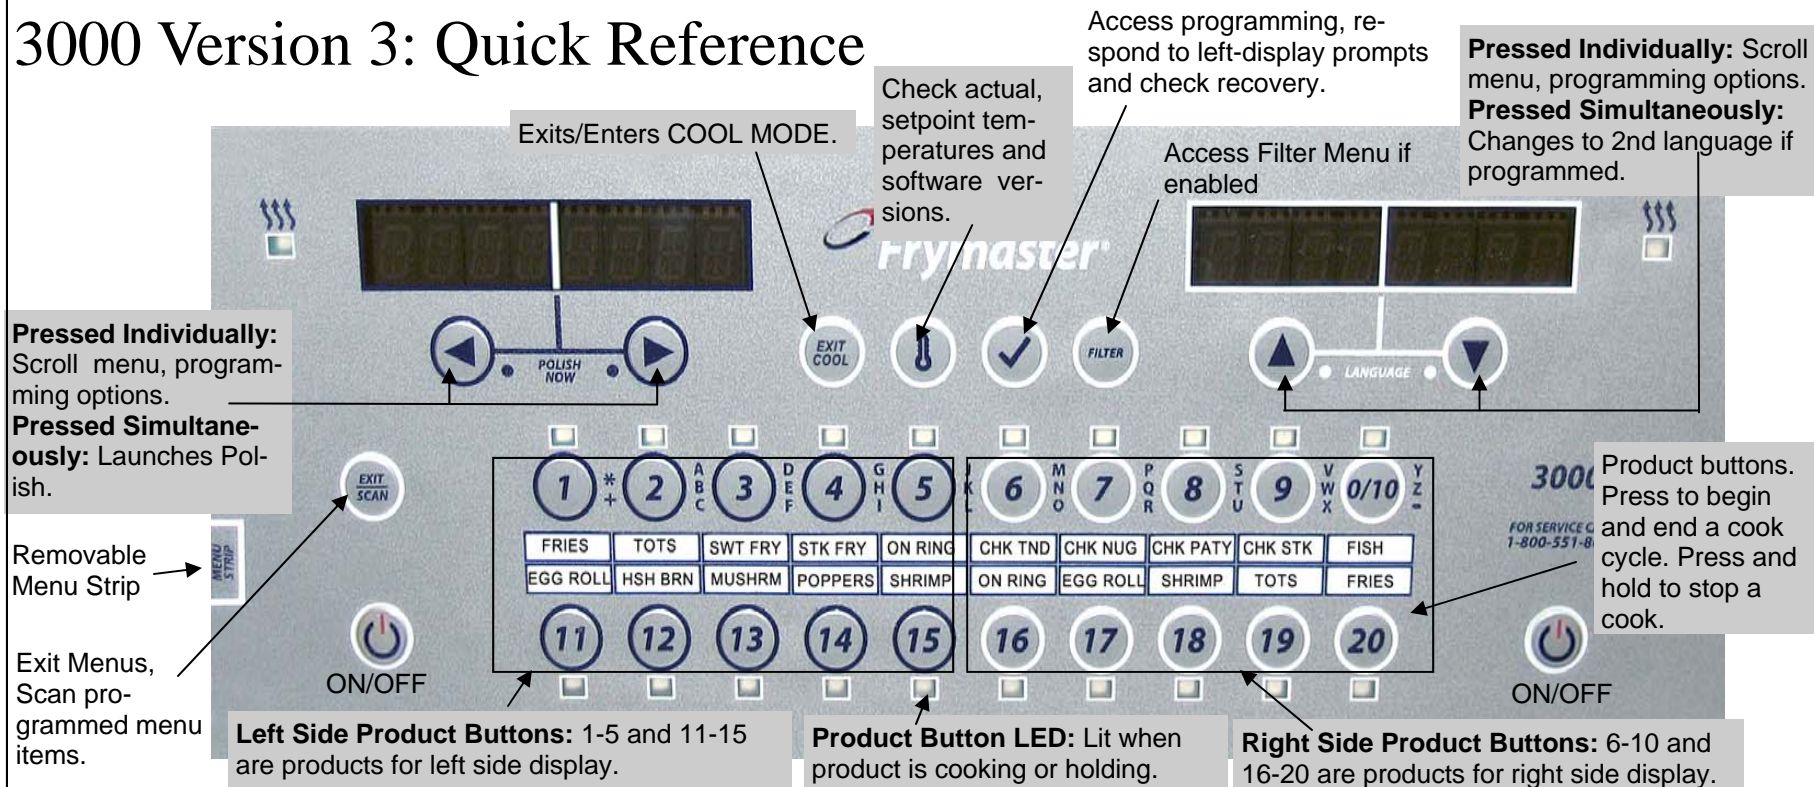

ON/OFF

- Press ON/OFF button. Fryer enters melt cycle before switching to full temperature and heating to setpoint.
- Exit melt cycle by pressing and releasing the Exit Cool button or any programmed product button. Displays show Exit Melt? on left and YES NO on the right. Press ▲ to exit.

Cooking

- **COOL displayed:** Press product button or Exit Cool button; fryer heats to setpoint and displays READY. Press product button and drop product.
- **----** displayed: The vat temperature is out of the READY zone.
- **READY displayed:** Press product button and drop product.
- **SHAKE displayed:** If shake is needed, alarm sounds.
- **DONE displayed:** Press product button to

cancel alarm.

- **HOLD displayed:** Press blinking product button to cancel hold alarm.
- **Cancel Cook Cycle:** Press and hold product button.

Controller Button Navigation

- **Product:** Press to start cook cycle. Press at end of cook cycle to stop alarm.
- **Exit/Scan:** Press once, all programmed product buttons are lit; Select Product displayed. Press product button to view product name. Press right arrow to view parameters. Press Exit/Scan again to repeat. Press Exit/Scan twice to escape.
- **Left/Right Arrows (◀▶):** Navigate options in left display. Press and hold simultaneously to launch Polish cycle.
- **Up/Down Arrows (▼▲):** Navigate options in right display. Press and hold simultaneously to change language if programmed.
- **Exit Cool:** Press to enter/exit Cool Mode.

- **Thermometer: Fryer ON:** Press and release for setpoint/left; vat temp/right.
- **Thermometer: Fryer OFF:** Press and release to display temperature, time, date, system version, 3000 version. Press and hold for AIF, ATO board versions.
- **Checkmark(✓): Fryer OFF:** Press and hold 3 seconds: Scroll filter usage; Press and hold 10 seconds: Main Menu-Product setup
- **Checkmark(✓): Fryer ON:** Press and release: Check recovery. Press and hold 4 seconds: Info Mode.
- ***Filter: Press and hold:** Filter options: *FILTER*, *CLEAN AND FILTER*, *DISPOSE*, and *BOIL OUT* (only with controller off).
- ***Filter: Press and release:** *COOKS REMAINING*.
(*NOTE: Functions only if enabled)

Common programming and navigation are shown below. The left and middle column show the computer displays; the right column has the action necessary to continue. Exit from a programming step at any time by pressing the Scan key until the display returns to its pre-programming status.

Programming For Single Setpoint Cooking*

Left Display	Right Display	Action
OFF	OFF	Press ✓ until Main Menu changing to Product Setup is displayed.
PRODUCT SETUP	Blank	Press ✓
PRODUCT SETUP	ENTER CODE	Enter 1650
SELECT PRODUCT	Blank	Press desired product button
LONG NAME	PRODUCT NAME or BUTTON NUMBER	Enter product name with letter keys. Press ►.
SHORT NAME	PRODUCT NAME or BUTTON NUMBER	Enter abbreviated product name with letter keys. Press ►.
1 TIME	0:00 or previously entered time	Enter time with numbered keys. Press ►. (Enter 0:00 here and press Exit/Scan to unassigned button.)
1 TEMPR	TEMP	Enter new temperature. Press ►.
1 SENSITIVITY	NUMBER	Set to desired position with ▼▲keys. Press ►.
1 ALARM TIME	0:00 or previously entered time	Enter time in cook cycle for audible alarm for shaking. Press ►.
1 ALARM NAME	SHAKE	Set to desired position with ▼▲ keys. Press ►.
1 ALARM MODE	AUTO OR MANUAL	Set to desired position with ▼▲keys. Press ►.
1 ALARM TONE	SHORT	Set to desired position with ▼▲keys. Press ►.
HOLD TIME	0	Enter time in minutes to hold product before discarding. Press ►.
EXIT	EXIT	Press Scan button to exit or the ✓ button for additional programming.
SELECT PRODUCT	Blank	More Programming? Press product button and follow instructions above Exit Programming? Press Scan Button.
PRODUCT SETUP	Blank	Press Scan
OFF	OFF	

* The 3000 Version 3 allows segmented cooking (the ability to set up to five different times and temperatures). When the Cooks feature is enabled, a different programming sequence is also enabled. The menu shown above is with this feature disabled.

Filter Menu Navigation* (if Filters enabled)

Left Display	Right Display	Action
COOL, READY	COOL, READY	Press and hold Filter button for 10 seconds
*FILTER	Blank	Press ► to scroll to choices: Filter, Clean and Filter, Dispose, Fill Vat from Bulk (Bulk only) Boil Out (only with fryer OFF) and Exit. With the desired choice displayed press ✓. *NOTE- Options only available if enabled.

* The Filter button is disabled as a factory default setting. When Filter is disabled, the Filter button has no function. Pressing it with the fryer ON or OFF will have no effect. See page 1-2 of the manual for an explanation of enabling 3000 Version 3 options.

Info Mode Navigation

Left Display	Right Display	Action
OFF or READY	OFF or READY	Press ✓ until INFO MODE is displayed and release.
LAST DISPOSE STATS	Blank	Press ► to scroll to choices: *LAST DISPOSE STATS, DAILY STATS, SELECTED PERIOD STATS, LAST LOAD STATS. With the desired choice displayed press ✓. *NOTE: With Filter option disabled, not all data in these features will be collected.

Vat Setup Navigation

Left Display	Right Display	Action
OFF	OFF	Start with the far Left controller. Press ✓ until INFO MODE is displayed, changing to MAIN and then PRODUCT SETUP.
PRODUCT SETUP	Blank	Press ► to scroll to VAT SETUP.
VAT SETUP	ENTER CODE	Enter 1656
SYSTEM*	Blank	Press ► to scroll to choices: TIME/DATE, DST SETUP, E-LOG, CHANGE PASSWORD. With the desired choice displayed, press ✓.

Note: System Cool Mode default settings and Filter setups are only available if enabled.