


WARING COMMERCIAL

2-Speed Heavy-Duty Blender

7011HB /Base Unit ONLY





7011HG /Glass Container

7011HS /Stainless Steel Container

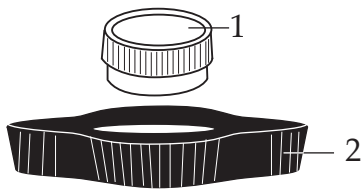

004315


2 Piece Lid
for Glass Container

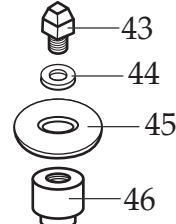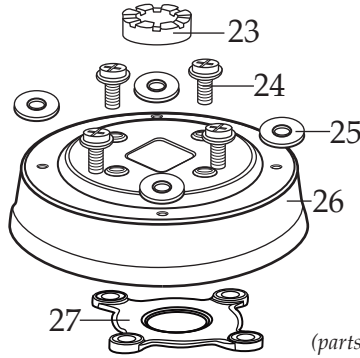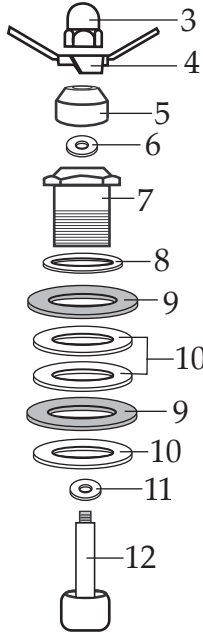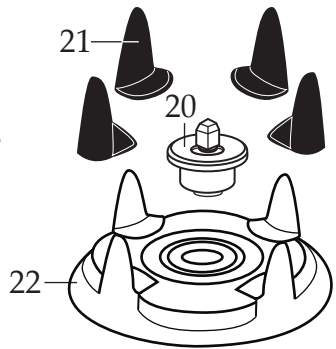

003559


Drive Coupling

(parts that can be purchased separately)

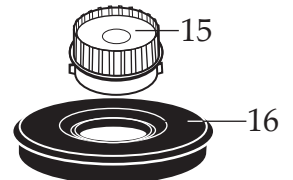

500665

2 Piece Lid
for Stainless Steel Container


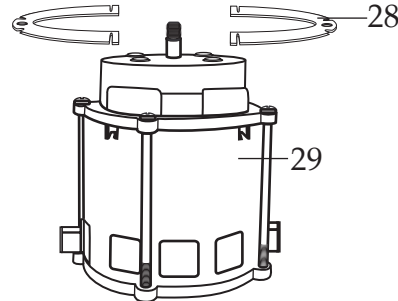


033194

Brush & Spring


(2 required)

(for 029321 motor)

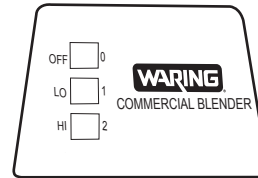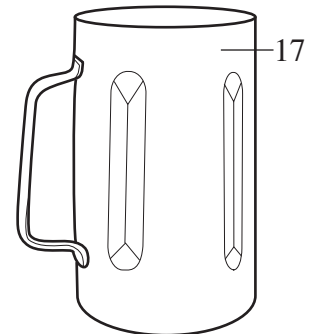


010163

Name Plate

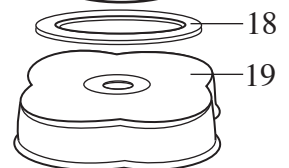

500758

Stainless Steel Container
with Blending Assembly

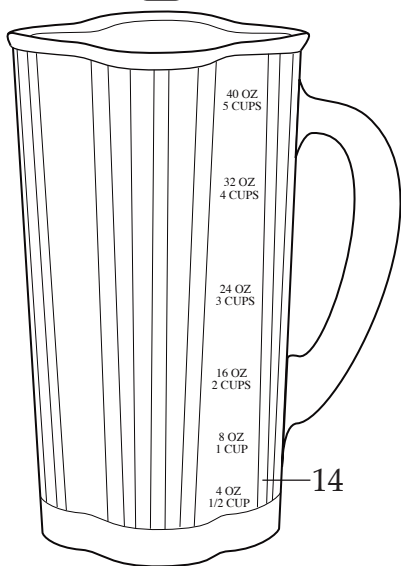


003548

Blending Assembly


500204

Glass Container with
Blending Assembly

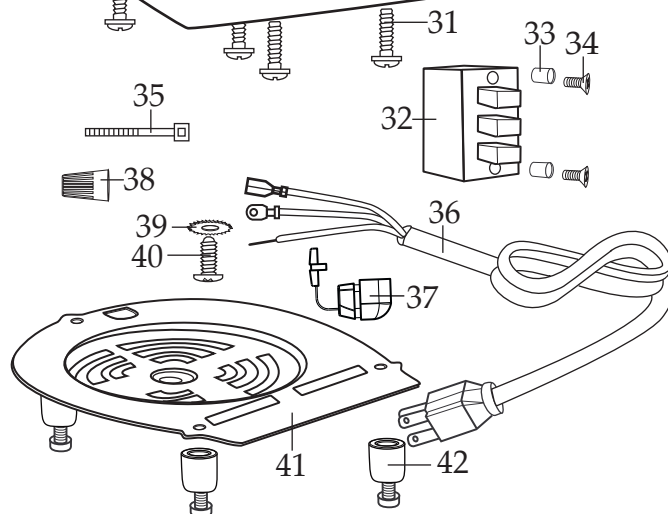

008065
Stainless Steel Container
with Blending Assembly and Lid

003548
Blending Assembly
(same as glass container)

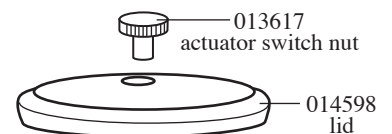

501017 (optional)

Stainless Steel Lid
for Stainless Steel Container

Catalog**Model**

7011HB	HGB2WTS3	
7011HG	HGB2WTG4	31BL41
7011HS	HGB2WTS3	(older units)

*current production
(units after 9/15/2006)*



Illustration #	Part #	Description
1	003146	Center Lid
2	003574-09	Vinyl Outer Lid
3	003504	Cap Nut
4	024204	Blade
5	003503	Bearing Cap
6	003508	Fairprene Washer
7	010012	Bearing Holder
8	009724	Nylon Washer
9	003537	Stainless Steel Washer (3 required)
10	003509	Neoprene Washer (4 required)
11	003510	Bakelite Washer
12	003500	Drive Shaft
13	009780	Hex Nut
14	003573	40 oz. Glass Container
15	011700	Center Lid
16	013443	Round Vinyl Outer Lid
17	012860	32 oz. Stainless Steel Container
18	009762	Gasket
19	015055	Container Adapter
20	003559	Drive Coupling
21	003498	Jar Pad (4 required)
22	018996	Jar Holder
23	018596	Housing Seal
24	003578	Sems (4 required)
25	003538	Washer (4 required)
26	017290	Plated Motor Bracket
27	025666	Motor Spacer Plate (units after 2000)
28	025663	Half Baffle (2 required)
	003513	Baffle (units before 2000)
29	029321	Motor
30	010416	Base
31	005240	Screw (4 required)

Catalog


Model

7011HB	HGB2WTS3	
7011HG	HGB2WTG4	31BL41
7011HS	HGB2WTS3	(older units)
	<i>current production</i>	
	<i>(units after 9/15/2006)</i>	


Waring Factory Service Center
 314 Ella T. Grasso Ave.
 Torrington, CT 06790
 Tele. 1-800-269-6640
 Fax 860-496-9017
 www.waringcommercialproducts.com

Illustration #	Part #	Description
32	016043	Switch
33	003580	Spacer (2 required)
34	007783	Screw (2 required)
35	013731	Cable Tie
36	501162	Cord Set
37	013680	Strain Relief
38	009051	Wire Nut
39	002943	Ground Washer <i>(units after 12/20/2002)</i>
40	013659	Ground Screw <i>(units after 12/20/2002)</i> <i>(before then gound was rivited to bottom plate)</i>
41	025667	Bottom Plate
42	503376	Foot & Screw Assembly (3 required <i>units after 6/28/2010</i>)
	002891	Foot (3 required)
43	003515	Square Drive Stud
44	003507	Washer
45	003514	Slinger
46	003558	Rubber Coupling

Parts No Longer Used

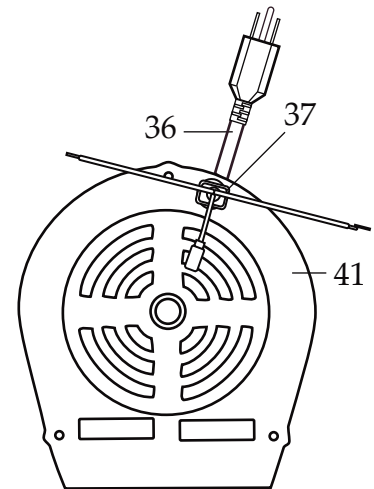

502761
Bottom Plate Assembly

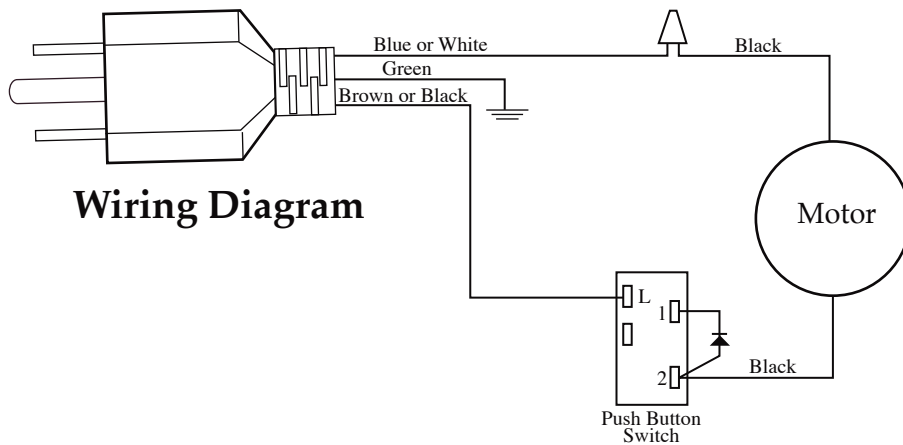

Wiring Diagram