

# New control operation manual

To adjust the temperature of each individual bowl, lift up the plastic cover on left side of the unit. Bowl 1 is on the left hand side of the unit when looking from the front.

1. Turn on the main switch on the right hand of the unit. The main power light (A) will now indicate on the digital control.

2. To set the temperature of bowl no.1 press the button marked ① twice. The indicator lamp under bowl ① at the top of the display will now illuminate and the current set temperature will flash. Adjust the arrow keys to set the desired temperature and then press “set”. The temperature range may be set between 32°F and 50°F.

The control temperature for bowl 1 is now set.

Repeat the process using the buttons marked ② and ③ to set the temperature of the remaining bowls.

3. When in operation the unit will automatically display the actual temperature of each bowl for 2 seconds as indicated by the lamp beneath the bowl symbols.

4. The motor and stirrer for each bowl can be operated independently using the relevant switch on the right hand side of the unit.

5. To switch off the cooling to a selected bowl, press the relevant bowl number on the control panel for 3 seconds. The letters “OFF” will display for the bowl number selected. To turn on the cooling press and hold for 3 seconds.

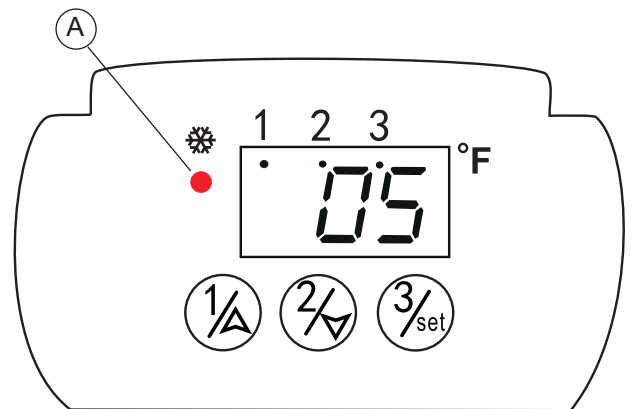
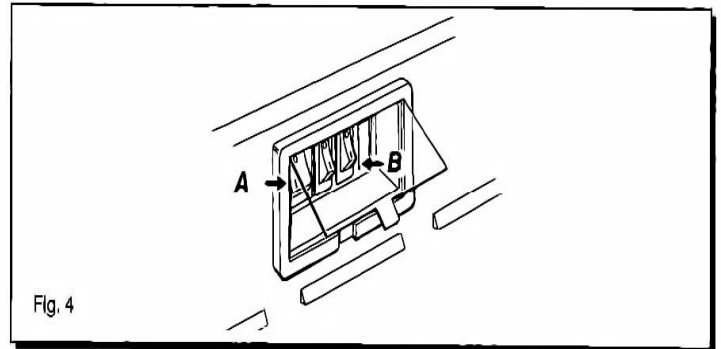


Fig. 5