

# Slanted Shelf / Suture Cart / Merchandising Cart

## ASSEMBLY INSTRUCTIONS

### CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE.  
**SAVE YOUR BOX AND ALL PACKING MATERIALS.**  
YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

### Parts List

#### 4-Shelf Unit:

(4) Posts  
(4) Wire Shelves  
(2) 3-Sided Trusses  
(6) Rails  
(4) Casters  
(16) Split Sleeves

#### 5-Shelf Unit:

(4) Posts  
(5) Wire Shelves  
(2) 3-Sided Trusses  
(8) Rails  
(4) Casters  
(20) Split Sleeves

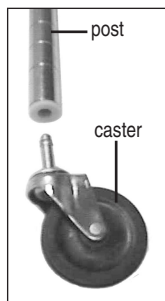


figure 1

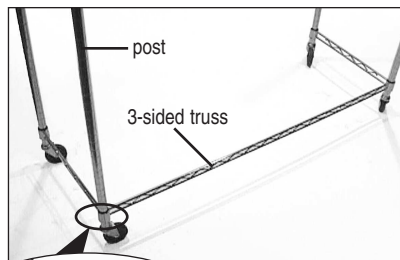


figure 2

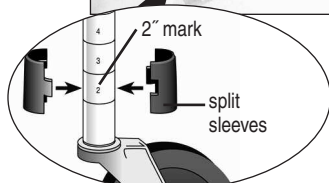


figure 2a

### 1 Caster

Insert caster into bottom of each post as shown in *figure 1*.

### 2 3-Sided Truss

**A** Posts are numbered in 1" increments. Snap split sleeves onto each post at the 2" mark as shown in *figure 2a*. The thicker part of the taper goes toward the bottom. Make sure rib in split sleeve is seated into groove on post.

**B** Insert post through the collars of the 3-sided truss, and slide the truss down to the split sleeves. The wider part of the collar goes toward the bottom.

Note: Long truss of bottom 3-sided truss indicates the front of the unit.

### 3 Rails

**A** Assemble one rail at a time. Refer to *figure 3* for location of split sleeves and rails. Snap split sleeves onto number on each post (2 sets of split sleeves per rail).

**B** Insert post through the rail collars and slide rail down to split sleeves. Make sure the wider part of the collar goes toward the bottom.

**C** Repeat Steps 3a and 3b to assemble all rails. Refer to *figure 3* for location of split sleeves and rails.

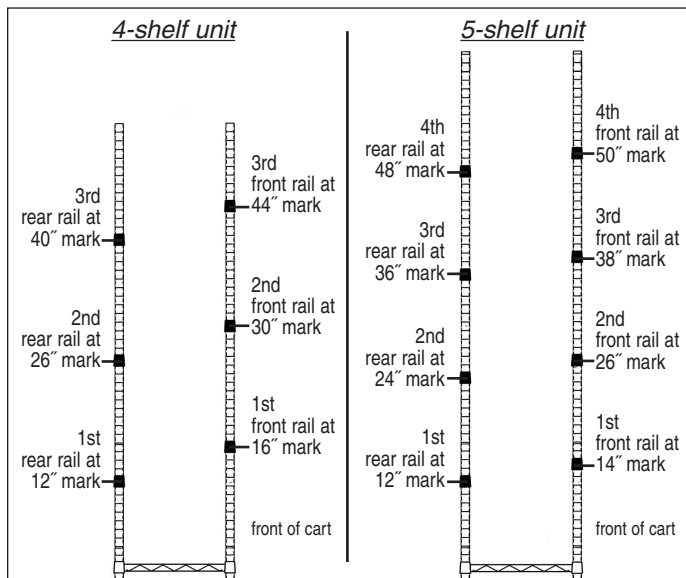


figure 3

(continued on back page)

EG9802 Revised 11/07

# Slanted Shelf / Suture Cart / Merchandising Cart

## ASSEMBLY INSTRUCTIONS

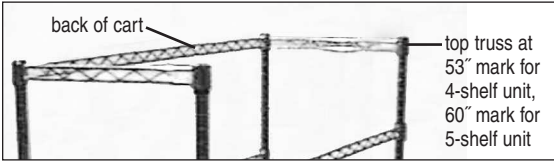


figure 4

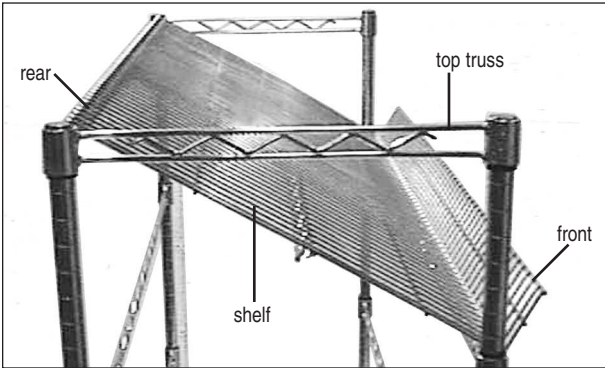


figure 5

### 4 Top Truss

- A Snap split sleeves onto each post, as shown in *figure 4* for location of split sleeves and top 3-sided truss.
- B Position top truss OPPOSITE of bottom truss.
- C Insert posts through truss collars and slide truss down to split sleeves. The wider part of the collar goes toward the bottom.

### 5 Shelves

- Note: Large upturn on shelf is located on the front of the unit.
- A Start with the bottom shelf. Hook shelf downturn over 1st rear rail (located at the 12" mark on post as shown in *figure 3*).
  - B Rest front of shelf on front of bottom truss. Shelf should be approximately at a 30° angle as shown in *figure 5*.
  - C Repeat Steps 5a and 5b to assemble all remaining shelves.
- Note:** Downturn of topmost shelf should hook over top truss, as shown in *figure 5*.

## Optional Dividers

- 1 To assemble the dividers, locate the two bottom tabs as shown in *figure 6*. Place divider on shelf with front tab of divider pointing toward the front upturn of shelf.
- 2 Pull divider toward the front of the shelf. Both bottom tabs should catch the wire shelf as shown in *figure 7*.
- 3 Clip the front tab over the wire shelf as shown in *figure 8*.

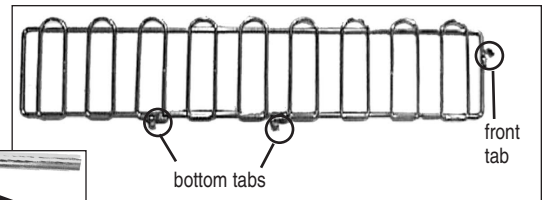


figure 6

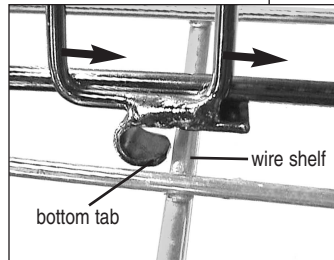


figure 7


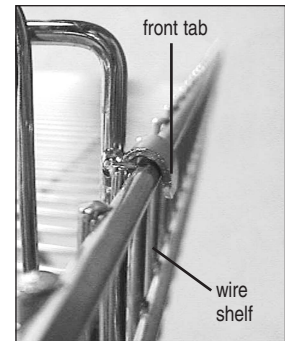


figure 8

Divider assembly is complete.

Attach as many dividers as desired to finish suture cart assembly (see photo at right).

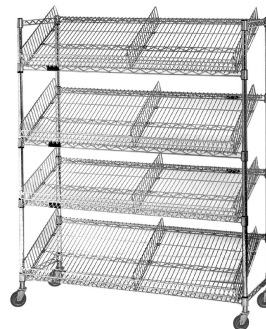

suture cart with optional dividers

**(End)**