


Rev	Description	By	Date	ECR
A	Release	AEP	8/11/2014	5210

Wall mounting instruction sheet

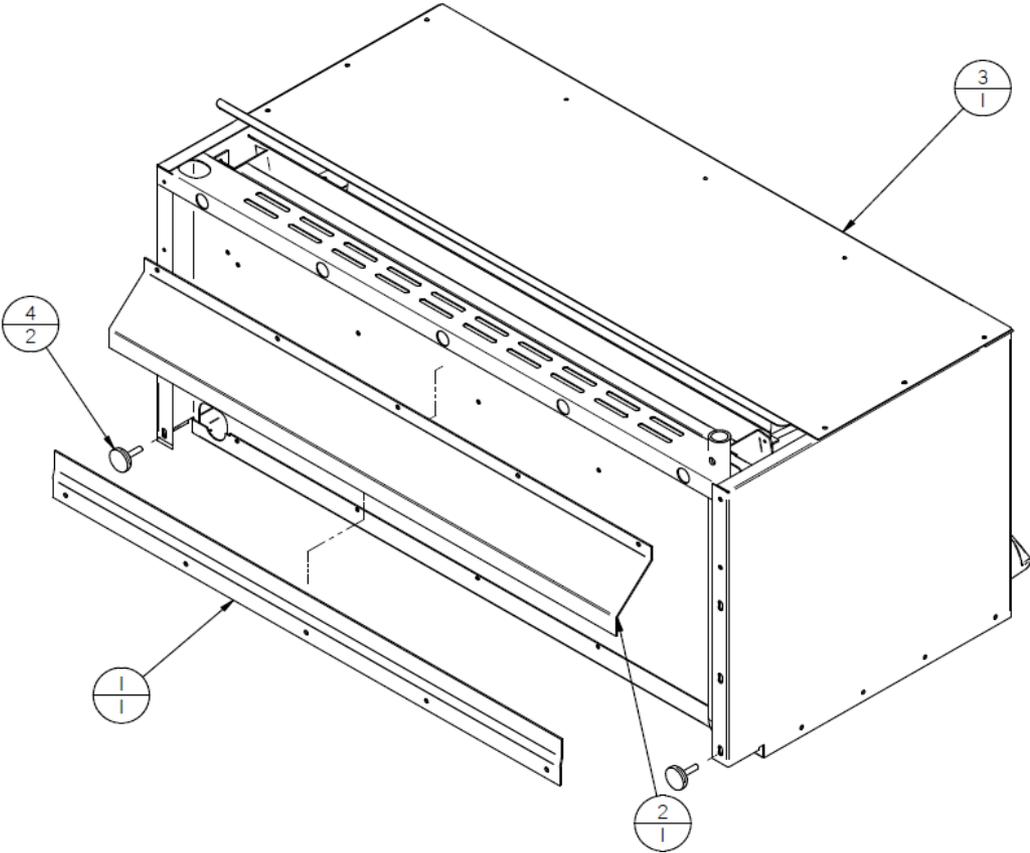

Mounting instructions

1. Remove screws in the back part of the salamander (balloon 3).
2. Place mounting bracket (balloon 2).
3. Place screws.
4. Place leveling mounts (balloon 4) into Salamander / Cheesemelter.
5. Place wall bracket (balloon 1) in the wall were you want the Salamander / Cheesemelter. (proper anchoring needed, at least 50 lbs support per anchor)
6. Place Salamander / Cheesemelter into wall bracket
7. Adjust leveling mounting, unit must be level in all 3 axis.

*Balloon reference in next page