




**14" Impulse Sealers**  
*Models SE-CN-0358, 0361*  
*Items 14432, 14433*  
**Instruction Manual**



*Revised - 01/23/2018*

---

Toll Free: 1-800-465-0234  
Fax: 905-607-0234  
Email: [service@omcan.com](mailto:service@omcan.com)  
[www.omcan.com](http://www.omcan.com)

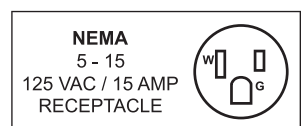

# ***Table of Contents***

Model SE-CN-0358 / Model SE-CN-0361

---

<b>Section</b>	<b>Page</b>
General Information -----	3 - 4
Safety and Warranty -----	4 - 5
Technical Specifications -----	5
Operation -----	6
Maintenance -----	6 - 7
Troubleshooting -----	7 - 8
Parts Breakdown -----	9 - 10
Electrical Schematics -----	11
Notes -----	12 - 14
Warranty Registration -----	15



# General Information

---

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

## CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

**Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.**

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

---

Omcan Fabrication et distribution Compañie Limité et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité approprié. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

## VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bond de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueilli par un tiers transporteur.

# General Information

---

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

---

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

## REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre leer y familiarizarse con todas las instrucciones de operación y seguridad.

Omcan quisiera darles las gracias por la compra de esta máquina. Es de la máxima importancia para guardar estas instrucciones para referencias en el futuro. También guarde la caja original y el embalaje para envío del equipo si el mantenimiento o la devolución de la máquina es necesaria.

# Safety and Warranty

---

- This machine should only be installed and operated by trained personnel. Do not change the electrical wiring of the machine.
- Read all instructions carefully and do not operate the machine until the operator has fully read this manual.
- Do not use the machine without the personal safety equipment.
- Keep hands, long hair, foreign objects, clothes and jewelry away from any moving parts.
- Do not leave the machine unattended while the unit is on or in operation.
- Always turn off and unplug the unit before performing any maintenance.



# Safety and Warranty

## 1 YEAR PARTS AND LABOR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see [www.omcan.com/warranty.html](http://www.omcan.com/warranty.html) for complete info.

### WARNING:

The packaging components (cardboard, polyethylene, and others) are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

**DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!**

## Technical Specifications

Model	SE-CN-0358	SE-CN-0361
Description	14" seal bar, 2mm seal width	14" seal bar, 5mm seal width
Electrical	110V/60/1	
Weight	42 lbs. / 19.1 kgs.	
Packaging Weight	48.5 lbs. / 22 kgs.	
Dimensions	20.8" x 16.5" x 33.5" / 527 x 419 x 851mm	
Packaging Dimensions	21.5" x 31" x 10" / 546 x 787 x 254mm	
Item Number	14432	14433

# Operation

---



Fig. 1 - Diagram of the control panel for the impulse sealer

## ADJUSTMENT AND USAGE OF IMPULSE SEALER

Connect to 110V power source according to the indication label on the machine. Switch on the power, the red light will turn on. Adjust the sealing time according to the materials and the thickness of the bags to be sealed. The sealing time should be adjusted to around grade 1 before sealing. Put the opening of the bag between the heat sealers, step down on the pedal and the yellow lamp lights. Take out the sealed bag after the yellow lamp is off. If the seal is not tight enough, lengthen the sealing time. Try sealing the bag several times until it is sealed well with clearness and no wrinkles. Seal the bag at this measured time and temperature. The cooling time should not be too short, otherwise wrinkles will be the result. The longer the sealing time, the longer the cooling time.

## Maintenance

---

Never try to seal without bags. Don't set the sealing time to the high grade without trial of the sealing bag. Otherwise, the polymer cloth will be burned. If some plastics adheres to the polymer cloth, never try to scrape it off. Slightly reduce the sealing time and seal the bag again. Release the pedal after the yellow lamp is off. It is very important to remove the bag from one side to the other. The remains of the plastics will be cleared from the polymer cloth with the bag.

### REPLACEMENT OF THE HEATER

Turn off sealer and unplug from the wall. Loosen the screws of the plate pressing the polymer cloth, roll back the cloth to expose the heater. Loosen the Bakelite boxes at both sides of the heater and take out the screws on the copper block. The heater can now be removed. Replace it with a new one. The heater should always be in tension with the function of the spring. The copper block should be replaced if it is oxidized, to ensure it has a good connection with the heater. Pay close attention when fixing the heater so that the polymer cloth below is flat (no wrinkles are allowed). The heater must have a excellent isolation. Otherwise the heater will be

# Maintenance

damaged because of the short-circuiting.

## REPLACEMENT OF THE POLYMER CLOTH

Turn off sealer and unplug from the wall. Remove the screws and the plates above the polymer cloth, loosen the shaft of the polymer cloth roll, pull out the cloth and cut out the burned part. Reassemble the plates and screws, tighten the roll shaft. No wrinkles are allowed in the polymer cloth, otherwise the seal quality will be affected.

## REPLACEMENT OF THE MICRO-SWITCH

Turn off sealer and unplug from the wall. There is one micro-switch at the side of the machine head. It must be replaced when it is damaged. The adjustment of the pressing pole for micro-switch are as follows:

- Put 1mm thick carton between the upper and lower and lower pressing arms, check if the micro-switch is pressed and if there is a “click” from the switch.
- If it is not pressed, adjust down the pressing pole or tighten the nut until the switch is pressed 1-2mm down when it works.
- Always keep the sealing surface clean. Otherwise, the remains in the sealing surface will shorten the life of the heater and the life of the polymer cloth.
- When working, never try to clean the sealing surface with wet cloth.
- After long time usage, the rubber in the upper pressing arm must be checked if it is still flat and straight. Otherwise, the seal quality will be affected.
- Often add lubricating oil into the moving parts.
- All parts in the machine should not be disassembled regularly.

# Troubleshooting

Problem	Causes and Solution
The seal is not good.	Lengthen the sealing time if it is not tight enough. Shorten the sealing time if the seal is melted or if the melted seal is creased by not being pressed tightly.
The seal is wrinkled.	<ol style="list-style-type: none"> <li>1. The problem may be overheating. In this case, shorten the sealing time.</li> <li>2. The problem may be insufficient time for cooling. In this case, lengthen the cooling time.</li> </ol>
The temperature rises when working for some time.	It is normal that the temperature of the machine rises because the unit absorbs heat during operation. Shorten the sealing time slightly to balance the heat.
The power lamp does not light and the sealer does not work.	Check if the power switch is on and if the fuse is damaged.

# Troubleshooting

---

The power lamp lights but the sealing lamp is off and the sealer does not work.	Step down on the pedal to check if the micro-switch works. Adjust if necessary (see "REPLACEMENT OF MICRO-SWITCH).
The sealer is always electrified when the power is switched on.	Switch the power off at once. Check the status of the micro-switch. Adjust if necessary (see "REPLACEMENT OF MICRO-SWITCH).

## REFERENCE


Item Number	Model Number	Description	Manufacturer Model Number
14432	SE-CN-0358	Sealer Impulse Foot Operated 14" / 356mm Seal Bar 2mm Seal Width 110V/60/1	F3502
14433	SE-CN-0361	Sealer Impulse Foot Operated 14" / 356mm Seal Bar 5mm Seal Width 110V/60/1	F3505



# Parts Breakdown

Model SE-CN-0358 14432

Model SE-CN-0361 14433

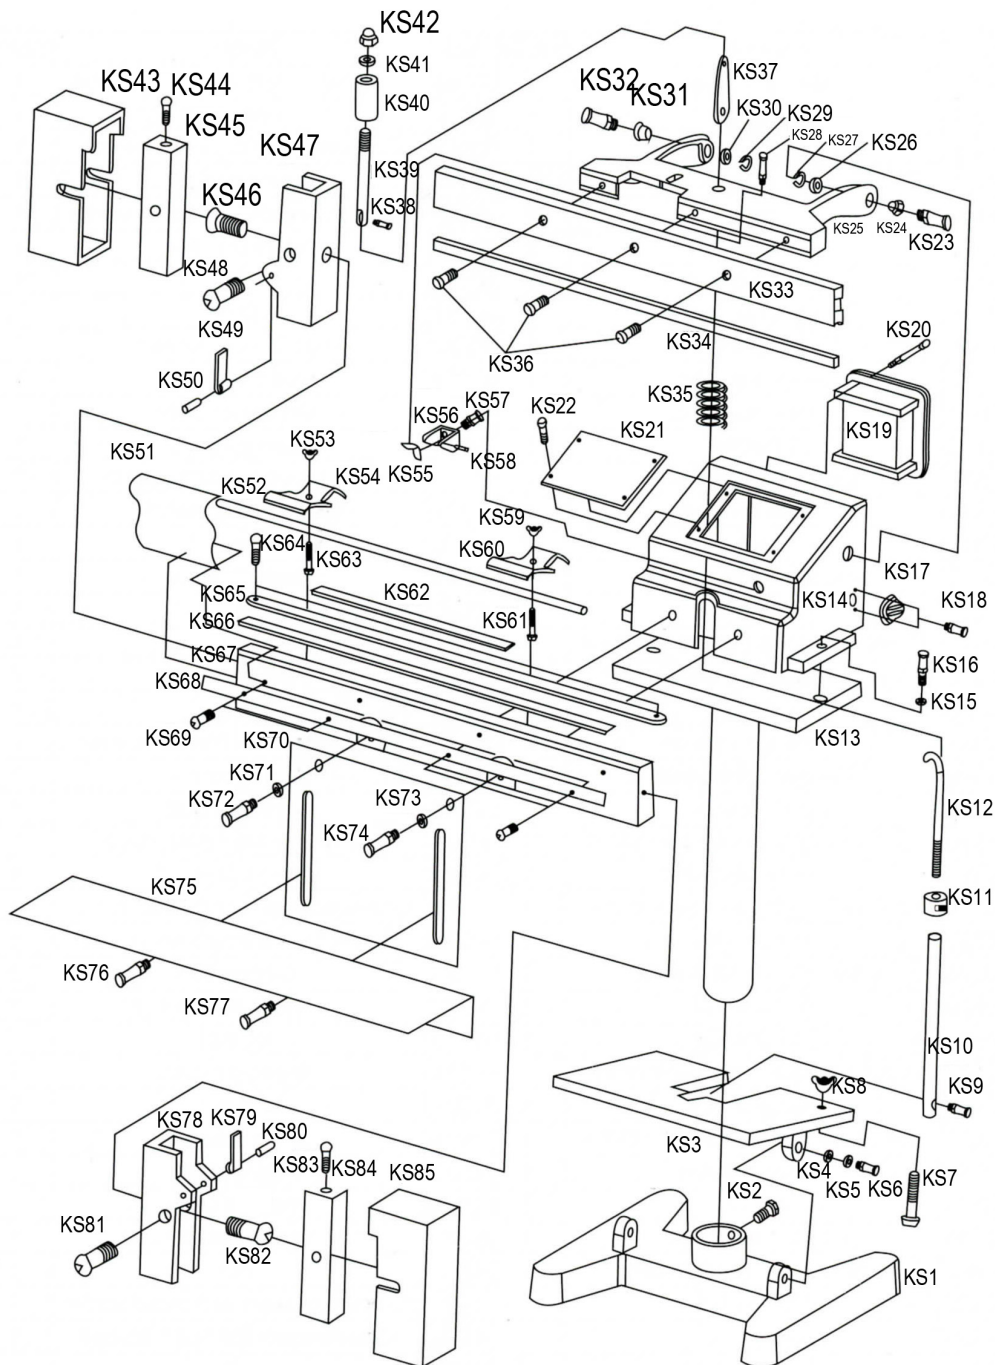

# Parts Breakdown

**Model SE-CN-0358** 14432


**Model SE-CN-0361** 14433

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
75287	Machine Base for F3502 & F3505	1	75316	Flat Washer- KS30 for F3502 & F3505	30	75345	Butterfly Nuts-KS59 for F3502 & F3505	59
75288	Bolt-KS2 for F3502 & F3505	2	75317	Tetrafluorohydrazine Convention-KS31 for F3502 & F3505	31	75346	Pressor for F3502 & F3505	60
75289	Pedal Board for F3502 & F3505	3	75318	Bolt Groups-KS32 for F3502 & F3505	32	75347	Bolt-KS61 for F3502 & F3505	61
75290	Flat Washer-KS4 for F3502 & F3505	4	75319	Upper Sealing Silicon Fasten Block for F3502 & F3505	33	75348	Insulated Pad-KS62 for F3502 & F3505	62
75291	Nut-KS5 for F3502 & F3505	5	75320	Silicon Rubbers for F3502 & F3505	34	75349	Bolt-KS63 for F3502 & F3505	63
75292	Bolt-KS6 for F3502 & F3505	6	75321	Spring for F3502 & F3505	35	75350	Countersink Flat Head Screws-KS64 for F3502 & F3505	64
75293	Adjusting Bolt for F3502 & F3505	7	75322	Inner Hex Screw and Nut-KS36 for F3502 & F3505	36	75351	Heater for F3502 & F3505	65
75294	Butterfly Nut-KS8 for F3502 & F3505	8	75323	Small Connecting Board for F3502 & F3505	37	75352	Insulated Pad-KS66 for F3502 & F3505	66
75295	Bolt Groups-KS9 for F3502 & F3505	9	75324	Flexible Pin for F3502 & F3505	38	75353	Lower Sealing Fasten Base for F3502 & F3505	67
75296	Pedal Board Tie for F3502 & F3505	10	75325	Tie for F3502 & F3505	39	75354	Polymer Pressor for F3502 & F3505	68
75297	Connecting Nut for F3502 & F3505	11	75326	Rubber Cushion for F3502 & F3505	40	75355	Cross Recessed Pan Head Screw-KS69 for F3502 & F3505	69
75298	Coupler Tie for F3502 & F3505	12	75327	Washer for F3502 & F3505	41	75356	Fasten Board of Working Table for F3502 & F3505	70
75299	Upright Column Base for F3502 & F3505	13	75328	Cap Nuts for F3502 & F3505	42	75357	Flat Cushion for F3502 & F3505	71
75300	Machine Cover for F3502 & F3505	14	75329	Plastic Cover-KS43 for F3502 & F3505	43	75358	Bolts Groups-KS72 for F3502 & F3505	72
75301	Nut-KS15 for F3502 & F3505	15	75330	Cross Recessed Pan Head Screw-KS44 for F3502 & F3505	44	75359	Flat Mat-KS73 for F3502 & F3505	73
75302	Screw and Flat Gasket- KS16 for F3502 & F3505	16	75331	Copper Pole for F3502 & F3505	45	75360	Bolts Groups-KS74 for F3502 & F3505	74
75303	Wire Guider for F3502 & F3505	17	75332	Countersink Flat Head Screws-KS46 for F3502 & F3505	46	75361	Flat Mat-KS75 for F3502 & F3505	75
75304	Cross Recessed Pan Head Screw-KS18 for F3502 & F3505	18	75333	Ceramic Base-KS47 for F3502 & F3505	47	75362	Bolt Groups-KS76 for F3502 & F3505	76
75305	Transformers and Back Cover for F3502 & F3505	19	75334	Crossed Recessed Pan Screw Head for F3502 & F3505	48	75363	Bolt Groups-KS77 for F3502 & F3505	77
75306	Bolt-KS20 for F3502 & F3505	20	75335	Metal Pressor-KS49 for F3502 & F3505	49	75364	Ceramic Base-KS78 for F3502 & F3505	78
75307	Operation Panel for F3502 & F3505	21	75336	Pin-KS50 for F3502 & F3505	50	75365	Metal Pressor-KS79 for F3502 & F3505	79
75308	Countersink Screw for F3502 & F3505	22	75337	Polymer for F3502 & F3505	51	75366	Pin-KS80 for F3502 & F3505	80
75309	Bolt Groups-KS23 for F3502 & F3505	23	75338	Axles for Polymer for F3502 & F3505	52	75367	Cross Recessed Pan Head Screw-KS81 for F3502 & F3505	81
75310	Tetrafluorohydrazine Convention-KS24 for F3502 & F3505	24	75339	Butterfly Nut-KS53 for F3502 & F3505	53	75368	Countersink Flat Head Screws-KS82 for F3502 & F3505	82
75311	Upper Sealing Shelf for F3502 & F3505	25	75340	Hold-Down Plate for F3502 & F3505	54	75369	Pin-KS83 for F3502 & F3505	83
75312	Tetrafluorohydrazine Convention-KS26 for F3502 & F3505	26	75341	Touching Board for F3502 & F3505	55	75370	Corn Column for F3502 & F3505	84
75313	Flexible Mat-KS27 for F3502 & F3505	27	75342	Switch Shelf for F3502 & F3505	56	75371	Plastic Cover-KS85 for F3502 & F3505	85
75314	Inner Hex Screw and Nut-KSS28 for F3502 & F3505	28	75343	Switch for F3502 & F3505	57			
75315	Flexible Mat-KS29 for F3502 & F3505	29	75344	Pin-KS58 for F3502 & F3505	58			

# Electrical Schematics

**Model SE-CN-0358** 14432

**Model SE-CN-0361** 14433

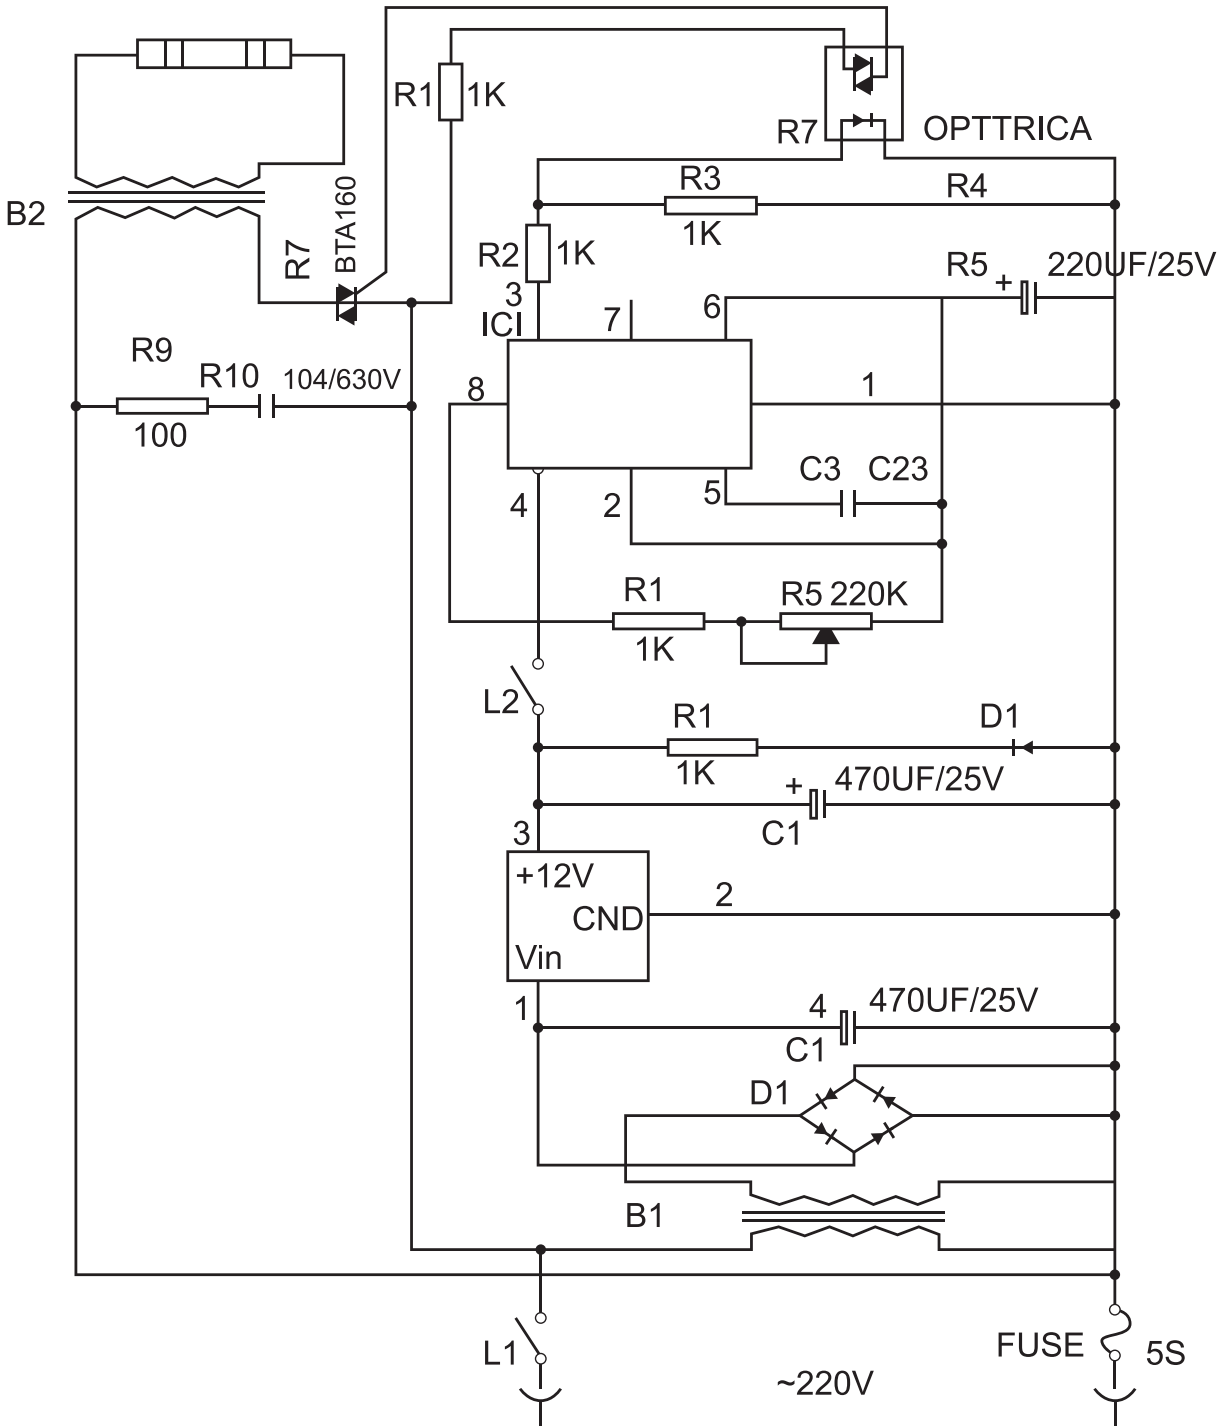









# Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

[www.omcan.com/warrantyregistration.html](http://www.omcan.com/warrantyregistration.html)

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

**OMCAN**

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,

Mississauga, Ontario

Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

**OMCAN**

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,

Niagara Falls, New York

USA, 14305

*or email to: [service@omcan.com](mailto:service@omcan.com)*



Purchaser's Information

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ Province or State: \_\_\_\_\_ Postal or Zip: \_\_\_\_\_

Country: \_\_\_\_\_

Dealer from which Purchased: \_\_\_\_\_

Dealer City: \_\_\_\_\_ Dealer Province or State: \_\_\_\_\_

Invoice: \_\_\_\_\_

Model Name: \_\_\_\_\_ Model Number: \_\_\_\_\_

Machine Description: \_\_\_\_\_

Date of Purchase (MM/DD/YYYY): \_\_\_\_\_

Would you like to extend the warranty?  Yes  No

Company Name: \_\_\_\_\_

Telephone: \_\_\_\_\_

Email Address: \_\_\_\_\_

Type of Company:

Restaurant  Bakery  Deli

Butcher  Supermarket  Caterer

Institution (specify): \_\_\_\_\_

Other (specify): \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date of Installation (MM/DD/YYYY): \_\_\_\_\_

**Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan**



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 3,500 globally sourced products.

---

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 3500 produits provenant du monde entier.

---

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 3,500 productos con origen a nivel mundial.

