



STAINLESS STEEL Drop-In Water Stations With Iced Bin and Filler Faucet



D-24-WSIBL
21" x 18"



D-24-WSIBL2
18" x 21"

Item #: _____ Qty #: _____
 Model #: _____
 Project #: _____



FEATURES:

- 12" deep insulated ice bin.
- Removable grate covers drip pan.
- Rubber thermal breaker to reduce condensation.
- Supplied with stainless steel sliding cover.

MECHANICAL:

- 1" IPS drain (drip pan and ice bin)
- Filler faucet has a cold connection with 1/2" IPS
- Faucet meets federal lead free standards.**

MATERIAL:


- Jacket:** 20 gauge galvanized steel
- Ice Bin:** 20 gauge, 300 stainless steel
- Cover:** 20 gauge stainless steel (D-24-WSIBL and D-24-WSIBL2 only)
- Molding:** Extruded black polyethylene thermal breaker marine edge
- Insulation:** 2lbs. density foam-in-place insulation
- K-54 Faucet:** Acrylic lever arm

OPTIONAL:

- D-12:** Replacement sliding stainless steel cover



Units Include K-54
Filler Faucet

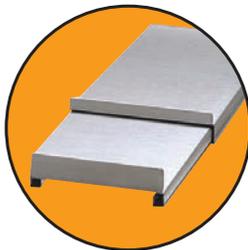

Units Include Sliding
Stainless Steel Cover

Conforms To NSF 61/9 Lead Free Requirements

CA Prop 65 WARNING: This product may contain a chemical known to the state of California to cause cancer, birth defects or other reproductive harm.

Model #	Description	Outside Dimensions	Cut-Out Size	Ice Capacity	Approx. Weight	Approx. Cu. Ft.
D-24-WSIBL	Water Station w/ Ice Bin	21" x 18"	20 5/8" x 15 1/4"	23 lbs.	30 lbs.	5
D-24-WSIBL2	Water Station w/ Ice Bin	18" x 21"	15 1/4" x 20 5/8"	50 lbs.	47 lbs.	5

WARNING: Equipment that include faucets on this page may contain a chemical known to the State of California to cause cancer, birth defects or other reproductive harm.



Customer Service Available To Assist You 1-800-645-3166 8:30 am - 8:00 pm E.S.T.

For Orders & Customer Service:
 Email: customer@advancetabco.com or Fax: 631-242-6900


For Smart Fabrication™ Quotes:
 Email: smartfab@advancetabco.com or Fax: 631-586-2933

DIMENSIONS and SPECIFICATIONS


TOL Overall: ± .500" Interior: ± .250"

ALL DIMENSIONS ARE TYPICAL


D-24-WSIBL

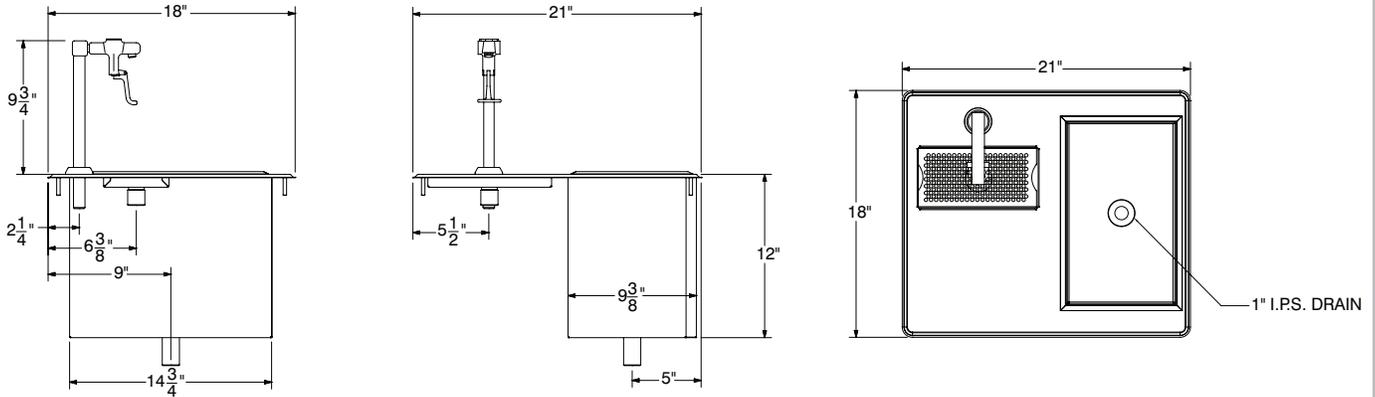

D-24-WSIBL2

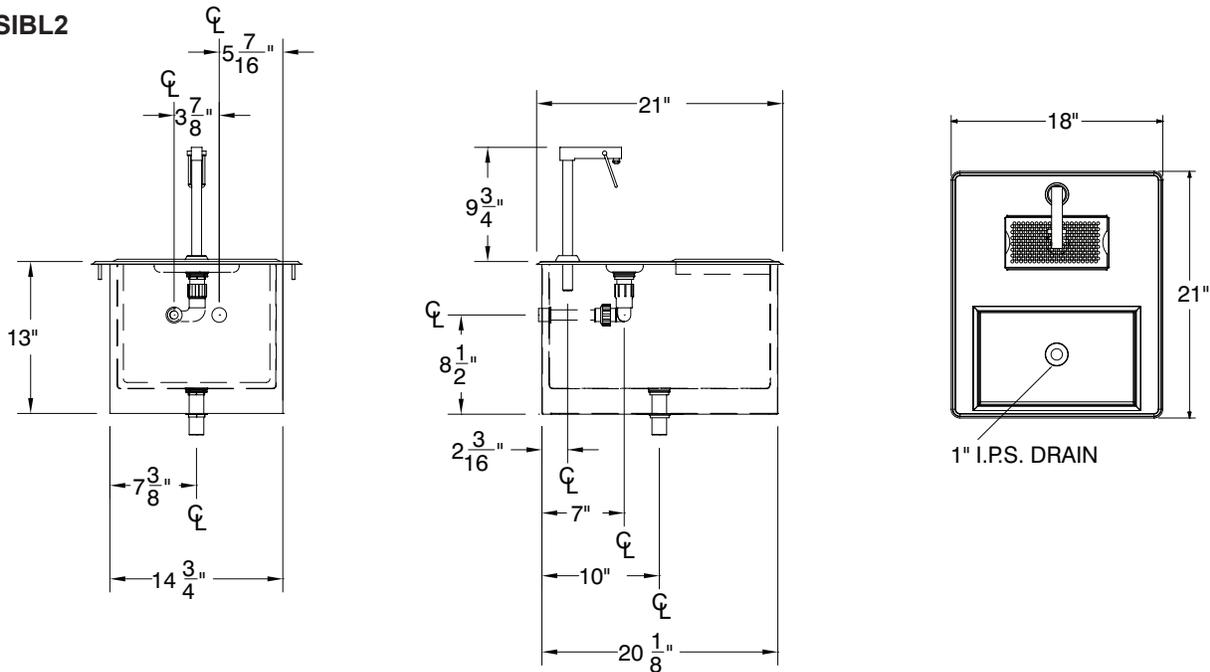

NOTE ON INSTALLING D-24-WSIBL2

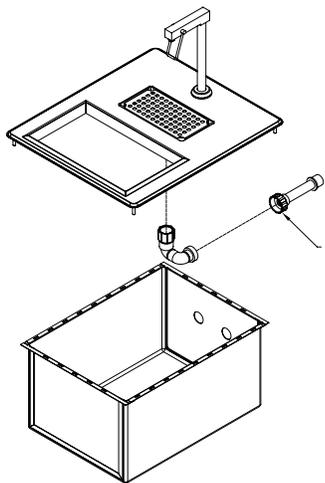

To install D-24-WSIBL2 unit into mounting surface, please loosen coupling and remove this section.

After unit has been placed into the mounting surface, re-attach this section and continue plumbing as normal.



ADVANCE TABCO is constantly engaged in a program of improving our products. Therefore, we reserve the right to change specifications without prior notice.