
# **ELECTRICAL**

MODEL	VOLTS	WATTS	AMPS PER LINE 3 PHASE			AMPS SINGLE	FIELD WIRING GAUGE		TEMP.
			L1	L2	L3	PHASE	3 PHASE	1 PHASE	RATING
HT-500AF	208	4500	13.0	18.7	8.7	21.7	10 AWB Cu	8 AWB Cu	90°C
HT-500AF	240	6000	15.0	21.7	10.0	25.0	10 AWB Cu	8 AWB Cu	90°C

**INCHES** (MM)

UNITS ARE SHIPPED THREE PHASE AND ARE FIELD CONVERTIBLE TO SINGLE PHASE

# **CUTOUT DETAILS**

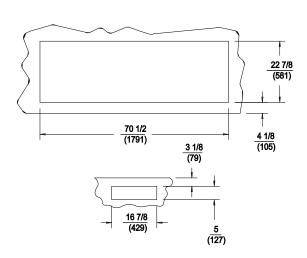

# INSTALLATION INSTRUCTIONS

### INSTALLER MUST MEET CONDITIONS OF ACCEPTABILITY OUTLINED BELOW UPON INSTALLATION:

1. Required installation clearances:
Wooden and Metal Installation: DO NOT install closer than
4 1/8 inches to front wall, 1 inch to back and side walls,
and 6 3/4 inches to surface below the unit.
2. Unit shall be accessible for servicing from the bottom.
3. If storage is to be used underneath the unit, it is
recommended that a baffle be placed 8 1/2 inches below
the unit to avoid contact with elevated temperatures.
4. For water and waste connections: This appliance is to be
installed to comply with the applicable federal, state or
local plumbing codes.

# TO FABRICATE:

1. Lay out "cutout" dimensions on countertop and front

2. Lay out and fabricate control panel holes in counter apron using the control box as a template.
3. Cut out holes.

TO INSTALL:
IMPORTANT - DO NOT disconnect lead wires from the
Master Control Panel when making installation.
1. Tilt and pass Control Panel and electrical box through
the countertop cutout, then through the apron cutout.
Lower modular section into countertop cutout and


position.
RECOMMENDATION: Before final seating of modular section to countertop, apply a bead of silicone adhesive/sealant to the underside of gasket supplied on the mounting

Vellsiock frame and twist ears outward (clockwise) as required to secure flange tightly to countertop.

3. Mount Control Box to apron cutout as shown in drawing.


4. Mount Control Panel onto electrical box using the screws supplied.

# PRODUCT DIMENSIONS

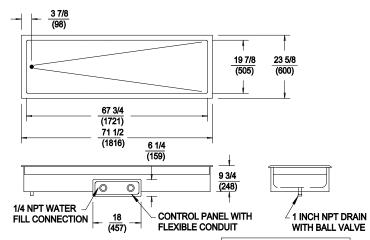

### **CLEARANCES**

MINIMUM CLEARANCE REQUIRED FROM UNIT TO THE NEAREST SURFACE							
BACK	SIDE	воттом	FRONT				
1	1	6 3/4	4 1/8				
(25)	(25)	(171)	(105)				

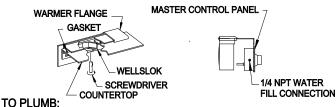

1. A drain with valve is supplied on all units. Location of the valve handle is at the discretion of the fabricator (see drawing).

2. Connect 1" drain connection to a suitable drain line.

3. Connect 1/4 NPT flexible water fill line to solenoid valve in outlet box, maximum pressure 120 PSI, maximum temperature 120°F.

Final connection is accomplished by bringing proper power supply leads (see 'WIRING REQUIREMENTS label) through conduit knockout to terminal block supplied within the Master Control Panel. Check nameplates for voltage and phase.

### NOTES:

BAIN MARIE STYLE HEATED TANKS ARE DESIGNED FOR WET OPERATION ONLY.

A BACK FLOW PREVENTER IS INCORPORATED IN THE WATER FILL LINE BETWEEN SOLENOID VALVE AND PAN. LOCAL CODES MAY REQUIRE AN ADDITIONAL VACUUM BREAK DEVICE, NOT PROVIDED BY WELLS.

INSTALLATION MUST MEED LOCAL PLUMBING AND ELECTRICAL CODES.