

ADJUSTMENT INSTRUCTIONS

For Models

V5210, V5211, V5212, V5213, V5214

Refer to pictures at right before starting.

WEIGHT ADJUSTMENT

Dish diameter and weight determine how many springs should support your dishes. To insure smooth operation, use an equal number of springs on both sides of the dispenser. Always unhook lower end of springs only. Leave unused springs hang for future use.


Use the following chart as a guide to determine approximately how many springs to use.

Dish Size	Springs Required
9¾" to 10½" Long	6 to 10
10¾" to 11½" Long	8 to 14
11¾" to 12½" Long	10 to 15
12¾" to 13½" Long	12 to 16
13¾" to 14½" Long	14 to 18

- Place ten dishes into the unit directly on top cap.
- If the dishes are above the top of the dish guides, one or more of the springs must be unhooked. Remove the dishes, lift the dispenser mechanism (with springs) out of the cabinet high enough for access to the bottom of the springs, or lift the dispenser out and place on floor.
- Unhook one or more springs from the bottom. Leave the spring hang for future use. Replace the ten dishes. Repeat this operation if the dishes are still too high. Place dispenser back into cabinet.
- If the dish height is too low, remove all the dishes. Lift the dispenser out of the cabinet high enough for access to the bottom of the springs. Hook one or more loose springs into position. Replace the dishes. Repeat this operation if the dish height is still too low.
- Repeat the above operations with more and with less dishes.

CLEANING OF UNIT

- Lift self-leveling mechanism from square tube and clean as desired.
- Wash inside and outside of cabinet with a mild soap and water. Dry thoroughly.

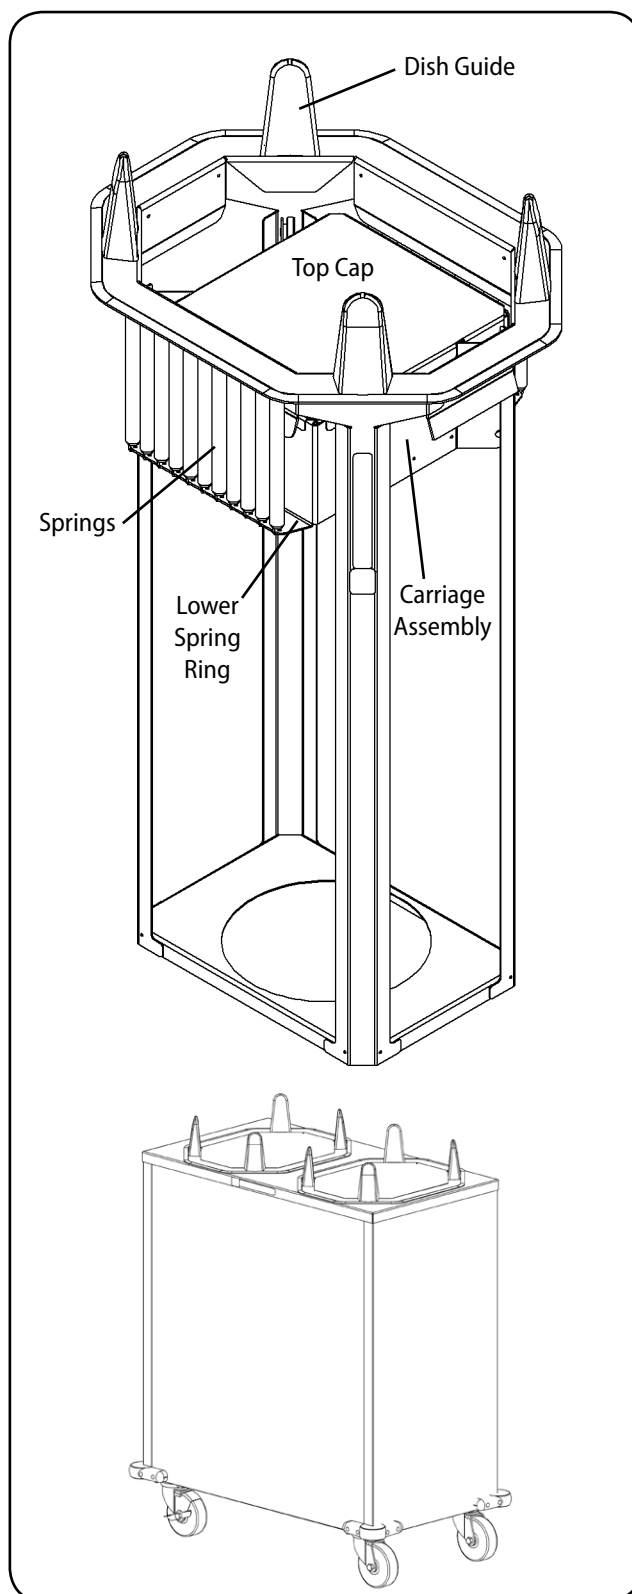

For more information, call Lakeside Customer Service at 800.558.8565

Email: info@eLakeside.com • www.eLakeside.com